







# ID3PR/FL KammBar

## Instructions


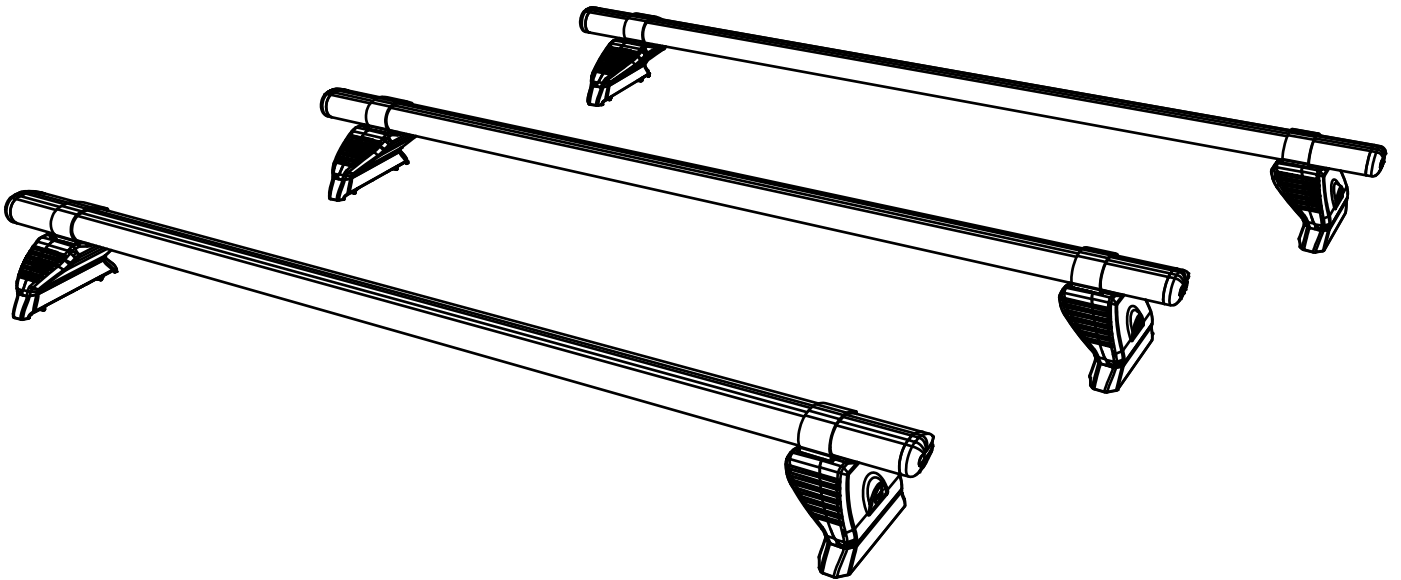


**CITY CRASH** (✓)



According to ISO/ PAS 11154:2006

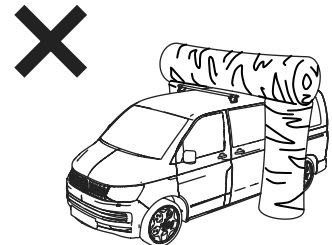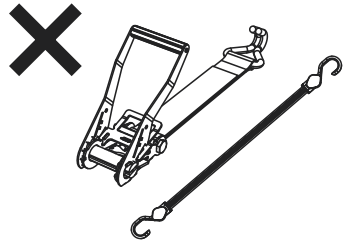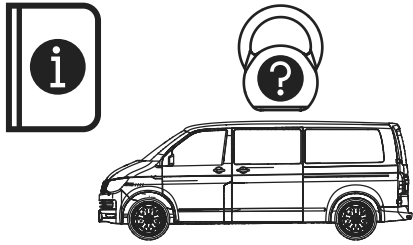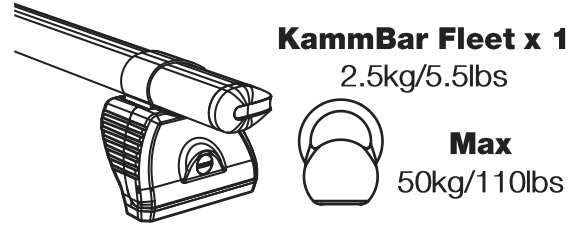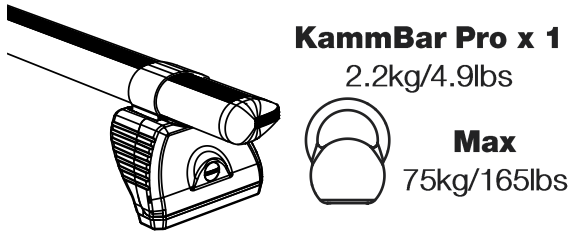





### KammBar Pro

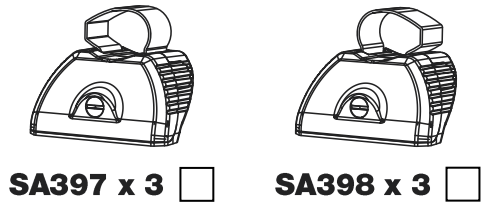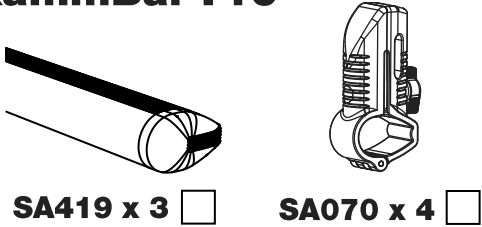


### KammBar Fleet

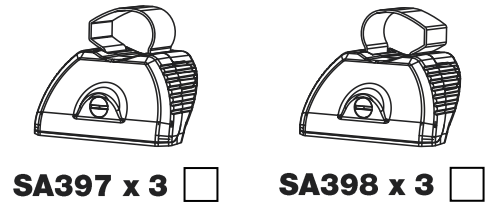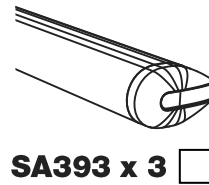


### Fitting Kit

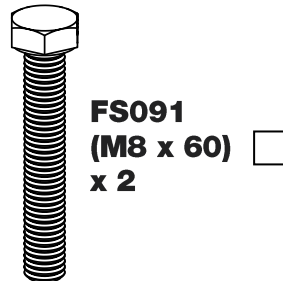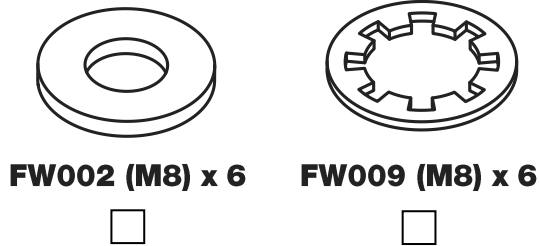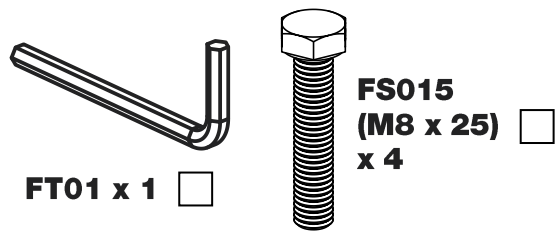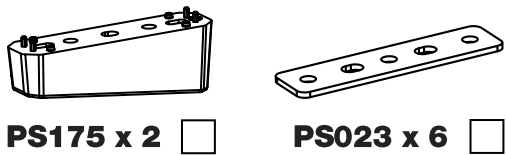


1.

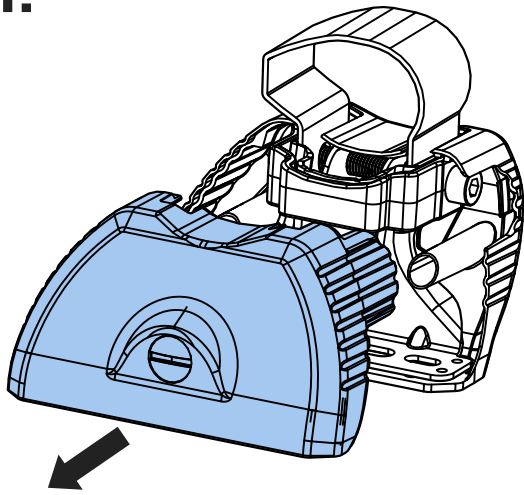

2.

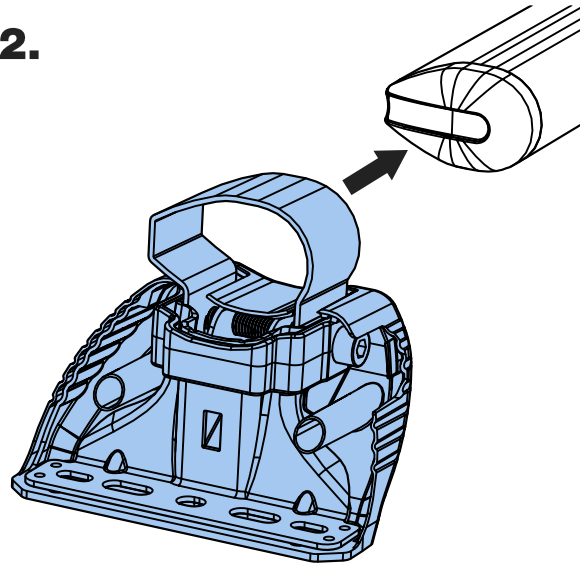

3.




SA397  
PS175




SA397




SA397

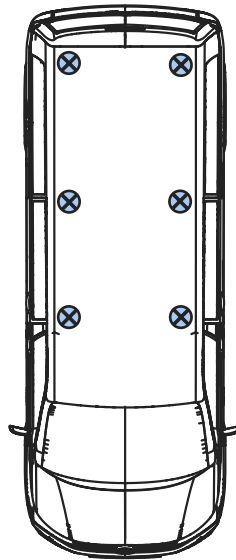


SA398  
PS175




SA398




SA398




4.

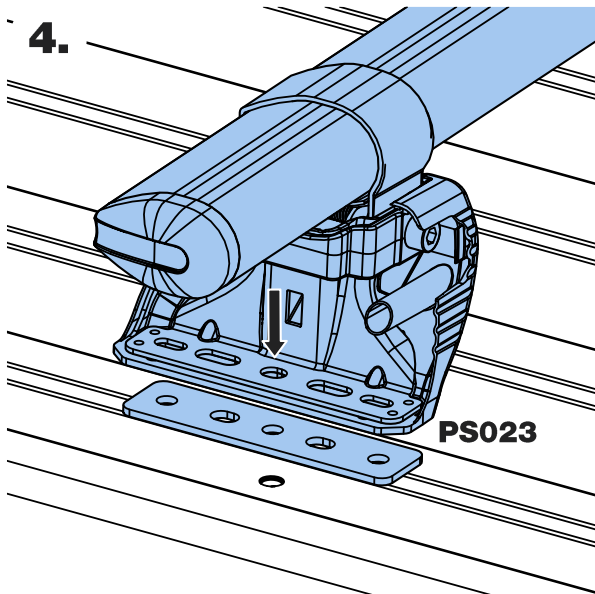


5.

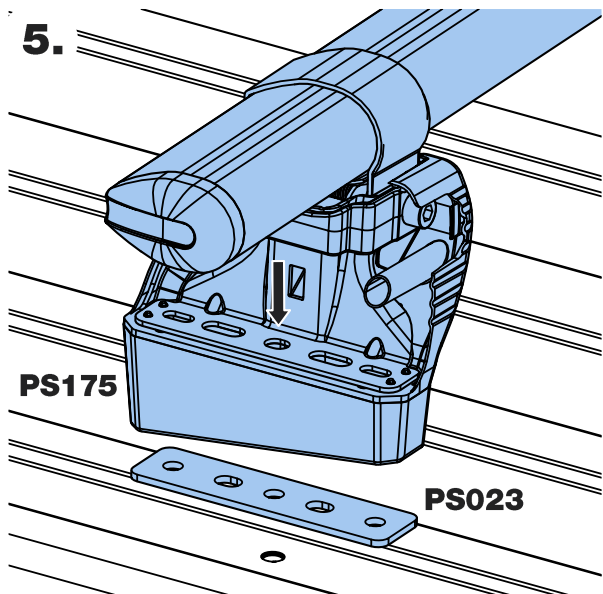


6.

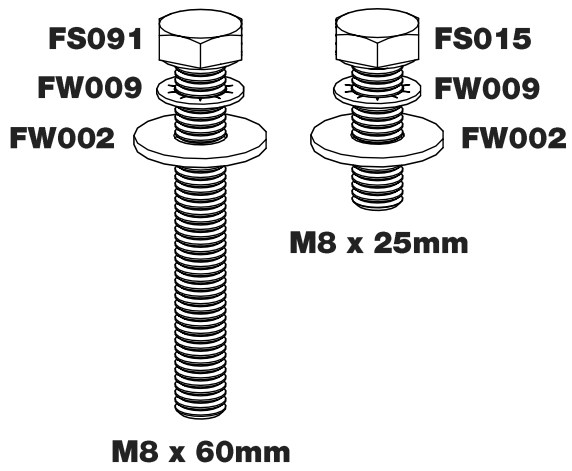


7.

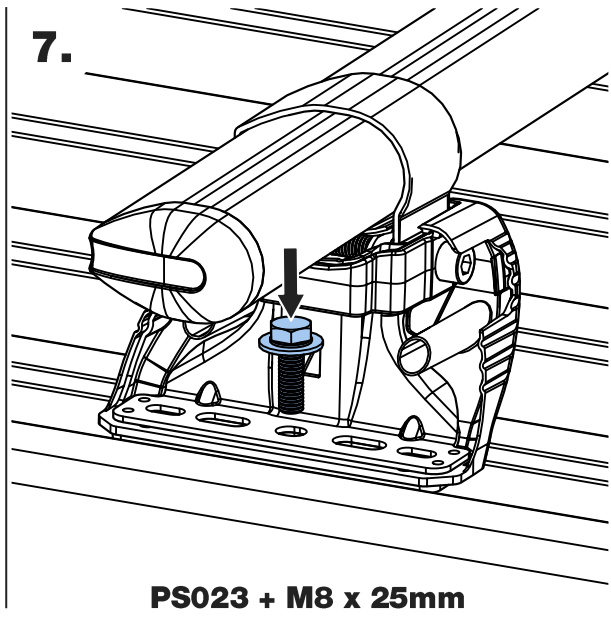


8.

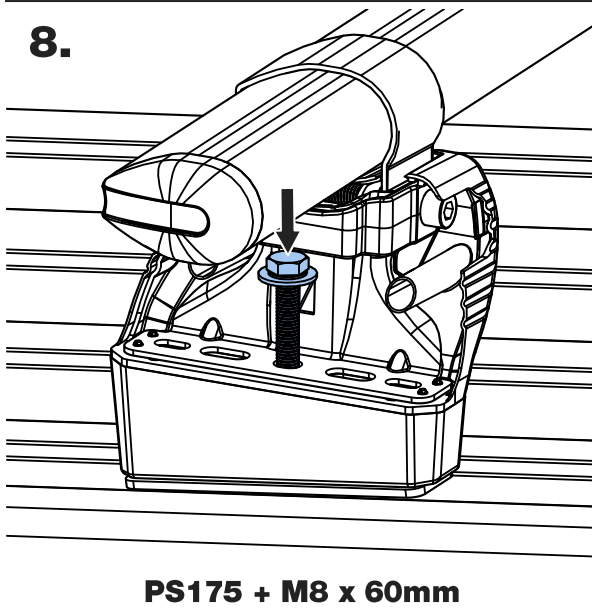


9.

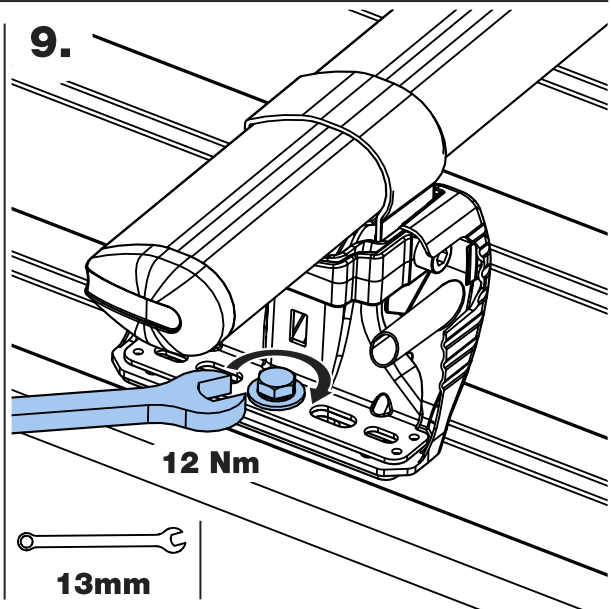


10.

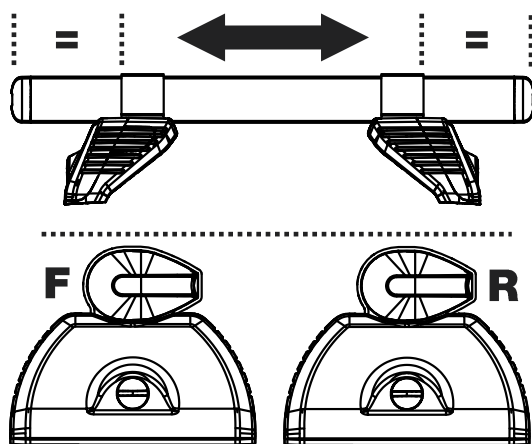

11.

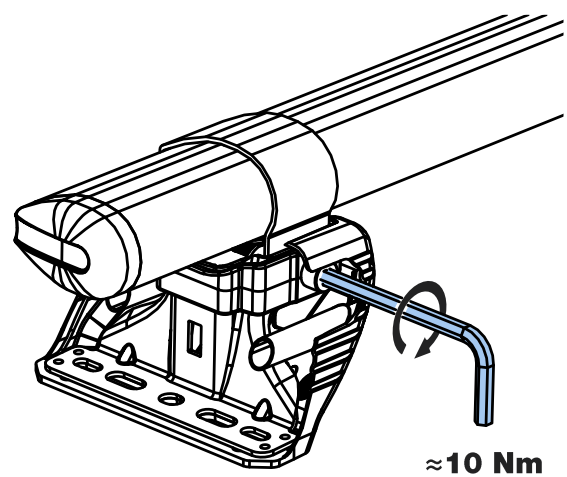

**12.**

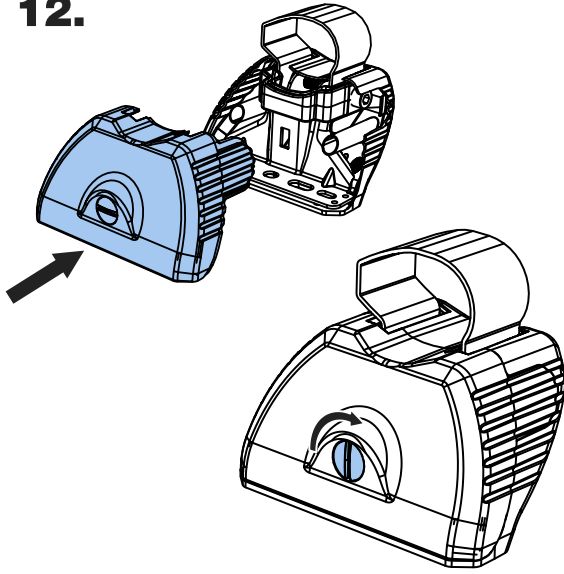

**13.**

