

Art. **N30162**

**KIT x4**

**VOLKSWAGEN  
CADDY LIFE (no railing)**

2000  
01/04→08/15

**VOLKSWAGEN  
CADDY (no railing)**


2000  
03/04→08/15

**VOLKSWAGEN  
CADDY (no railing)**


2000  
09/15→



L = 2682mm




L = 3006mm

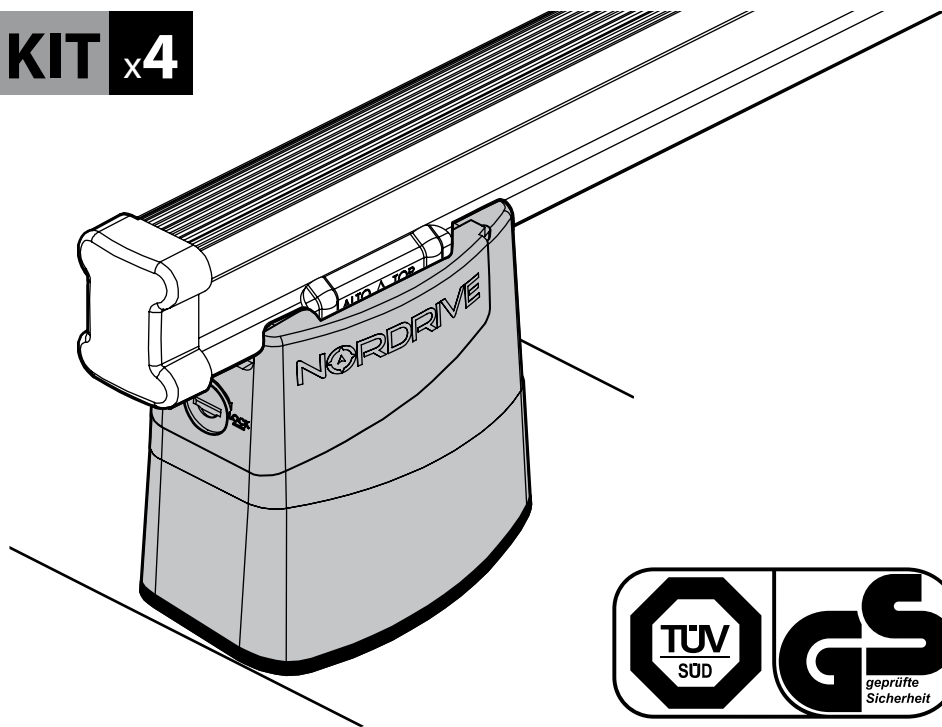


- ⓘ ADATTO PER
- Ⓒ SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA

**NORDRIVE  
KARGO SERIES**

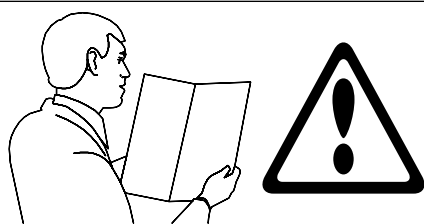

- ⓘ ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓗ MONTAGE-INSTRUCTIES
- Ⓘ MONTERINGSANVISNING
- Ⓙ ASENNUSOHJE
- Ⓚ PAIGALDUSJUHEND
- Ⓛ STIPRINĀŠANAS INSTRUKCIJA
- Ⓜ PRITVIRTINIMO INSTRUKCIJOS
- Ⓝ INSTRUKCJA MONTAŻU
- Ⓟ Инструкции по установке
- Ⓠ NÁVOD NA MONTÁŽ
- Ⓡ NÁVOD NA MONTÁŽ
- Ⓢ NAVODILA ZA PRITRJEVANJE
- Ⓣ UPUTA ZA SASTAVLJANJE
- Ⓤ A FELSZERELÉS MÓDJA
- Ⓟ Οδηγίες συναρμολόγησης
- Ⓡ MONTAJ TALIMATLARL
- Ⓢ ИНСТРУКЦИИ ЗА МОНТАЖ
- Ⓣ UPUTSTVA ZA MONTAŽU

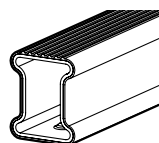


**Kargo**  
ACCIAIO  
Steel

- ⓘ BARRE KARGO
- Ⓒ KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO

135cm

Art. **N10005** x2

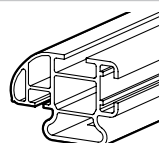


**Kargo-Plus**  
ALLUMINIO  
Aluminium


- ⓘ BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS

135cm

Art. **N10035** x2

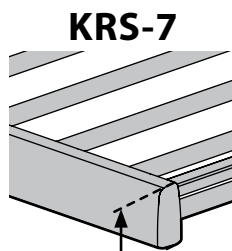

7cm

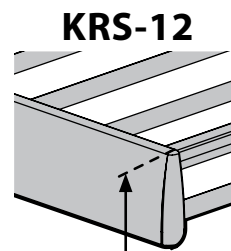


12cm

- ⓘ CESTE PORTATUTTO KRS-7 / KRS-12
- Ⓒ KRS-7 / KRS-12 VAN ROOF RACKS
- Ⓕ GALERIE KRS-7 / KRS-12
- Ⓓ DACHKÖRBEIN KRS-7 / KRS-12
- Ⓔ BACAS KRS-7 / KRS-12

**NORDRIVE**<sup>®</sup>










TRANSPORT SOLUTIONS

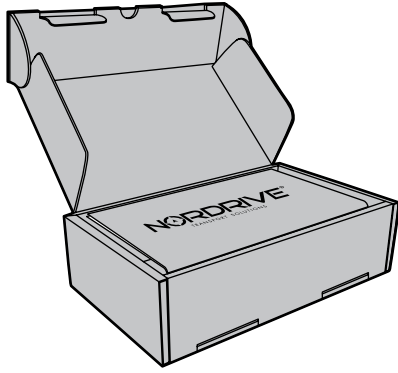


# NORDRIVE<sup>®</sup>

TRANSPORT SOLUTIONS

Art. **N30162**

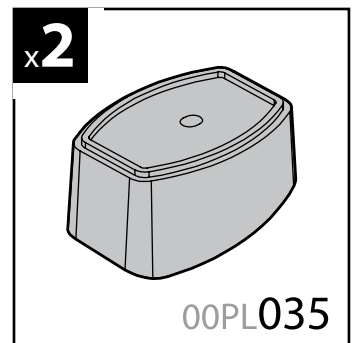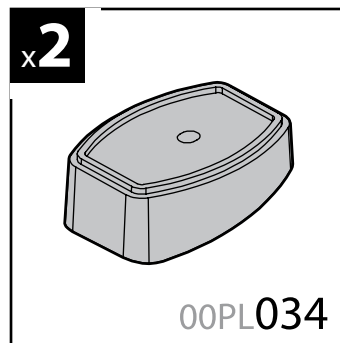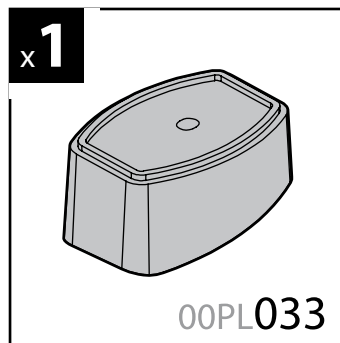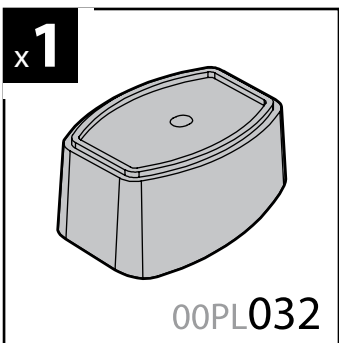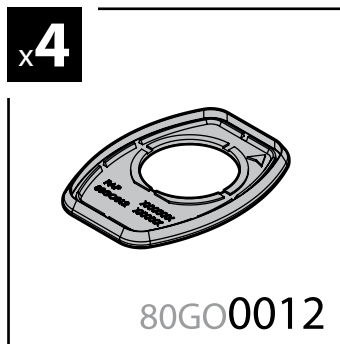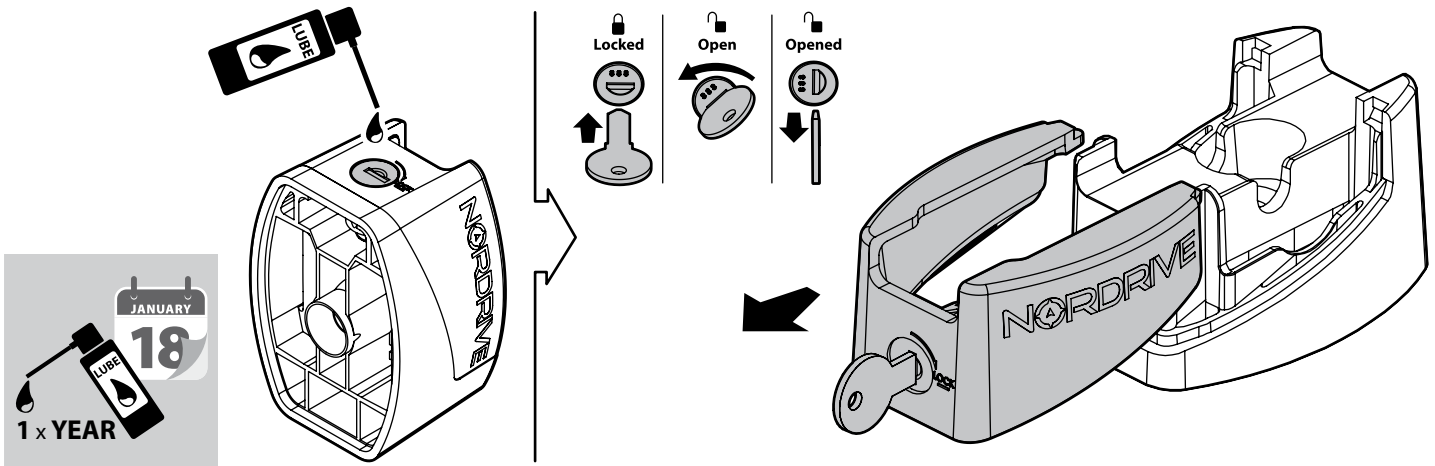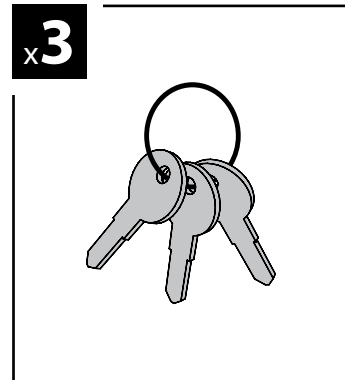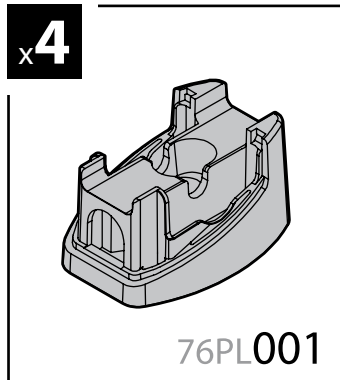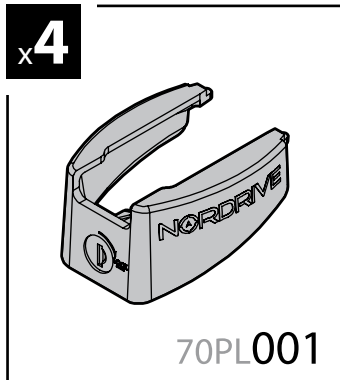


x8

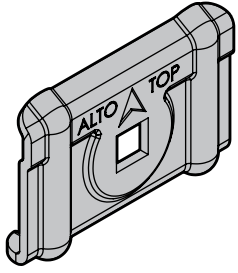


40FE001

x4

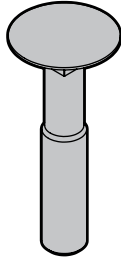


60BQ8045

x4




62BB0800

x2

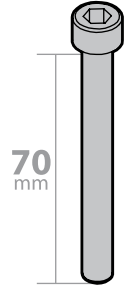

M8x70  
60CE8070

x4

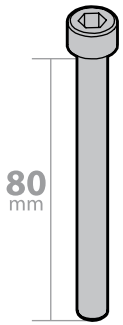


M8x80  
60CE8080

x4




61ED0815

x4



ø8 - ø16  
61FN0816

x4

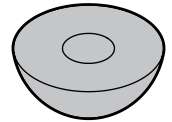


60RO003

x4




66OR20CN

x1






72FE0001

x1





72FE0003

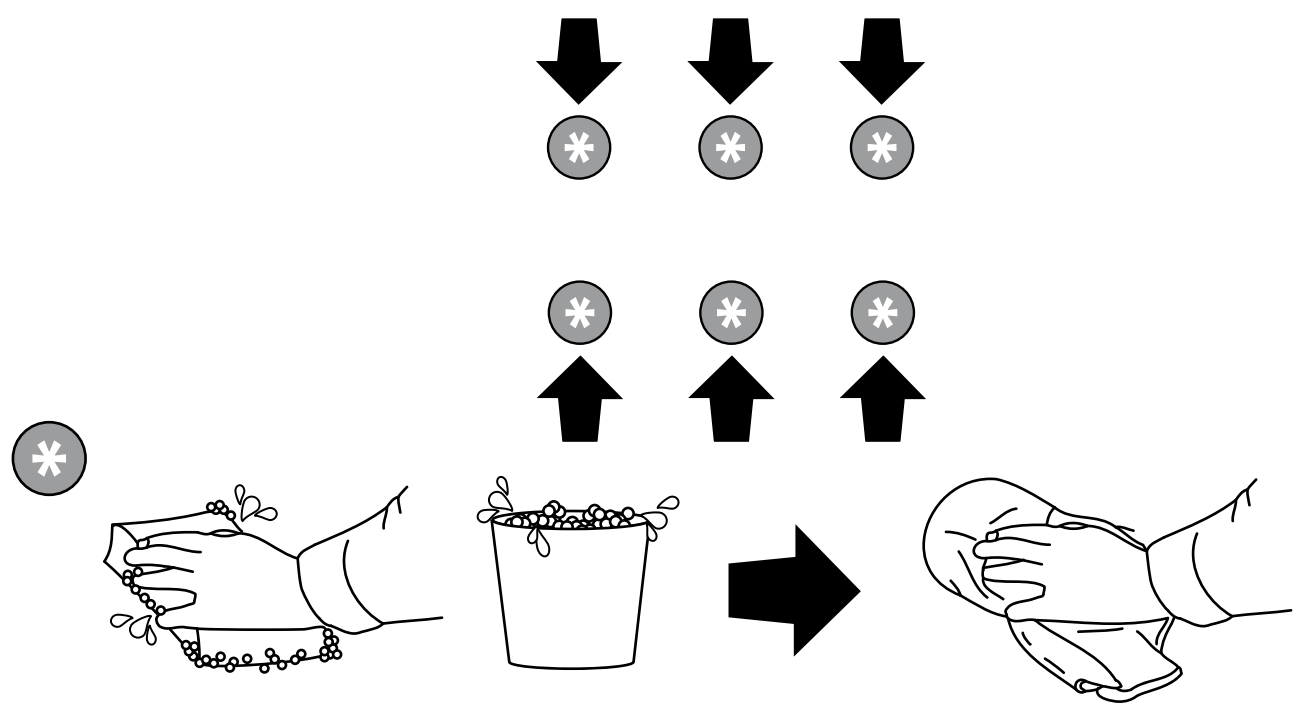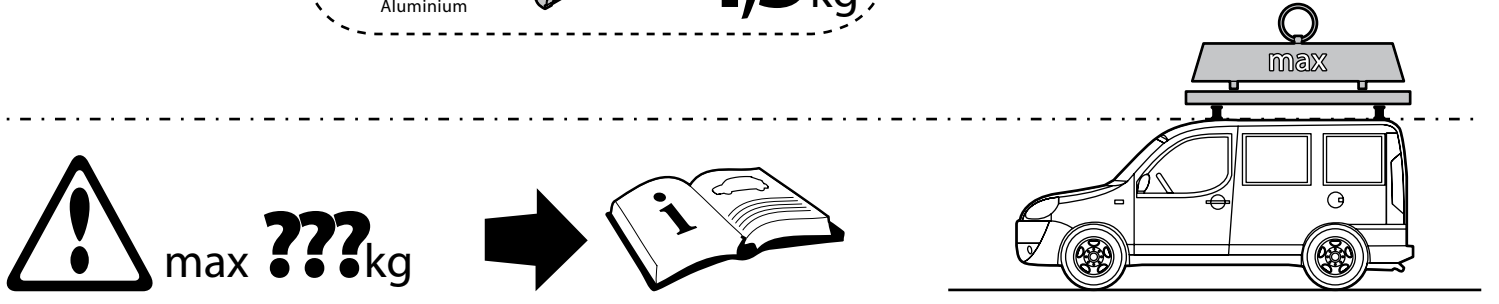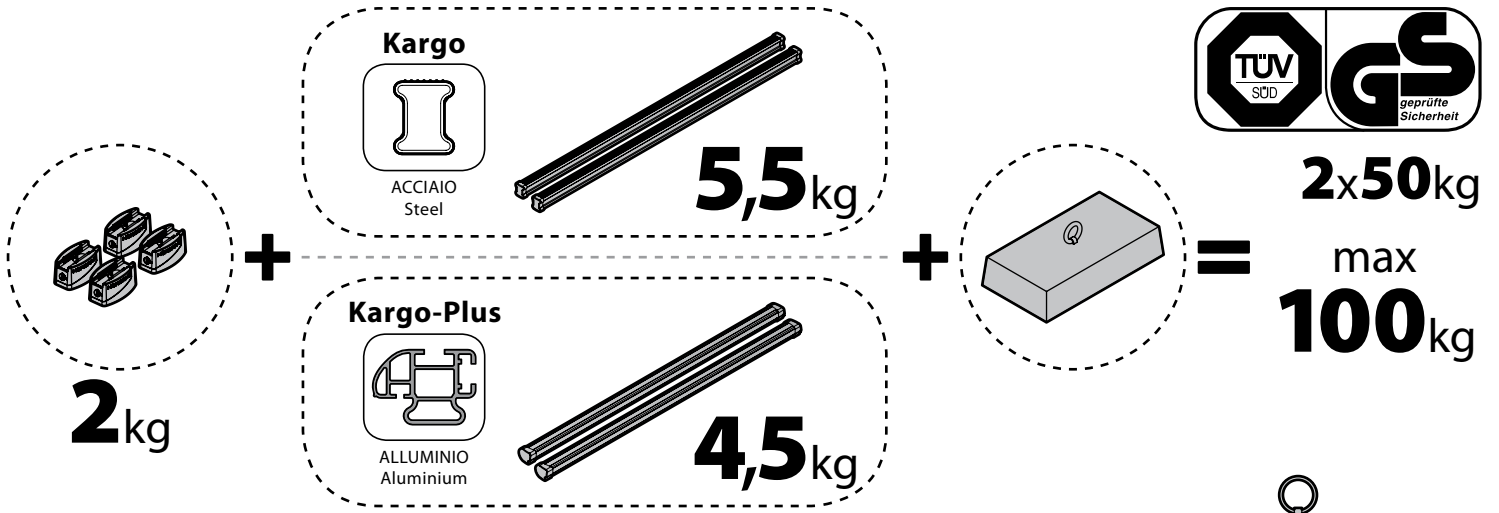



(I) ISTRUZIONI DI MONTAGGIO  
 (GB) FITTING INSTRUCTIONS  
 (D) MONTAGEANLEITUNG  
 (F) INSTRUCTIONS DE MONTAGE  
 (E) INSTRUCCIONES DE MONTAJE  
 (P) INSTRUÇÕES DE MONTAGEM  
 (NL) MONTAGE-INSTRUCTIES  
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE  
 (EST) PAIGALDUSJUHEND  
 (LAT) STIPRINĀŠANAS INSTRUKCIJA  
 (LT) PRITVIRTINIMO INSTRUKCIJOS  
 (PL) INSTRUKCJA MONTAŻU  
 (RUS) Инструкции по установке  
 (CZ) NÁVOD NA MONTÁŽ  
 (SK) NÁVOD NA MONTÁŽ




(SLO) NAVODILA ZA PRITRJEVANJE  
 (HR) UPUTA ZA SASTAVLJANJE  
 (H) A FELSZERELÉS MÓDJA  
 (GR) Οδηγίες συναρμολόγησης  
 (TR) MONTAJ TALIMATLARI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (SRB) UPUTSTVA ZA MONTAŽU

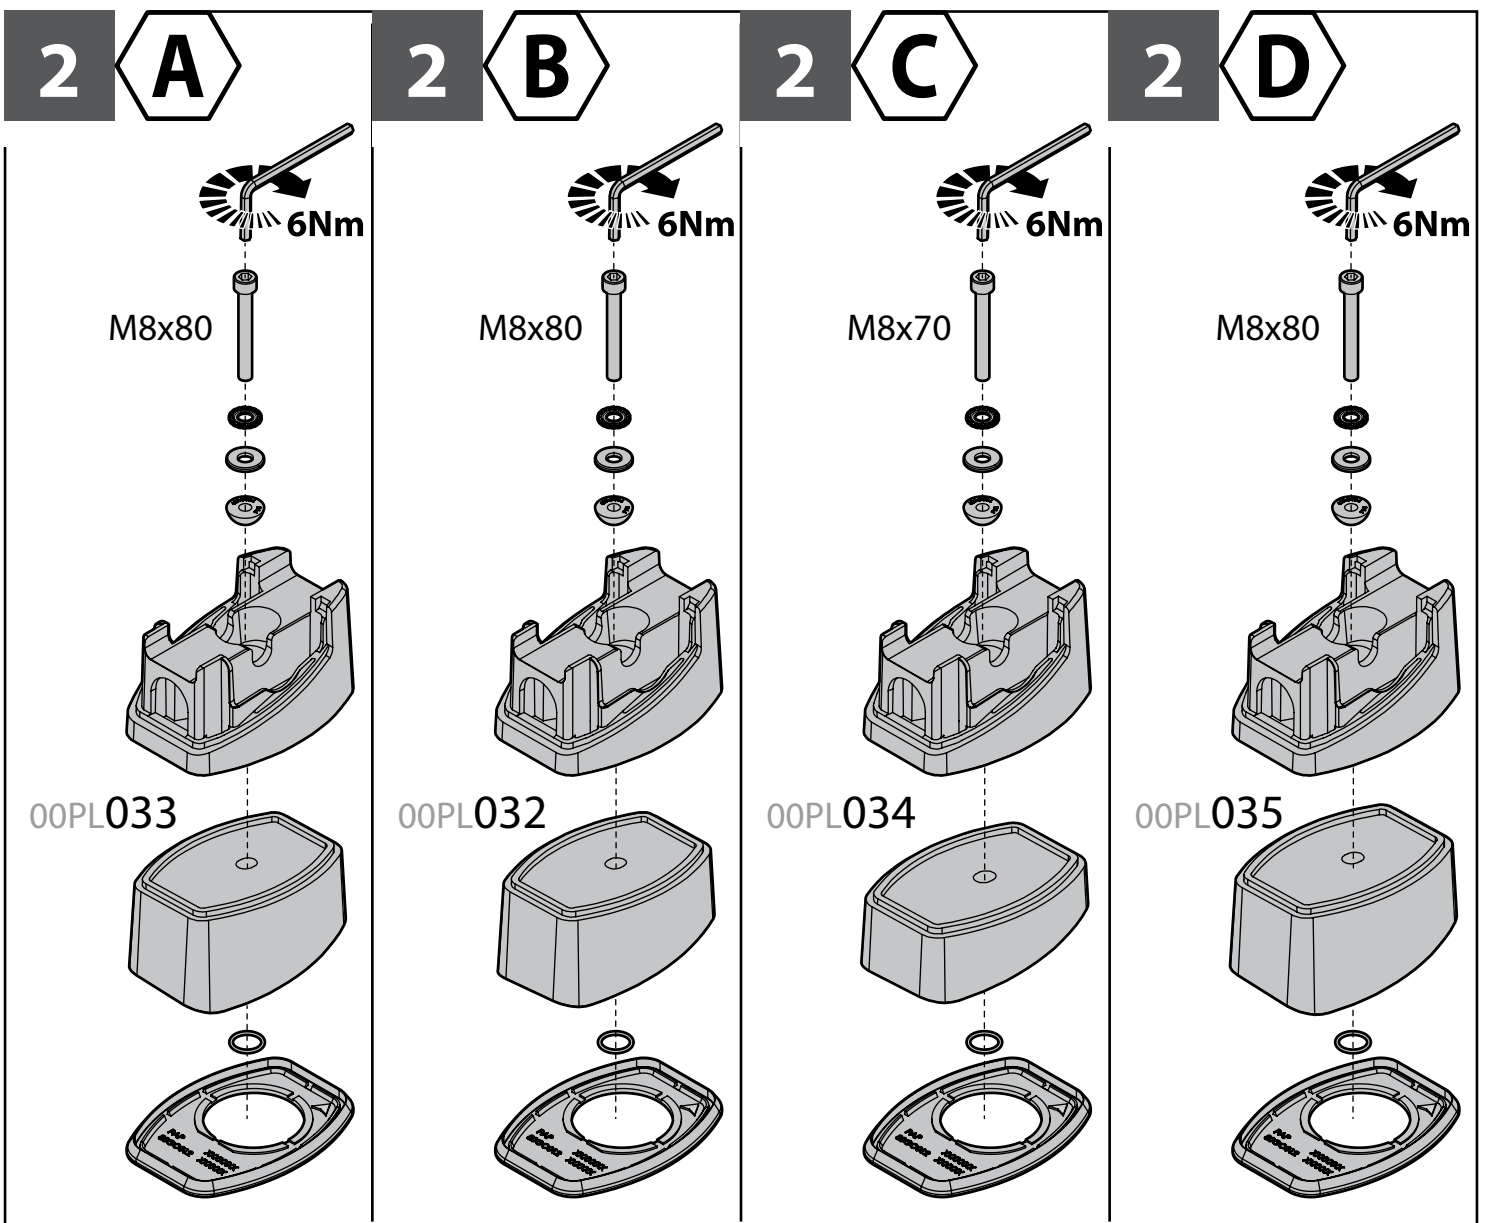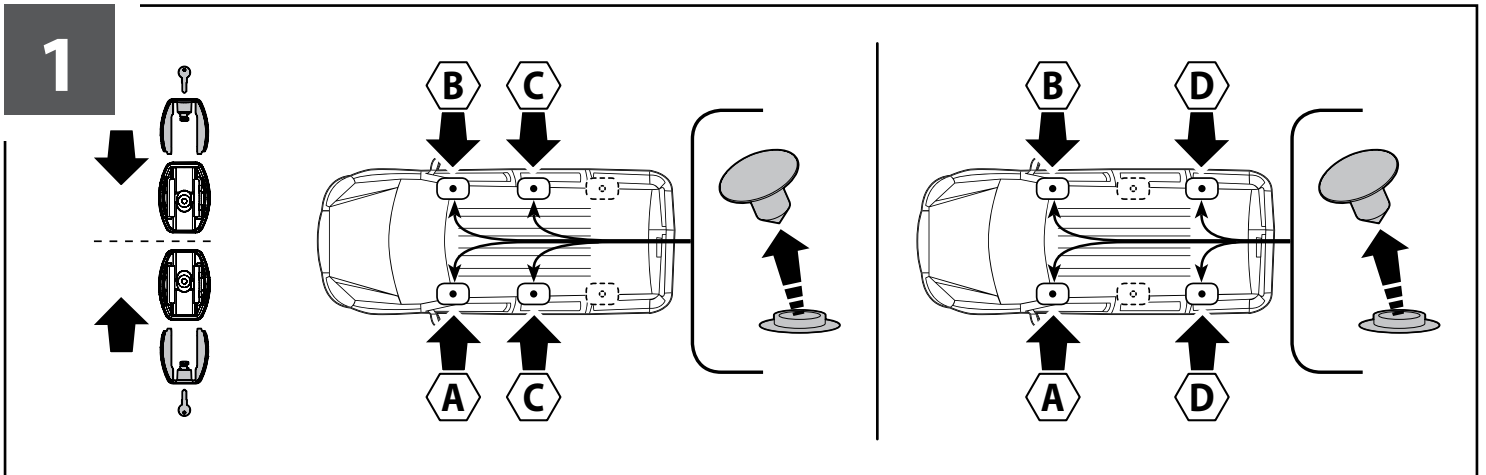

3

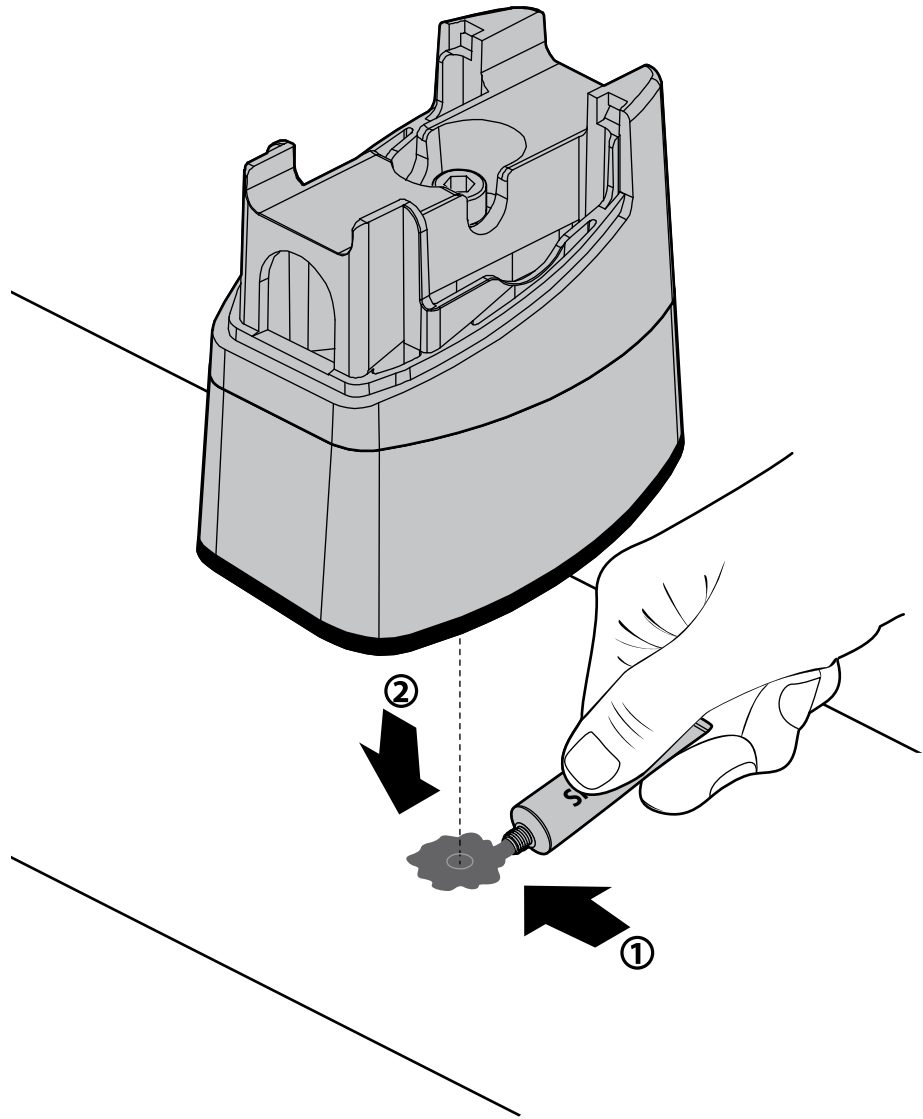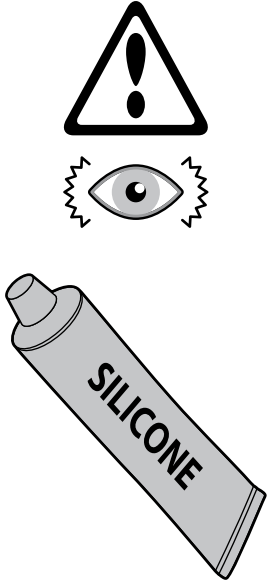

4

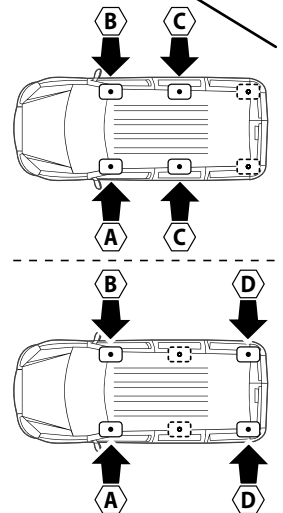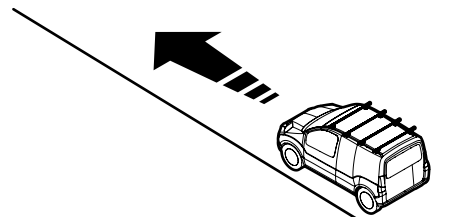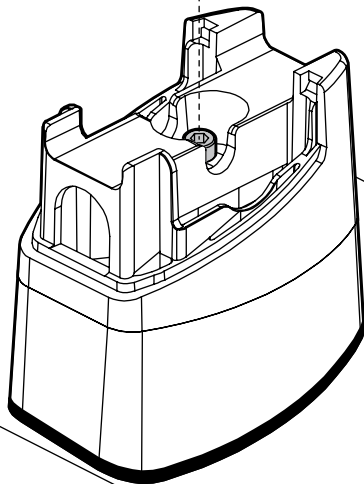




# ATTENZIONE WARNING



## A Kargo

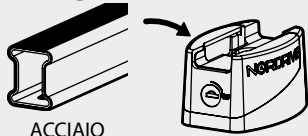


ACCIAIO  
Steel

MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE

# A


















## B Kargo-Plus

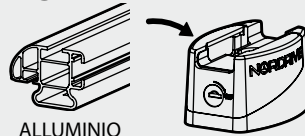

ALLUMINIO  
Aluminium

MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE


# B

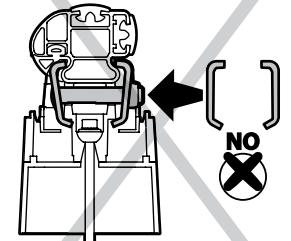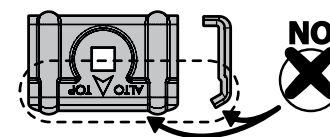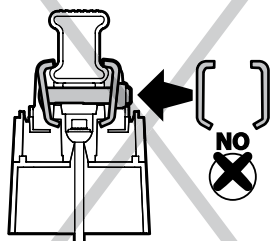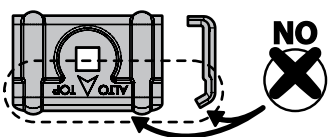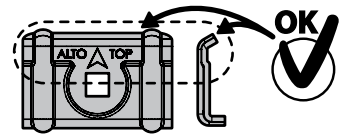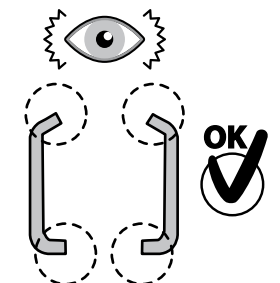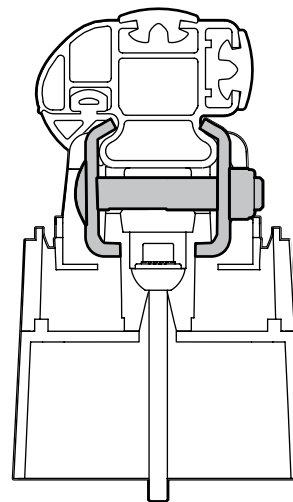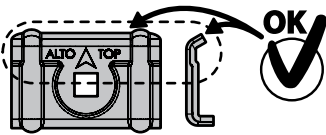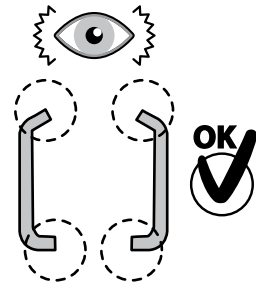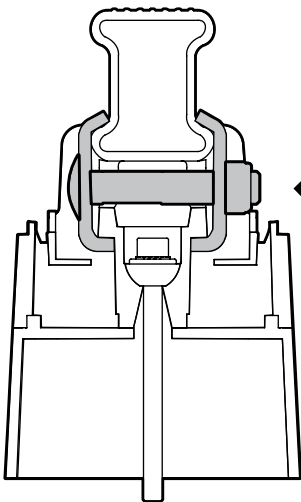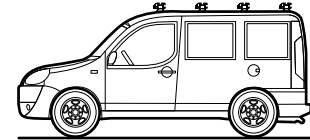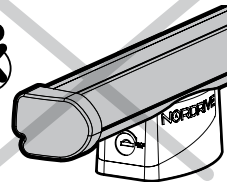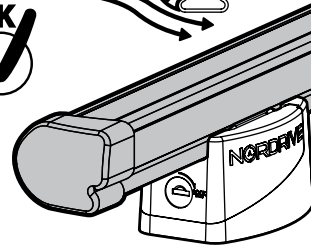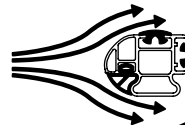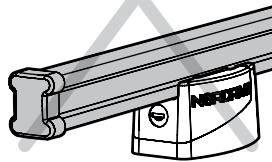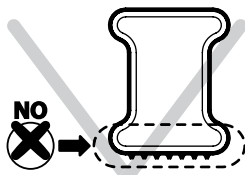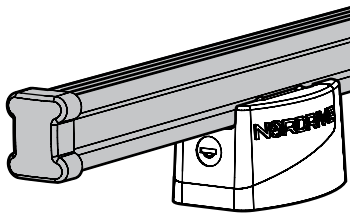



# 5

**A**

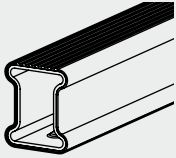

**Kargo**  
ACCIAIO  
Steel


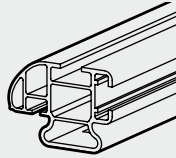



Diagram showing the Kargo steel bar being installed on a car roof rack. The bar is positioned horizontally across the rack, with arrows indicating its placement relative to the side rails. The car's roof and rear window are visible in the background.


**B**



**Kargo-Plus**  
ALLUMINIO  
Aluminium



**1**

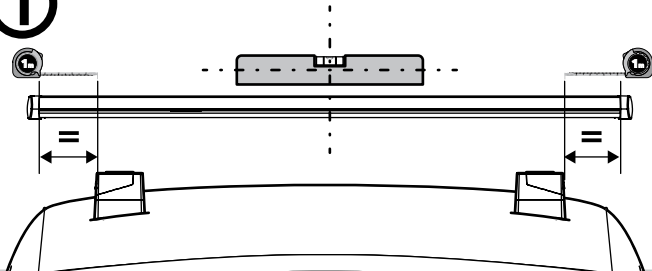

**2**



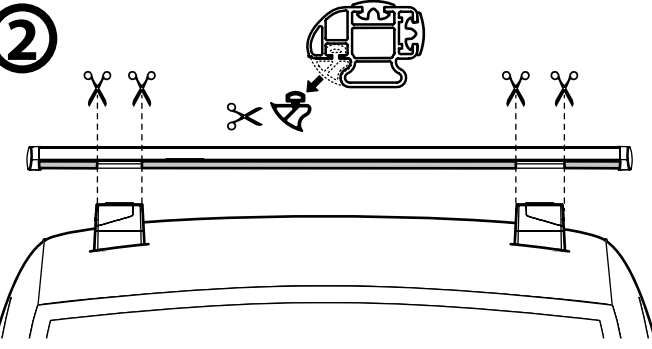


Diagram showing the Kargo-Plus aluminium bar being installed on a car roof rack. Step 1 shows the bar being placed on the rack. Step 2 shows the bar being cut to length with scissors. The car's roof and rear window are visible in the background.


# 6

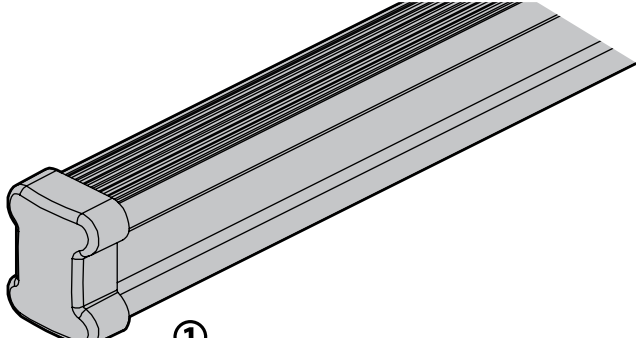

**2**



**1**

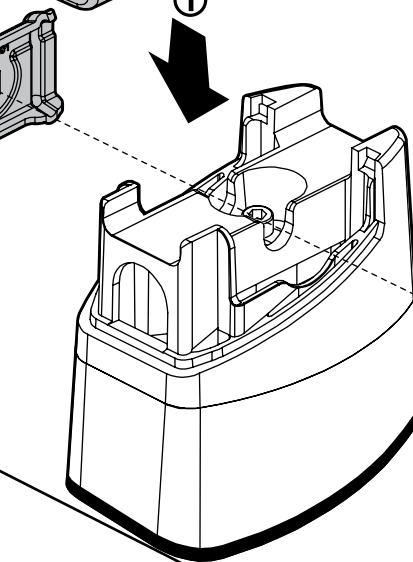

**3**




Diagram showing the assembly of the Kargo-Plus aluminium bar. Step 1 shows the bar being inserted into the car's roof rack. Step 2 shows a screw being inserted into the bar. Step 3 shows a washer being inserted into the bar. The car's roof rack is shown in the background.


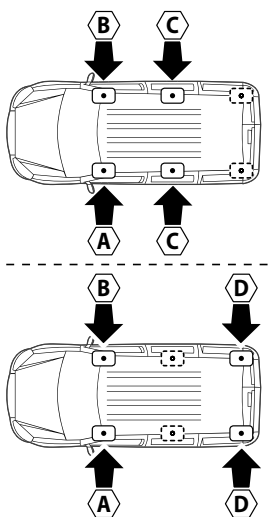



Diagram showing the car's roof rack layout with four mounting points labeled A, B, C, and D. Arrows indicate the direction of the mounting points.



7

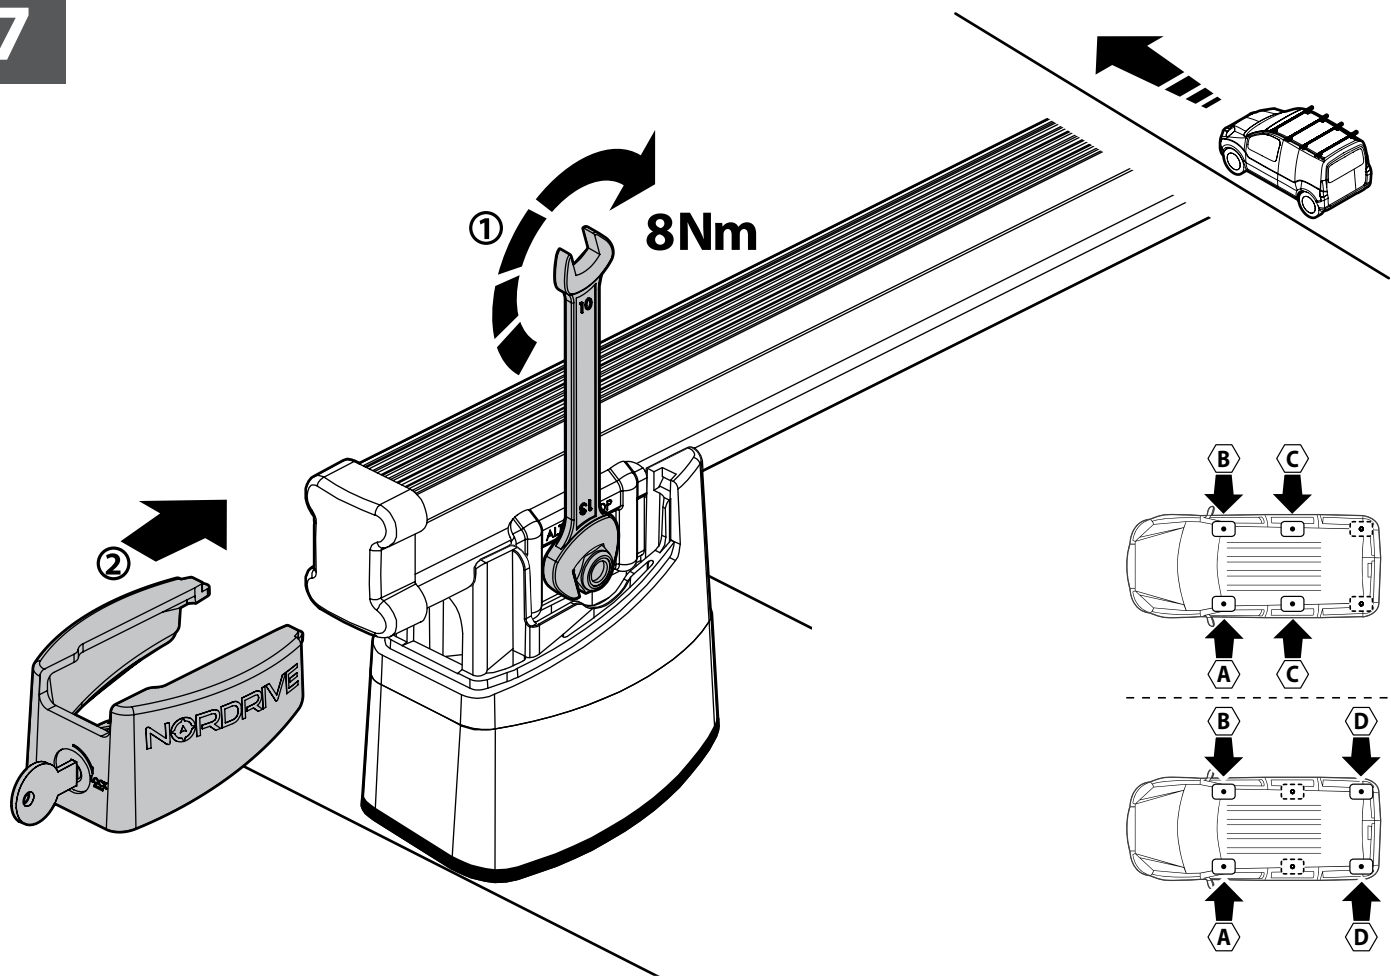


8

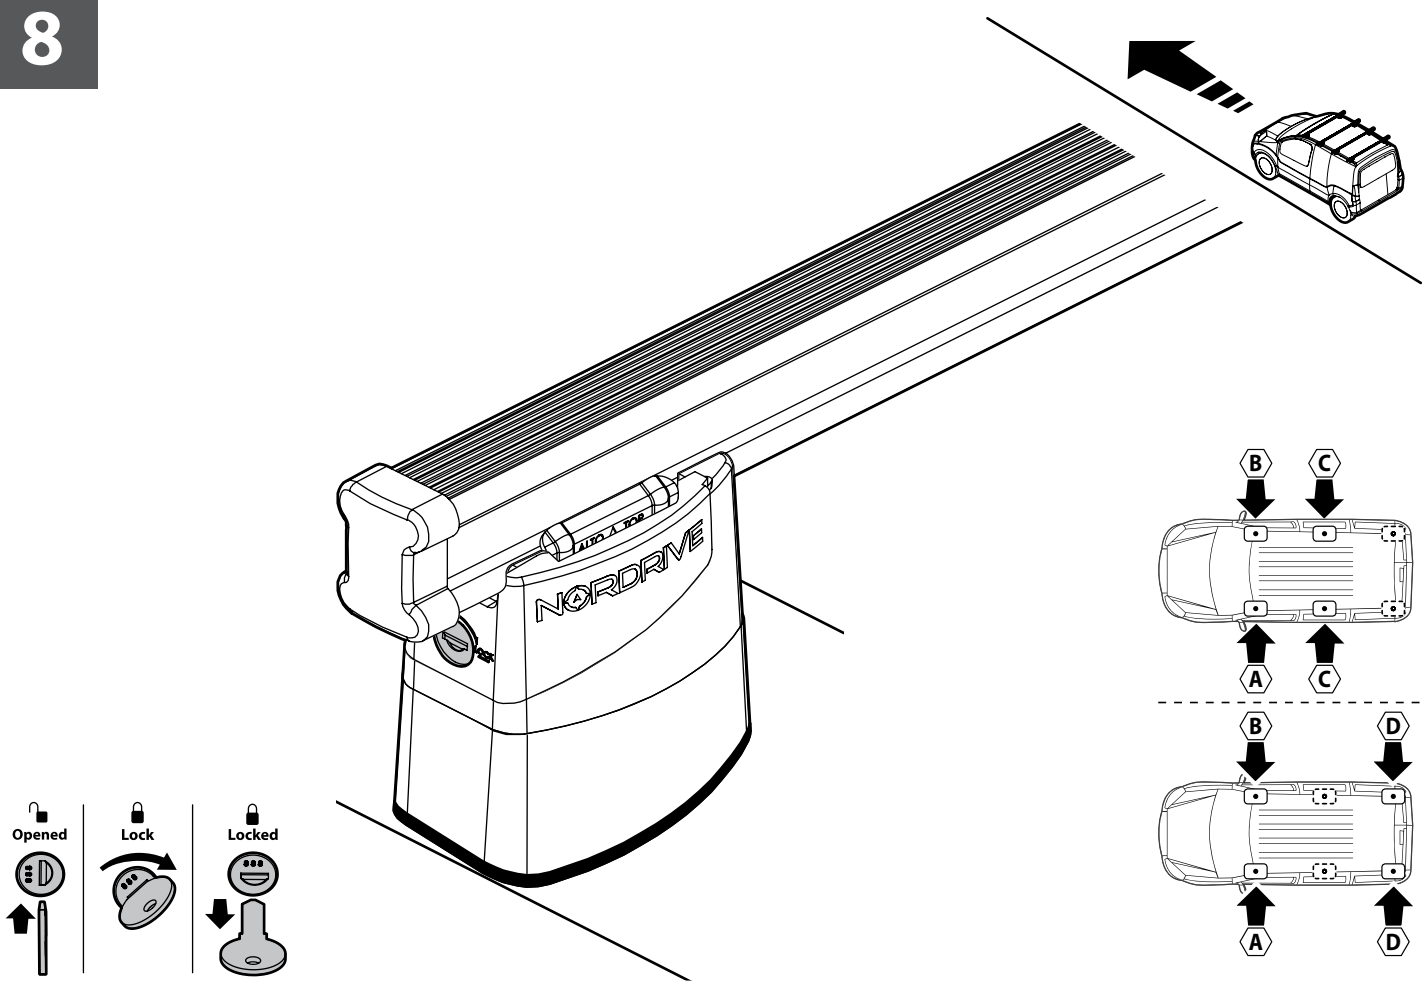

# Kargo series




Acciaio / Steel

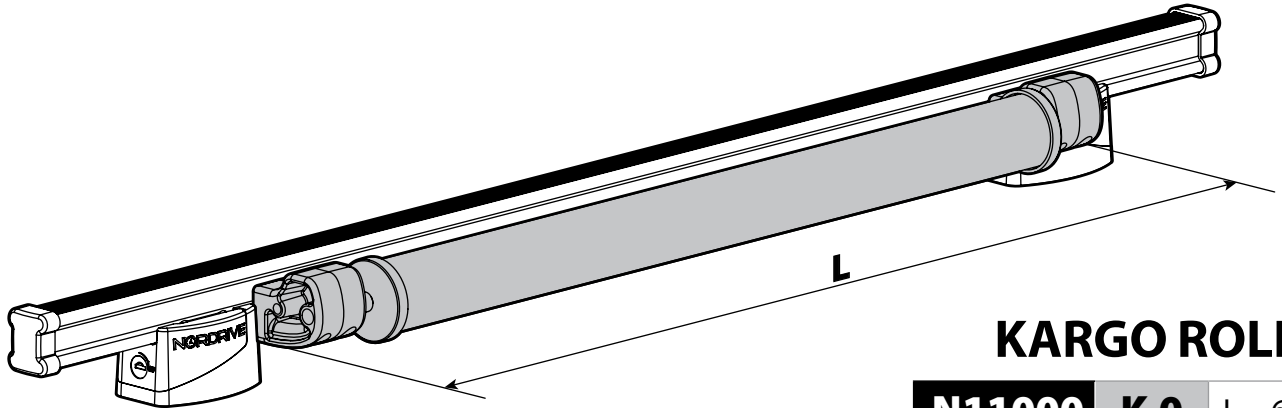


## KARGO ROLLER

<b>N11000</b>	<b>K-0</b>	L = 64 cm
<b>N11003</b>	<b>K-7</b>	L = 96 cm

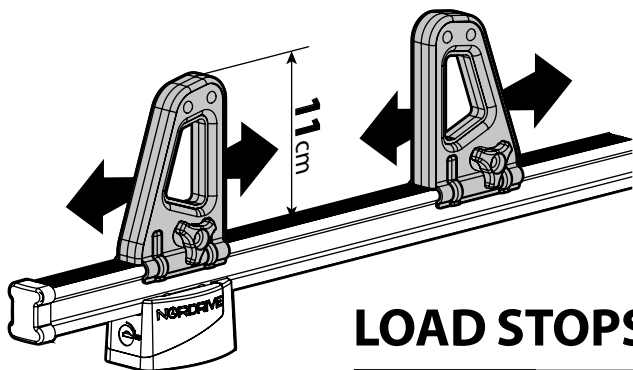


## LOAD STOPS

**N11001** K-1

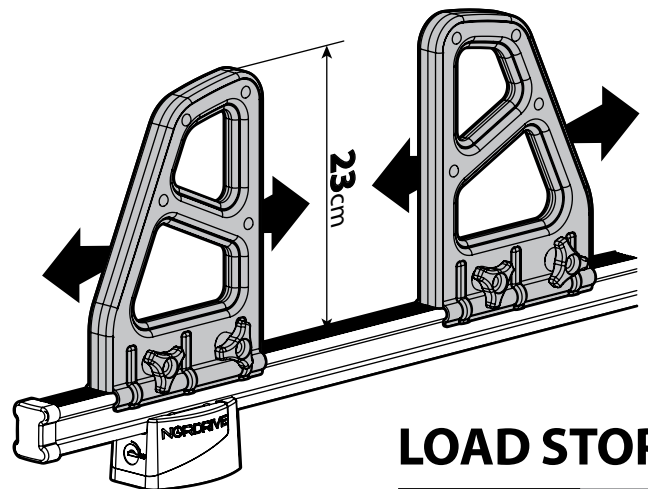

## LOAD STOPS

**N11002** K-2

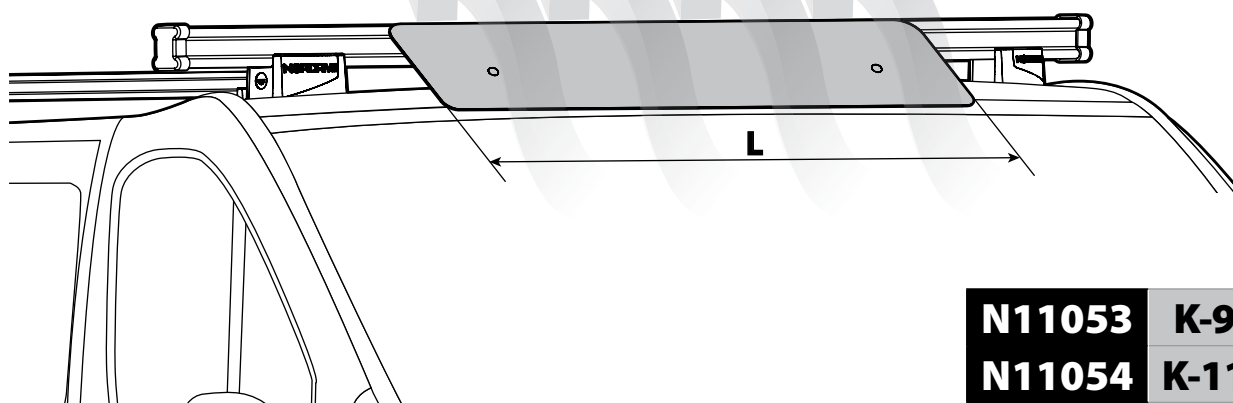


## SPOILER


<b>N11053</b>	<b>K-9</b>	L = 95 cm
<b>N11054</b>	<b>K-11</b>	L = 110 cm

**OPTIONALS** PER / FOR / FÜR:

# Kargo-Plus series

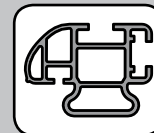


Alluminio / Aluminium

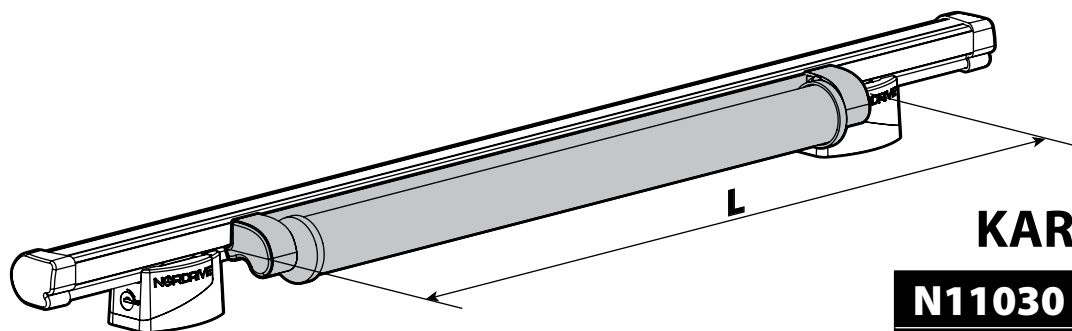

## KARGO ROLLER


**N11030** KP-0 L = 64 cm

**N11034** KP-7 L = 96 cm

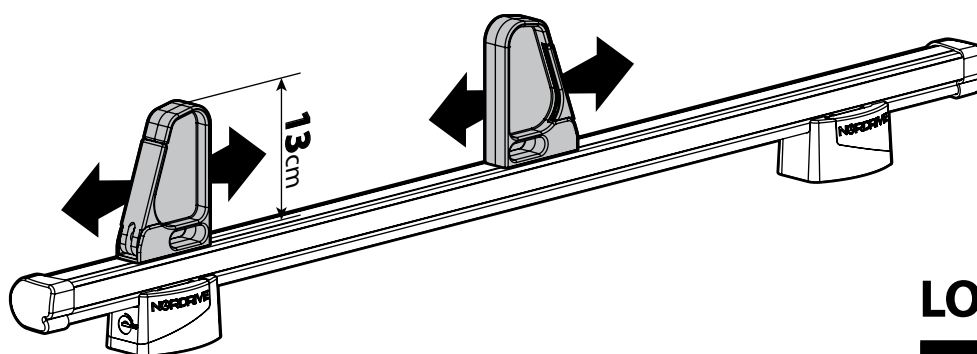


## LOAD STOPS

**N11031** KP-1

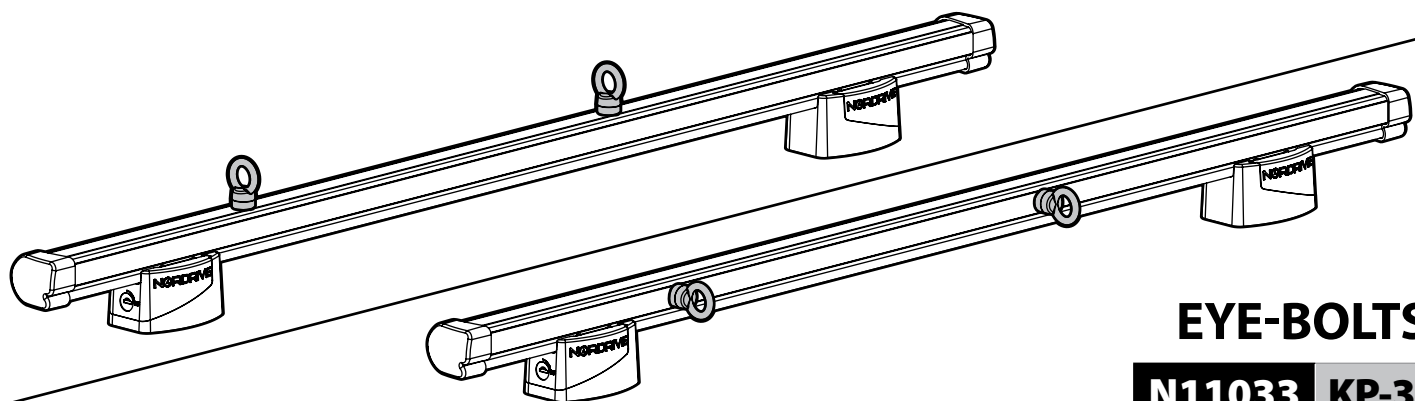

## EYE-BOLTS

**N11033** KP-3

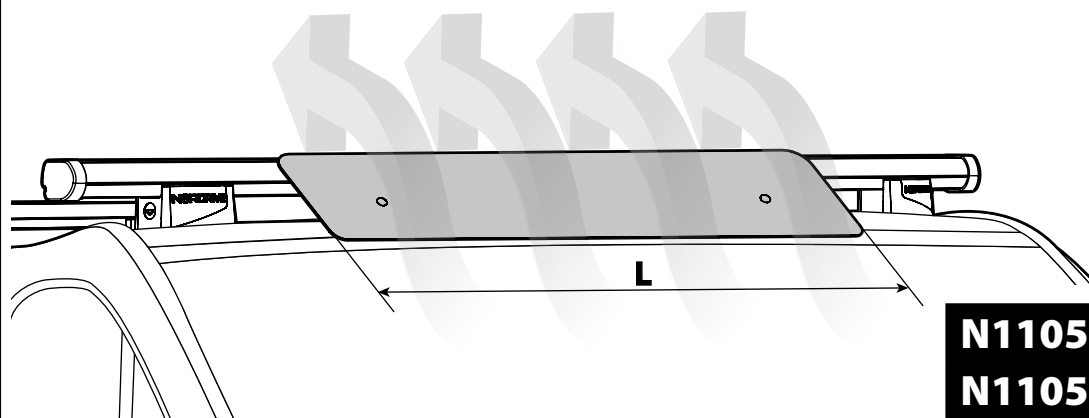

## SPOILER

**N11057** KP-9 L = 95 cm

**N11058** KP-11 L = 110 cm


OPTIONALS PER / FOR / FÜR:

**Kargo** series



Acciaio / Steel

**Kargo-Plus**  
series

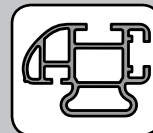


Alluminio / Aluminium

### KARGO-TUBE

**N11050 T200** L = 205 cm



**N11051 T300** L = 305 cm

**N11052 T400** L = 405 cm

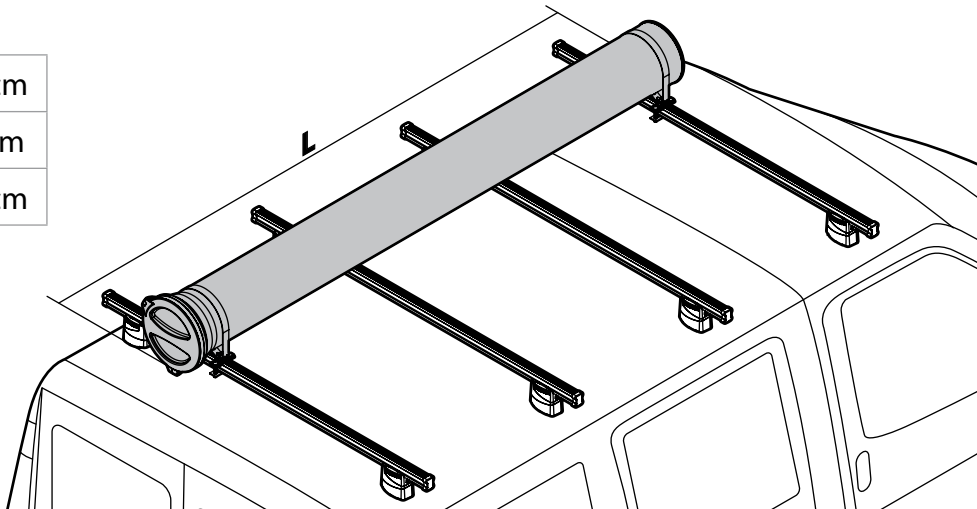


### LADDER HOLDER STRAPS

**N11065 U-5**

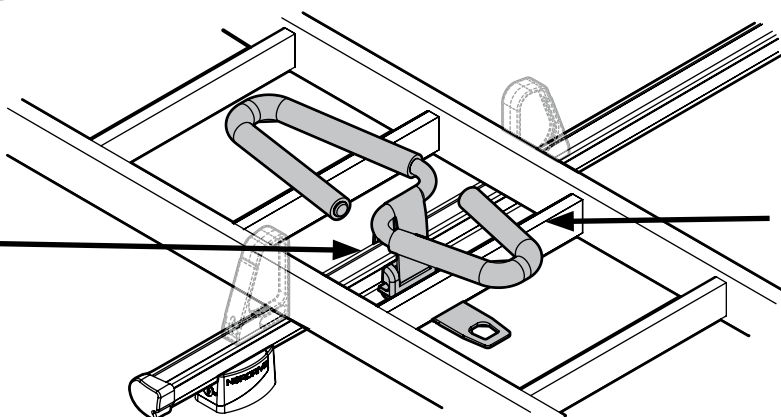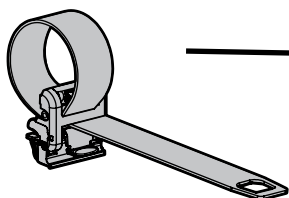

### LADDER STEP ADAPTER


**N11067 U-6**

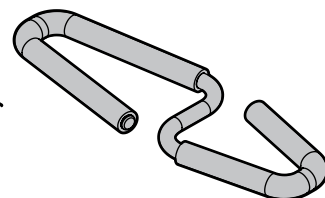

### EXTENSION ROLLER

**N11020 U-0** L = 64 cm

**N11021 U-7** L = 96 cm

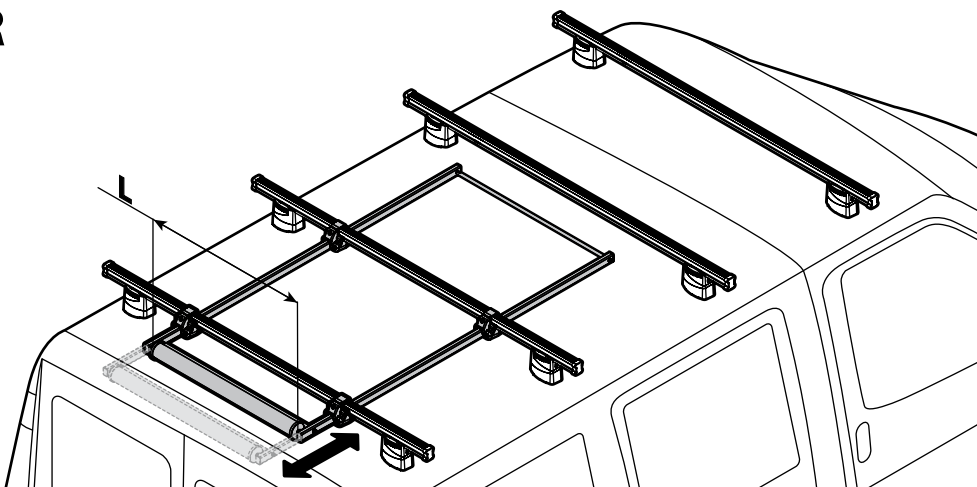

**NORDRIVE**<sup>®</sup>  
TRANSPORT SOLUTIONS

NORDRIVE<sup>®</sup> is a registered trademark of  
**LAMPA S.p.A.**  
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY  
Tel. +39 0375 820700  
UNI EN ISO 9001:2008 Certified Company  
[www.nordrive.it](http://www.nordrive.it)  
[www.lampa.it](http://www.lampa.it)

91CA0326 r05