


KB4KR

KammRack

Instructions



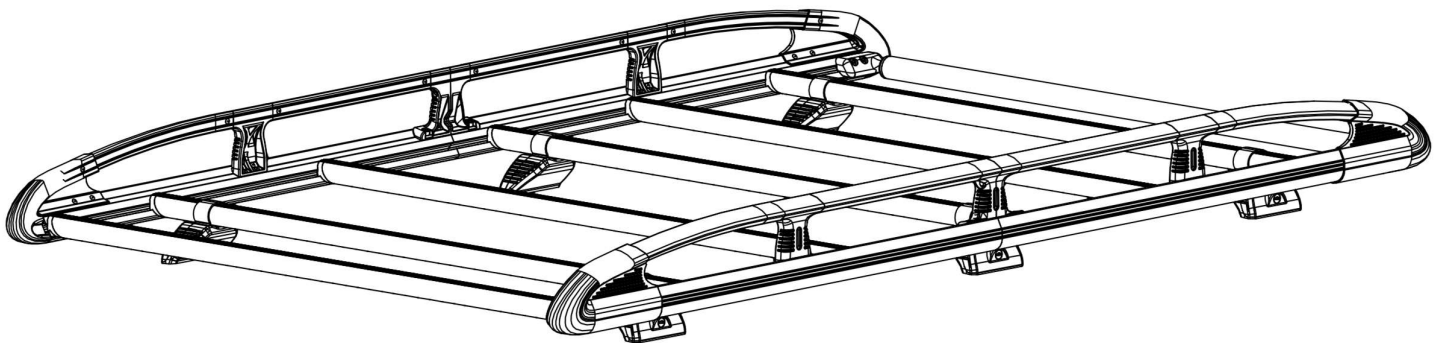


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

KB4KR:


VW Caddy, 2010 –

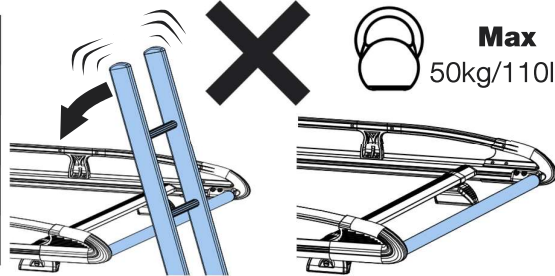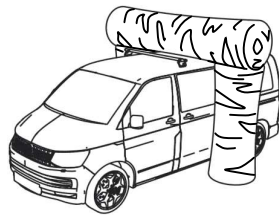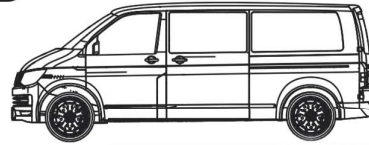


KammRack

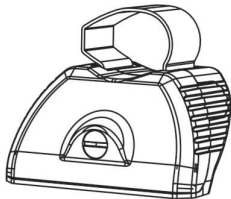


SA397U x 4

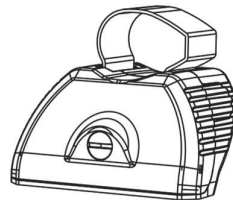


SA398U x 4

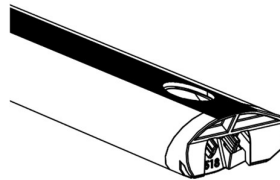

SA428




PS519 x 1

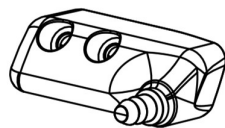


PS520 x 1

LHS x 2


RHS x 2

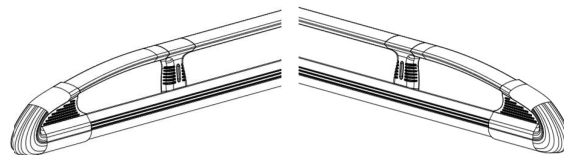

ASF x 1

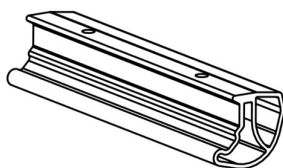


EXT15-02 x 2

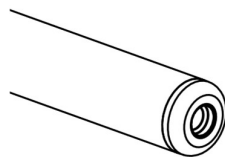


SA436 x 1


Fitting Kit




PS176 x 4




PS023 x 8

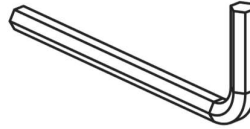


FT01 x 1

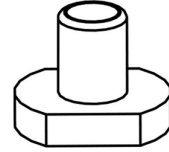


FN085 x 16

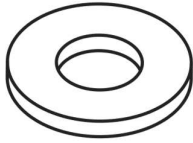

FW002 (M8) x 8

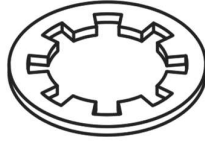


FW009 (M8) x 8

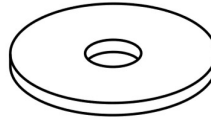

PS260 (M8) x 8



FT05 x 1



FS081
(M8 x 50) x 4




FS062
(M8 x 25) x 4




FS059
(M8 x 25) x 16

1.

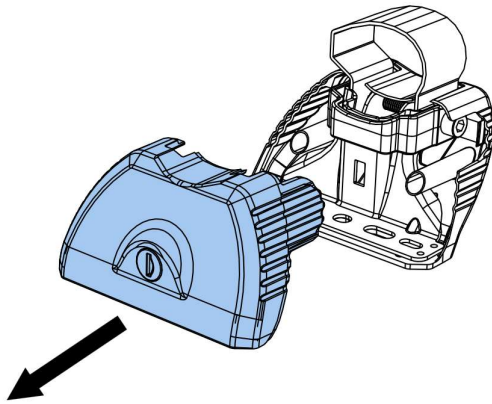


2.

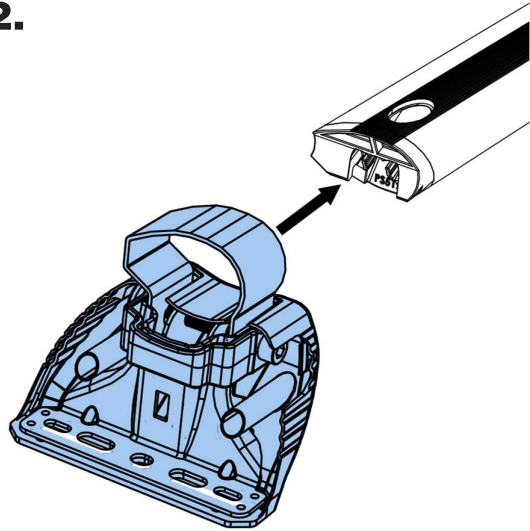

3.




R

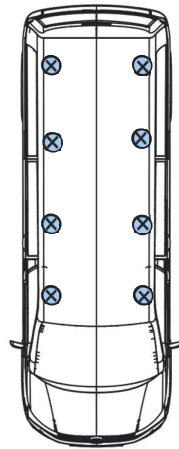


F









4.


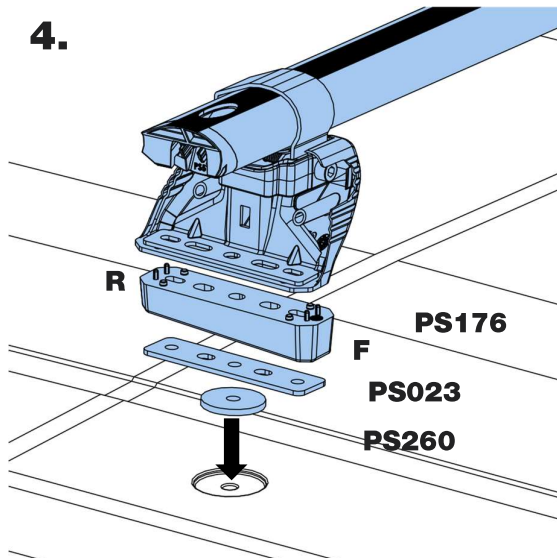


5.

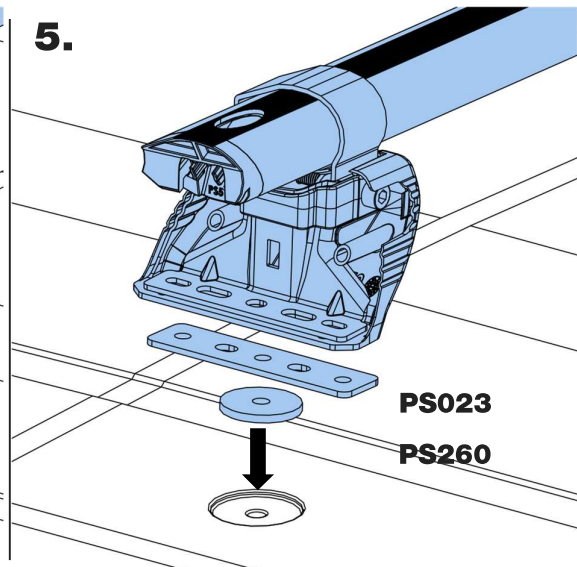


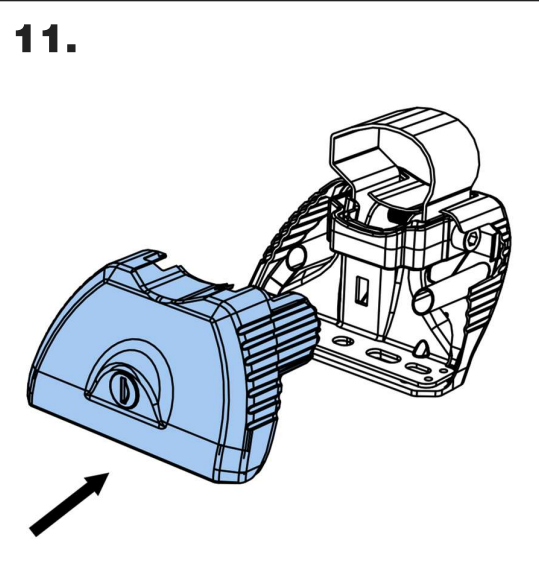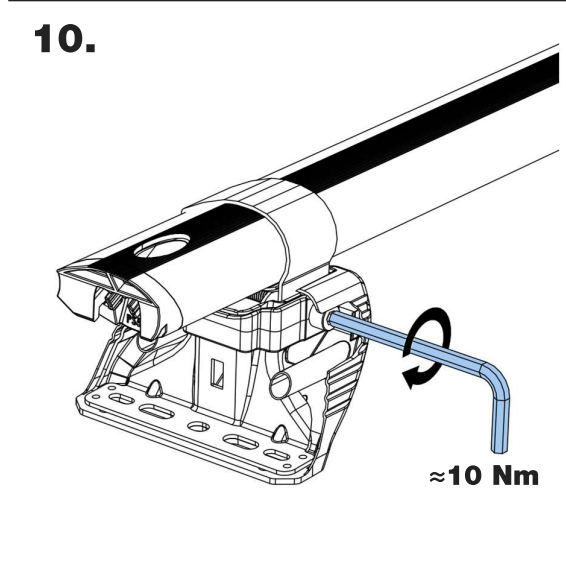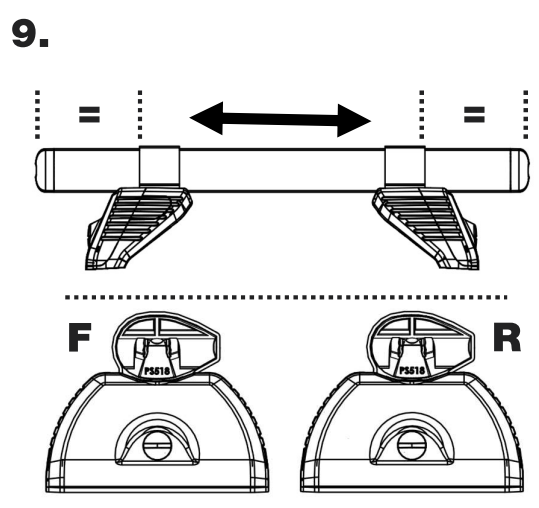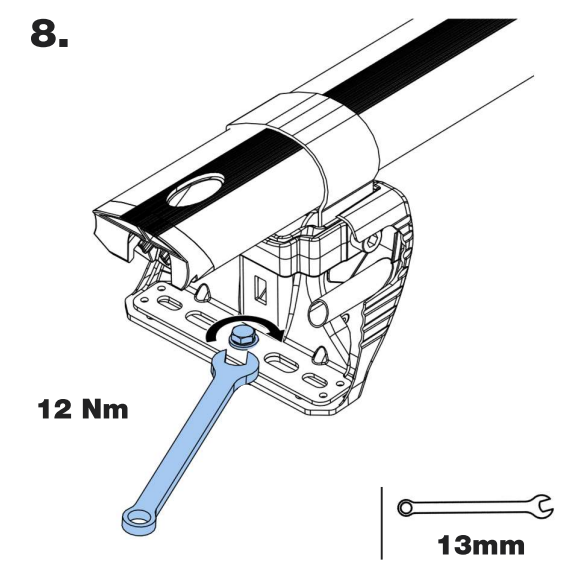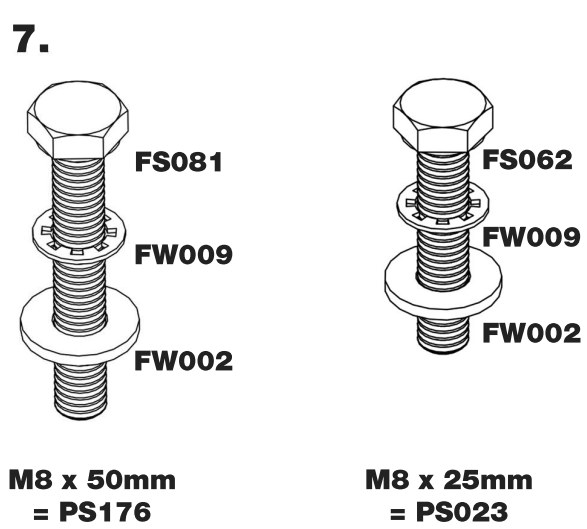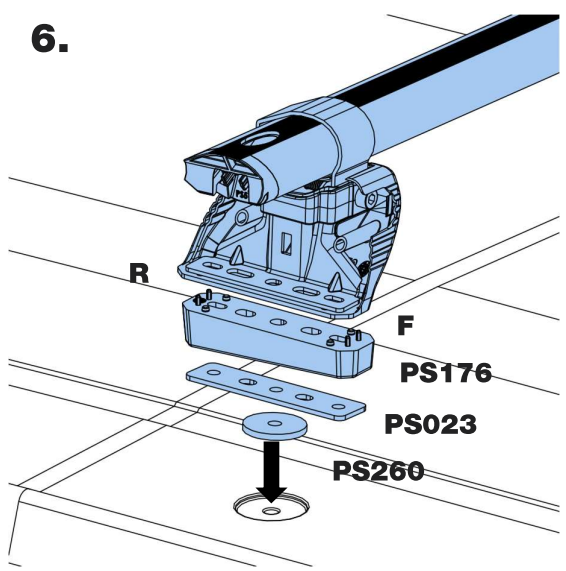


12.

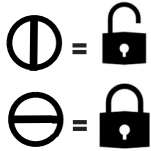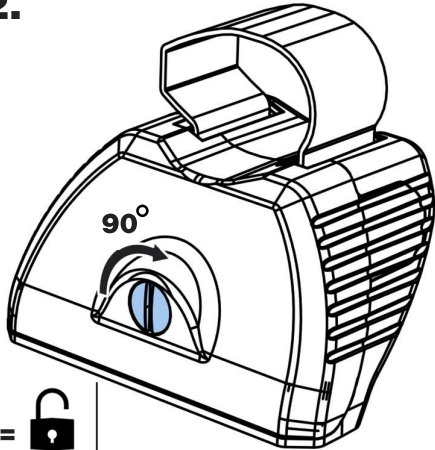



13.

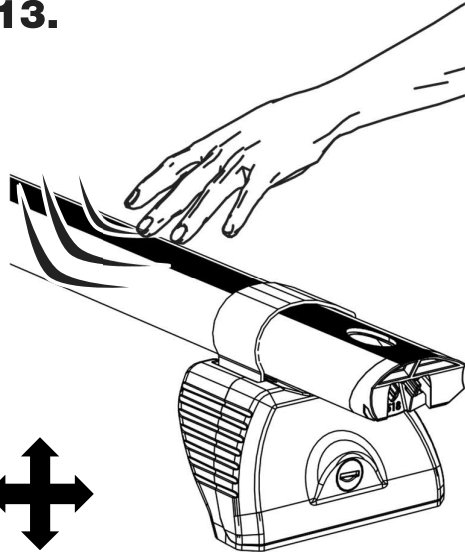


K610- Caddy Maxi 2010- L2, H1, Twin Doors

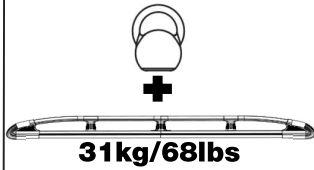



100kg Max

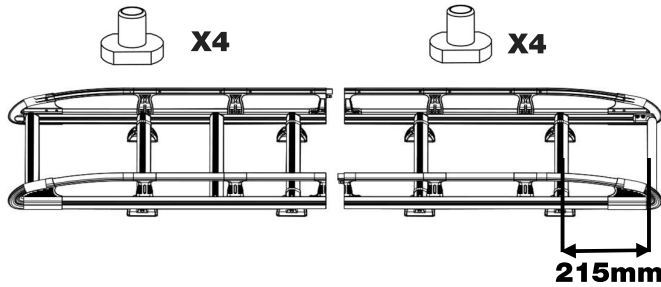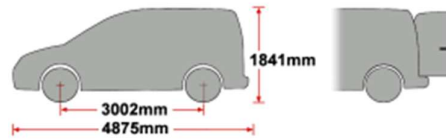




K611- Caddy Maxi 2010-2015- L2, H1, Tailgate

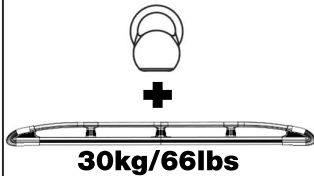


100kg Max

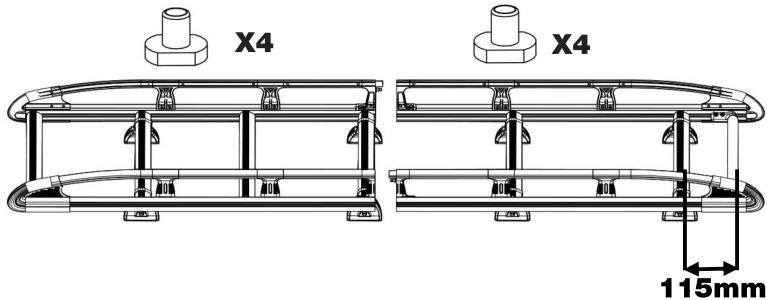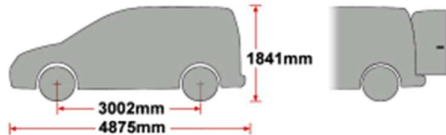


K611- Caddy Maxi 2015- L2, H1, Tailgate

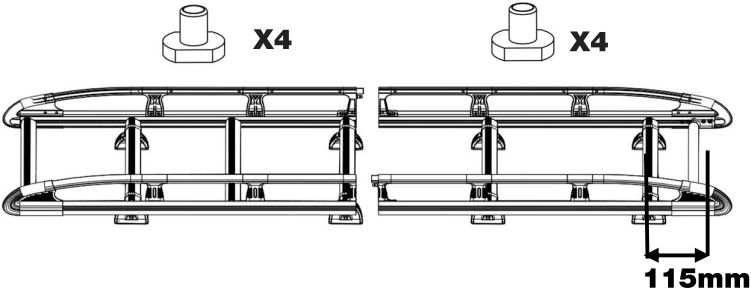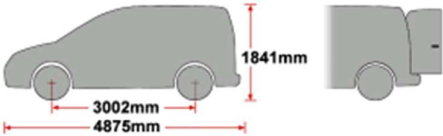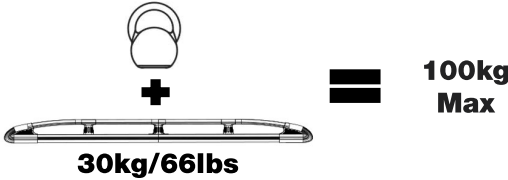


14.

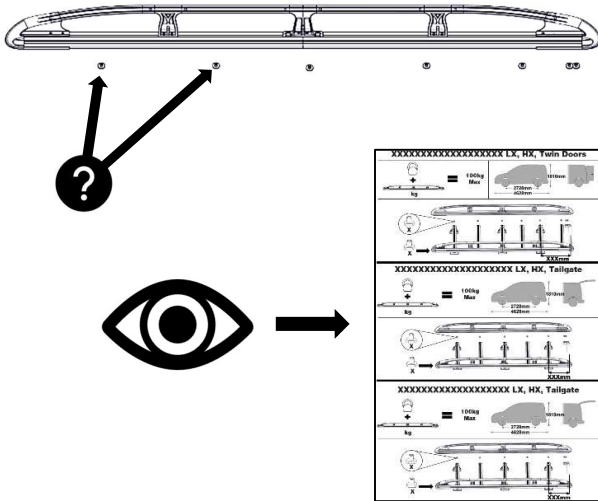


15.

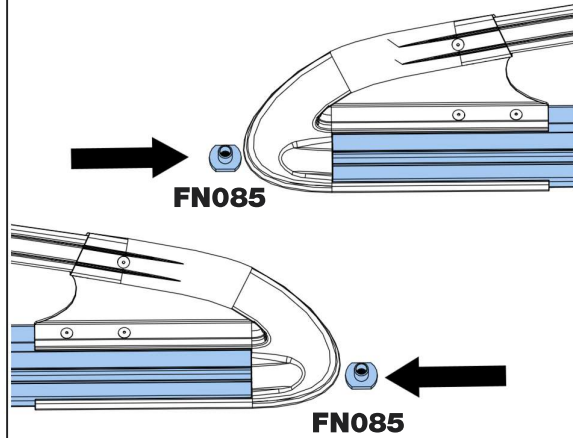


16.

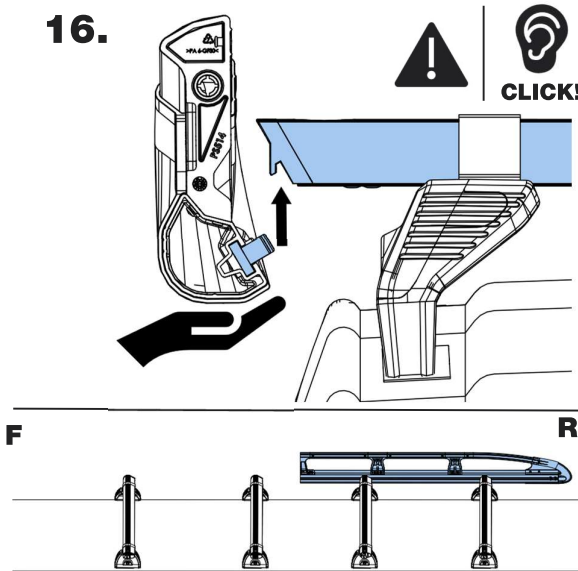


17.






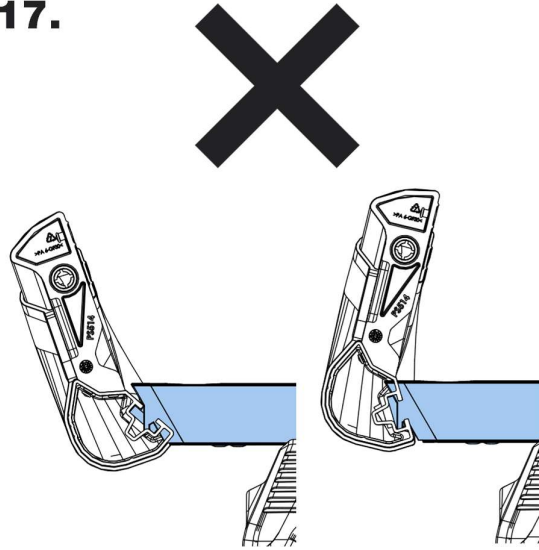


18.

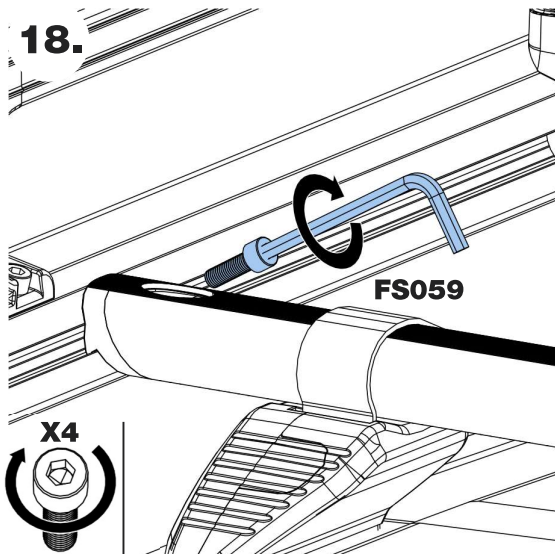


19.

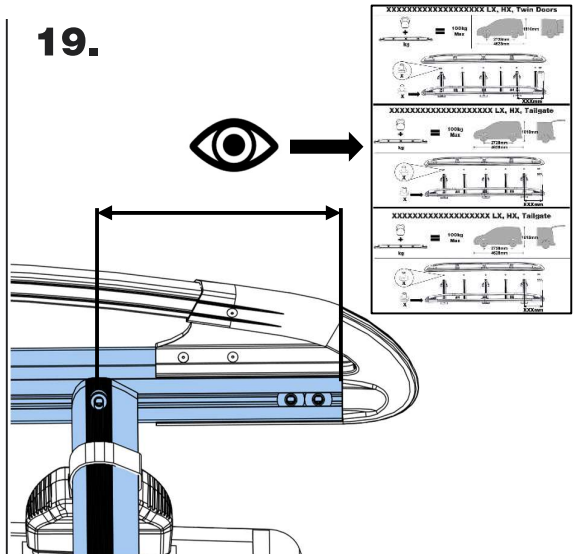


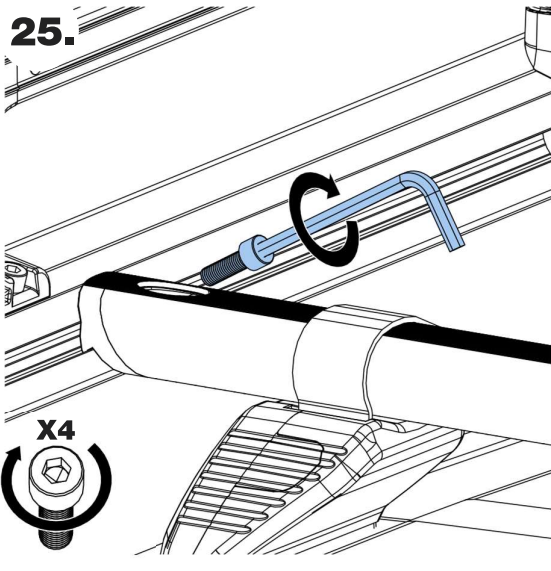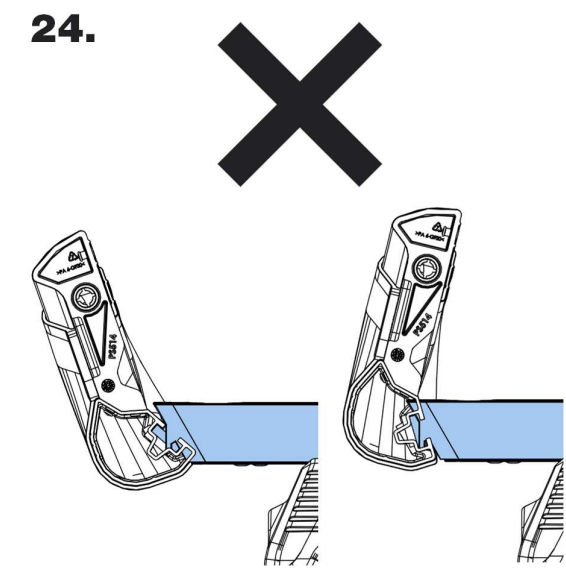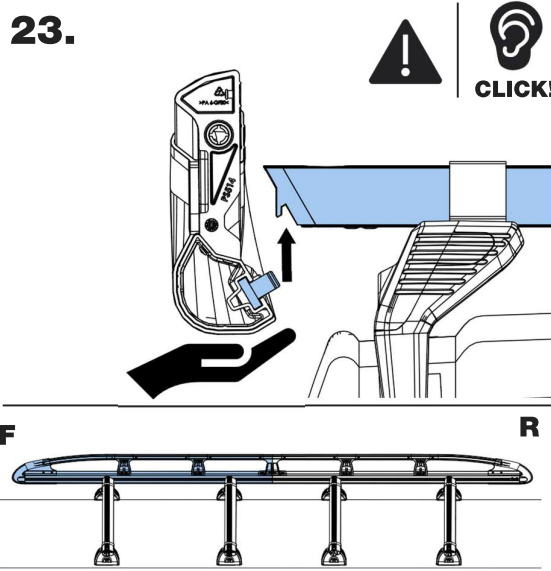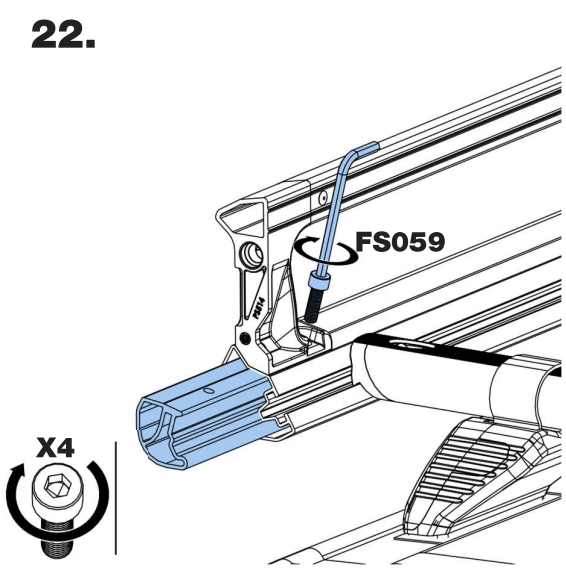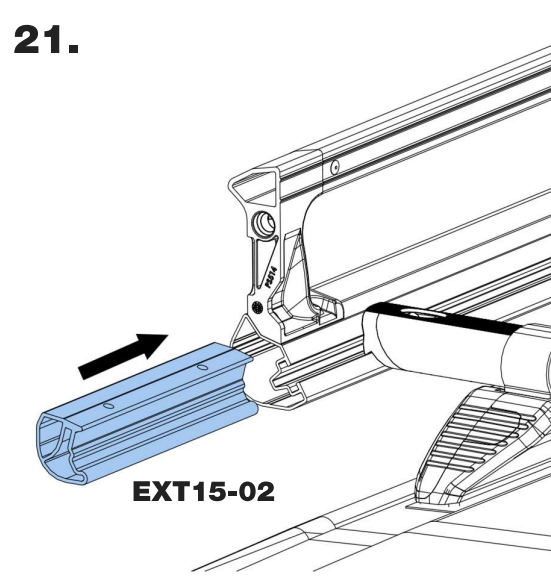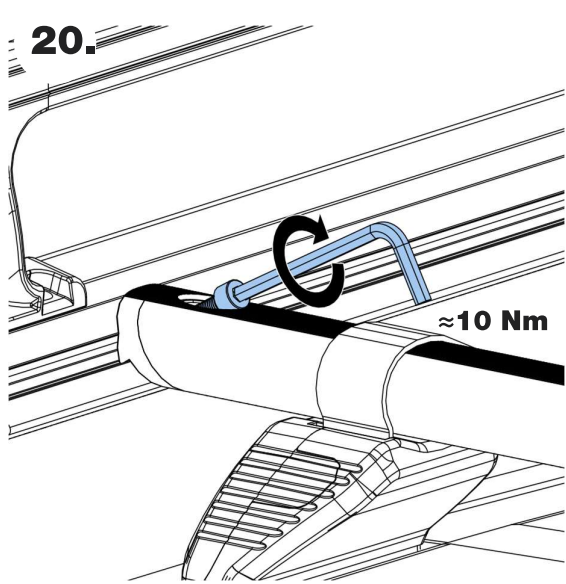


26.

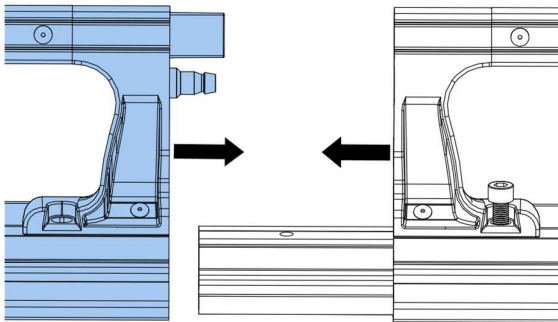


27.

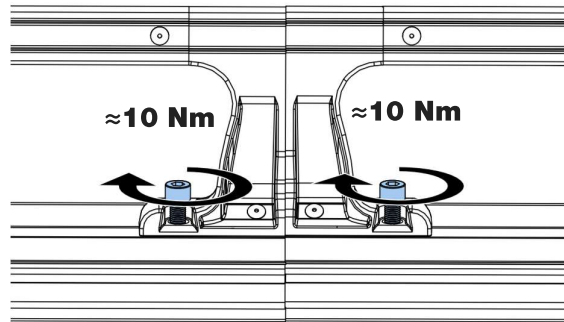



28.

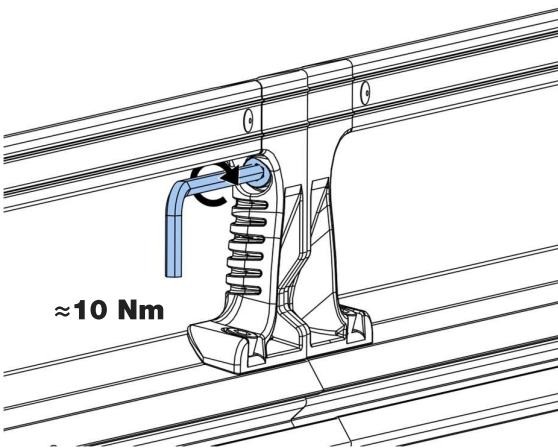


29.








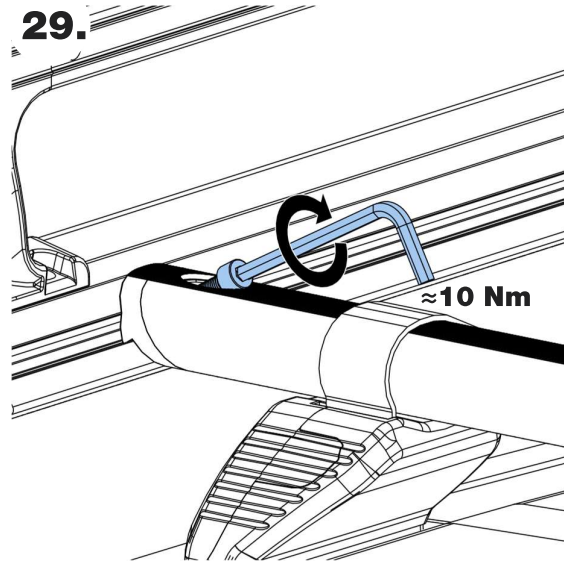


30.

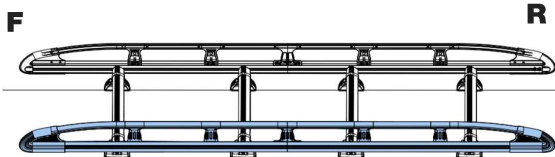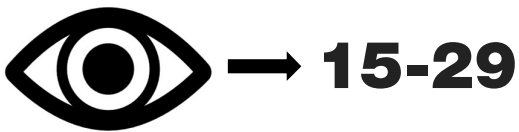


31.

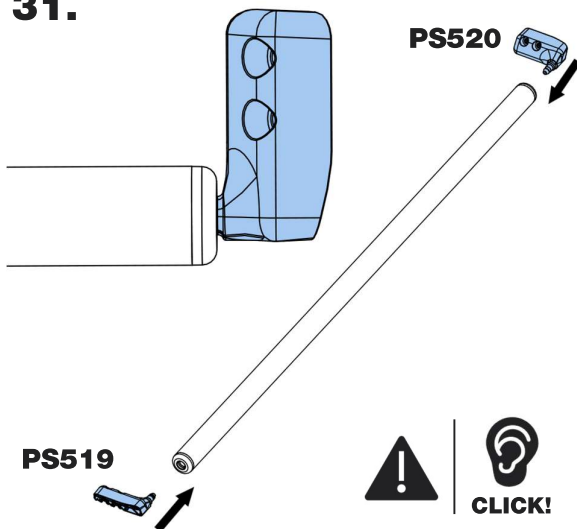


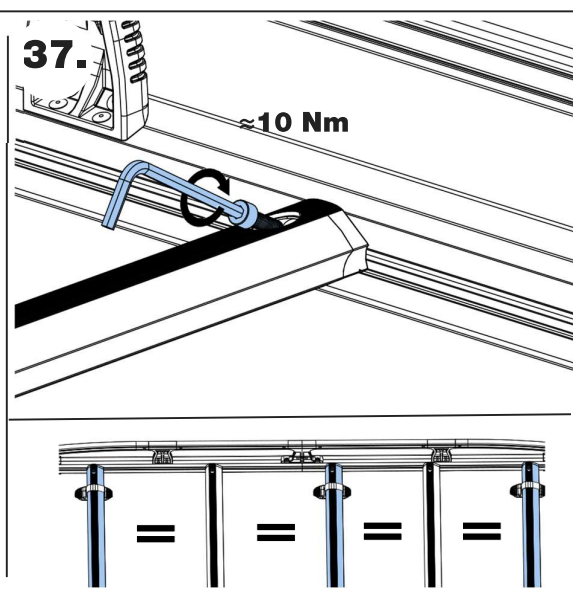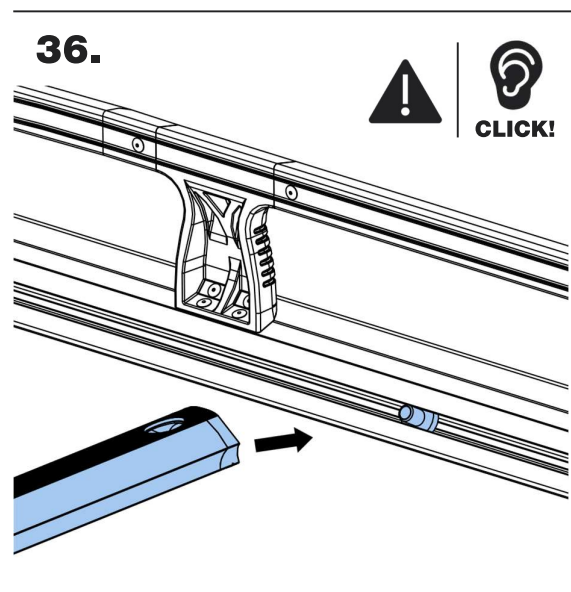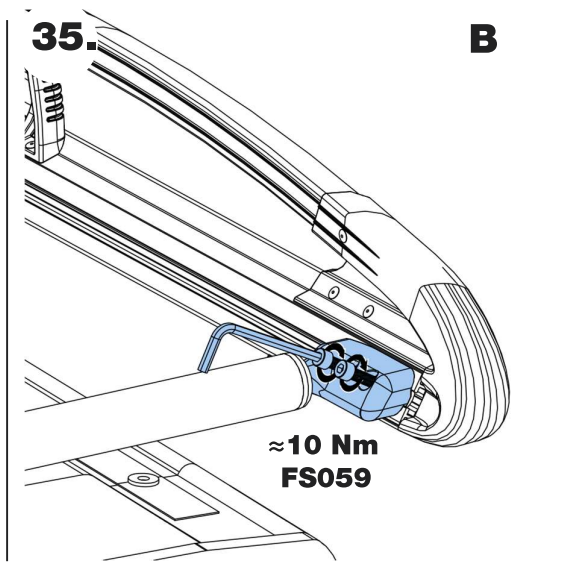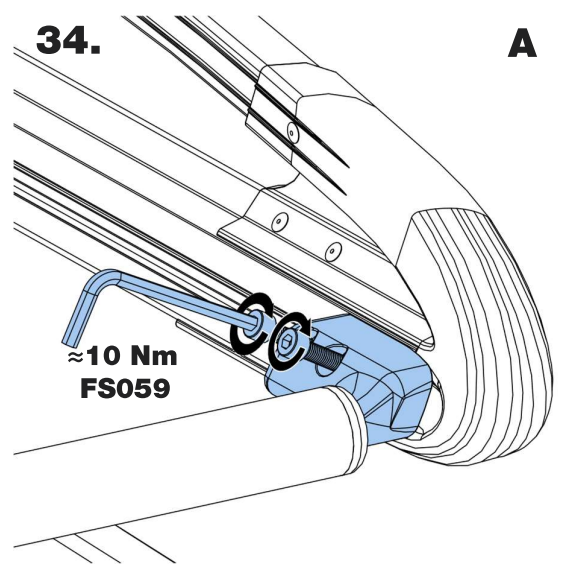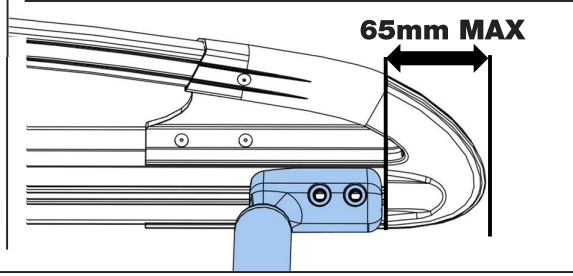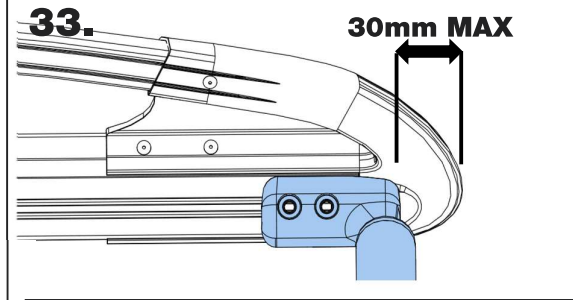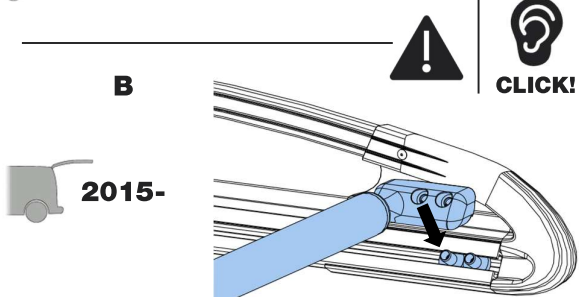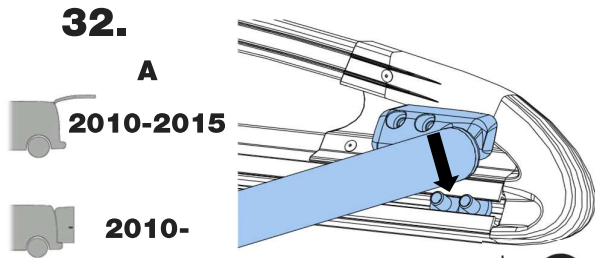

38.

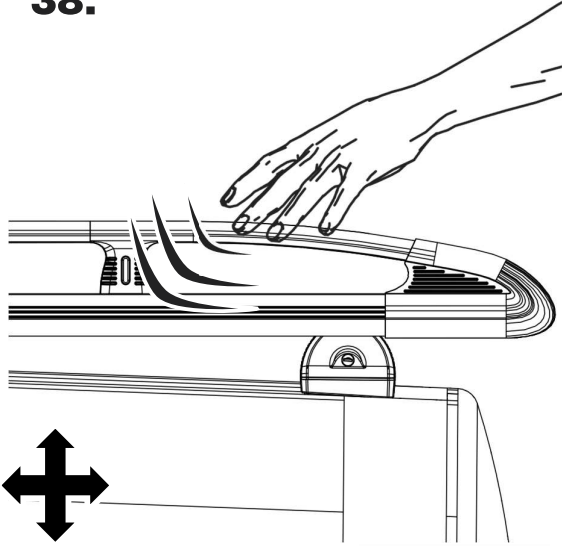

39.

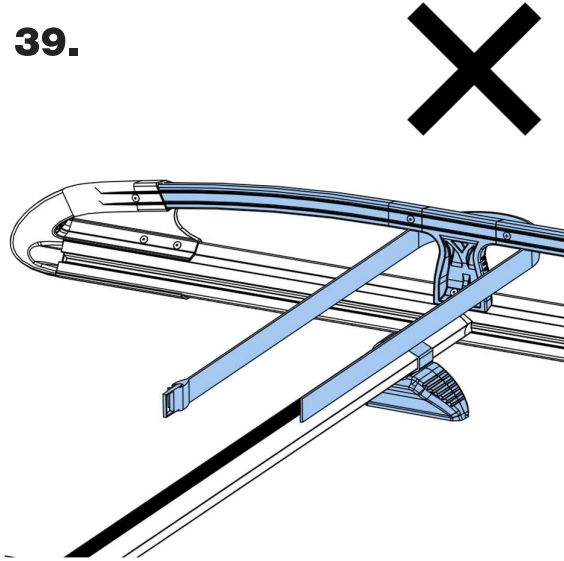

40.

