







MC3PR/FL KammBar

Instructions


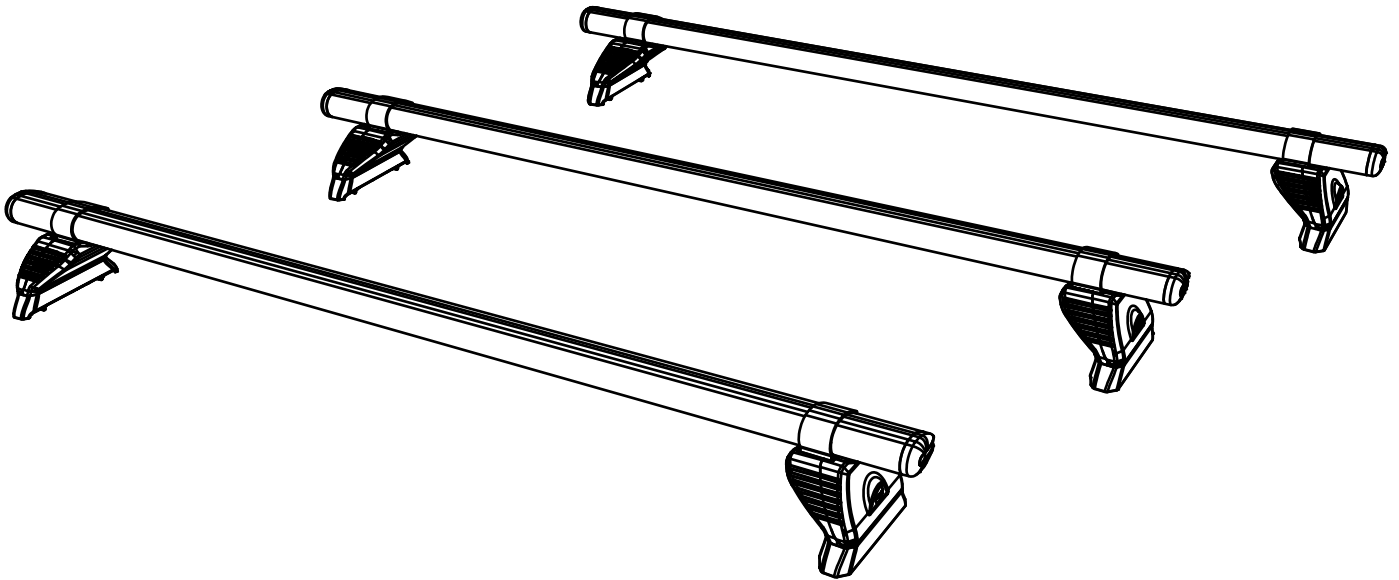


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

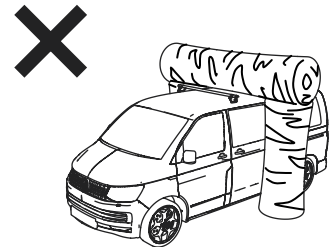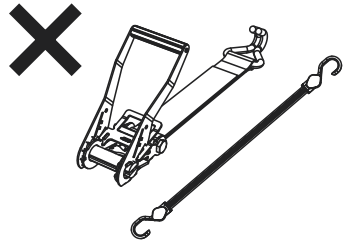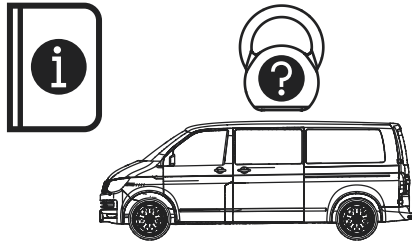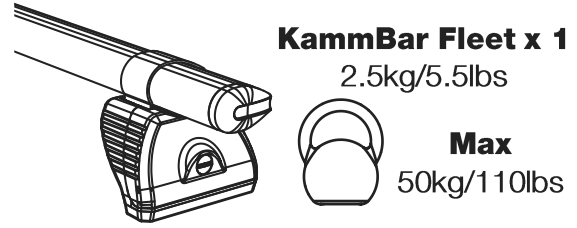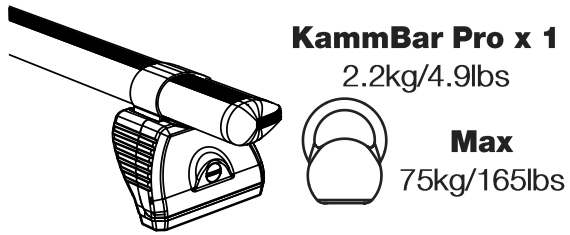


KammBar Pro

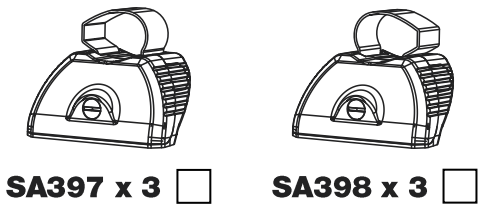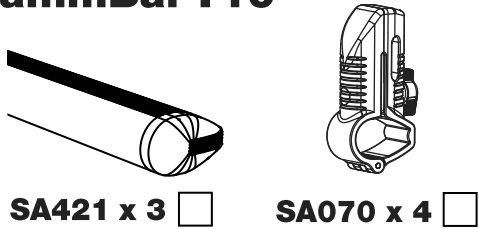


KammBar Fleet

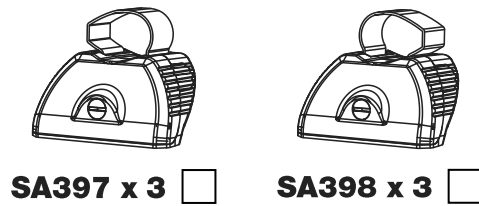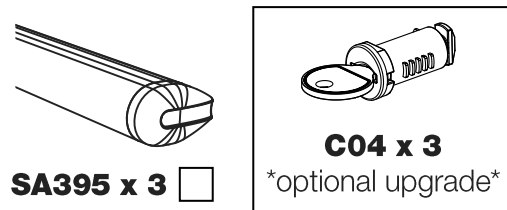


Fitting Kit

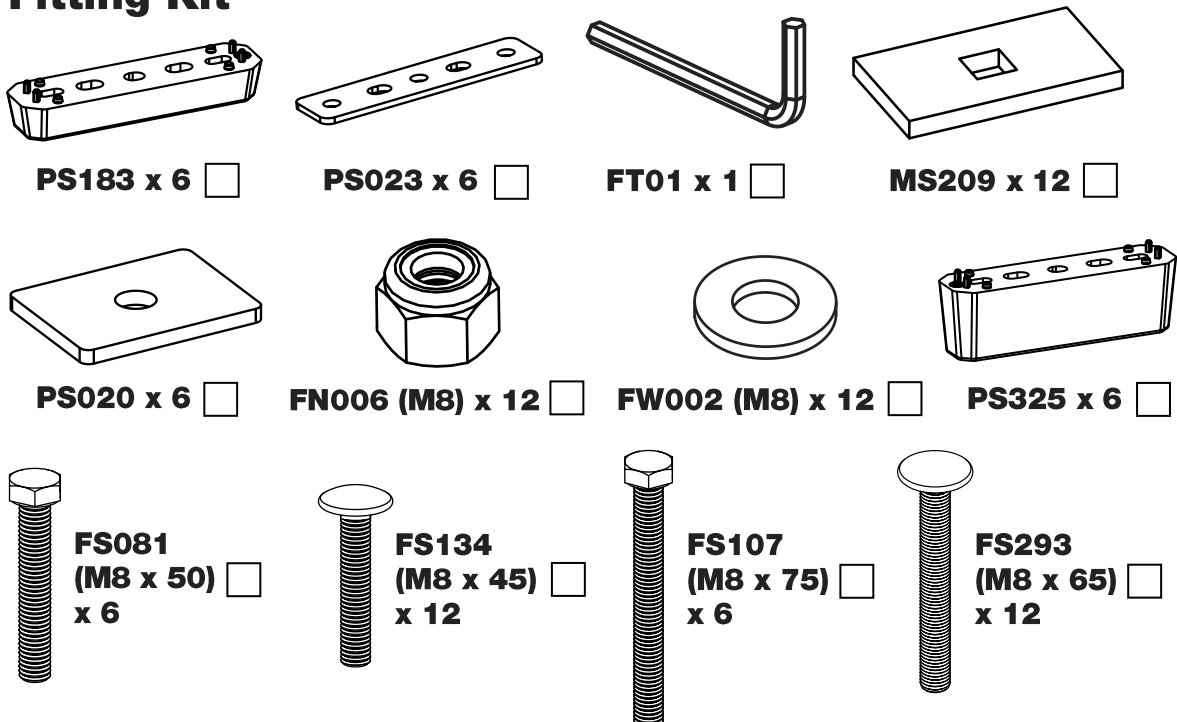


1.

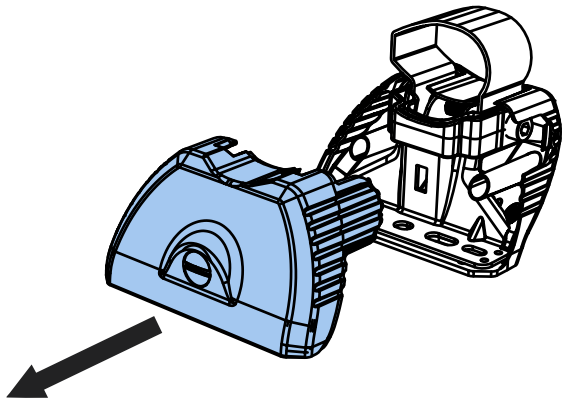


2.

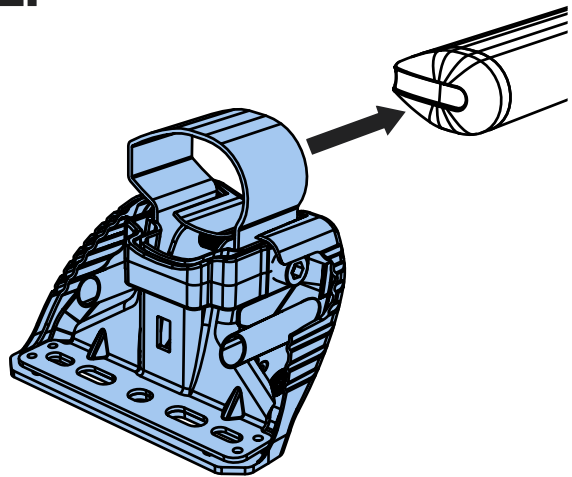


3.

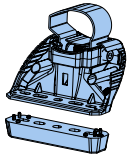


SA397
PS183/PS325

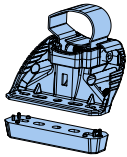


SA397
PS183/PS325

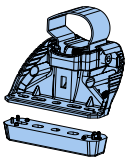


SA397
PS183/PS325

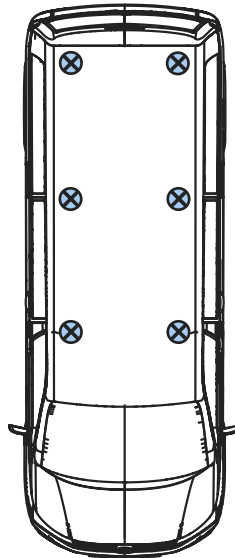


SA398
PS183/PS325

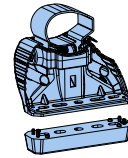


SA398
PS183/PS325

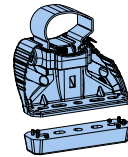


SA398
PS183/PS325

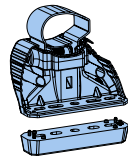


4.




PS325 = KK099






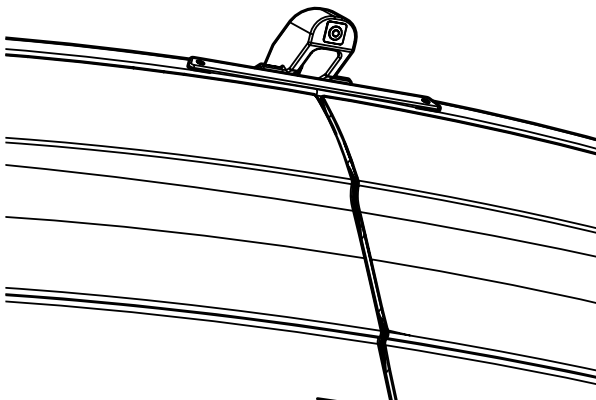


5.





PS183 = KK076

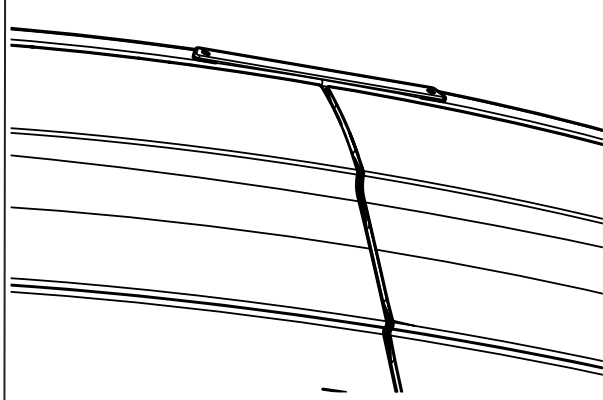


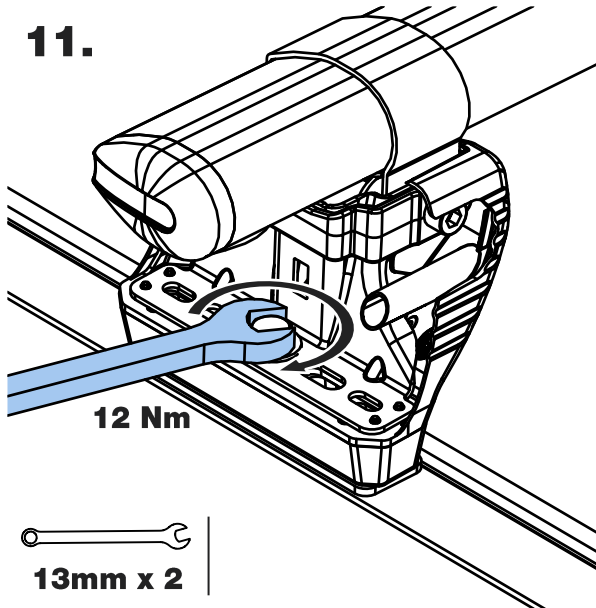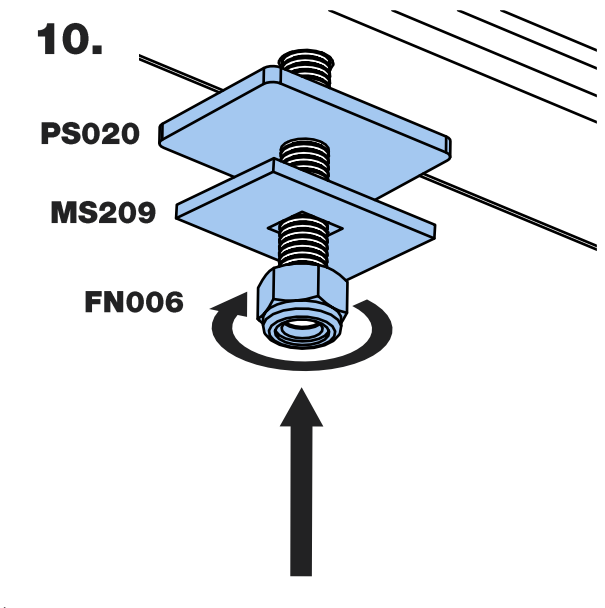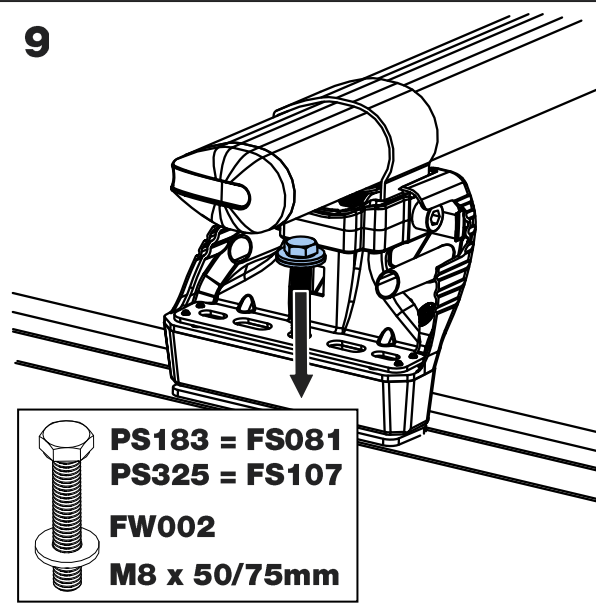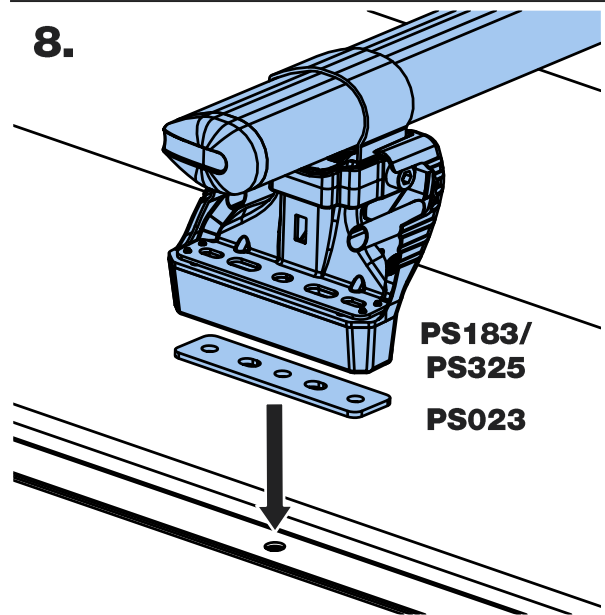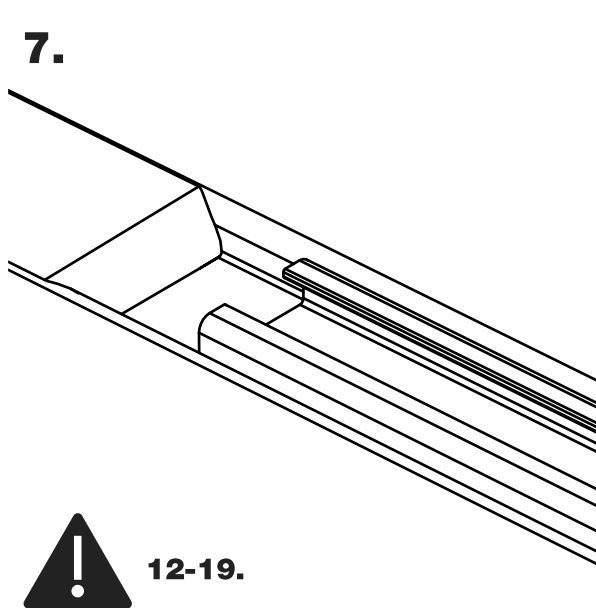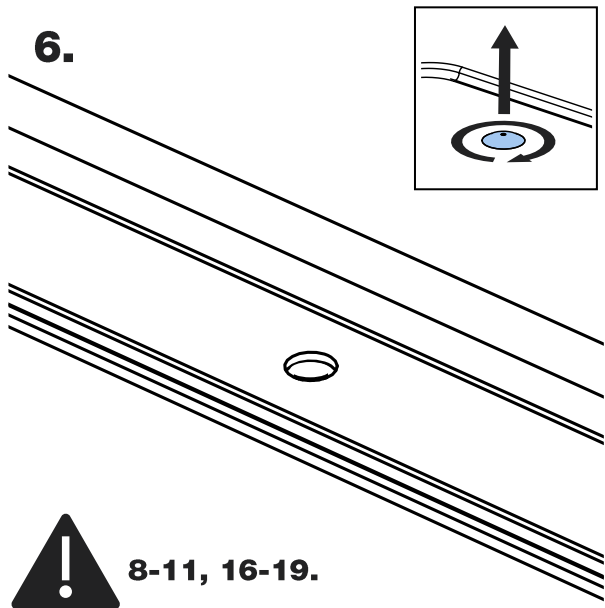


12.

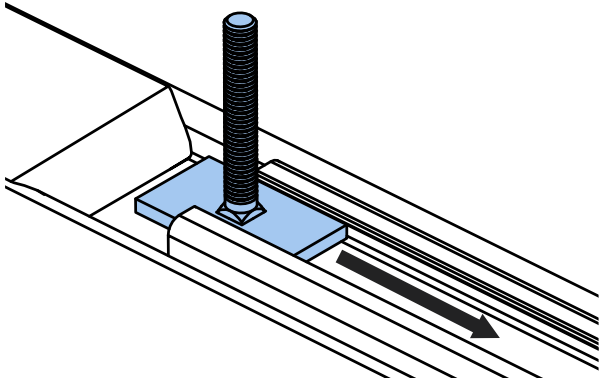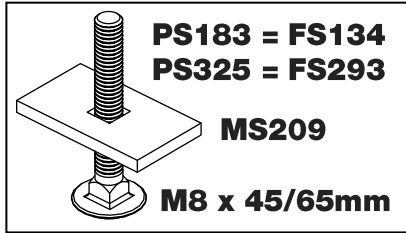


13.

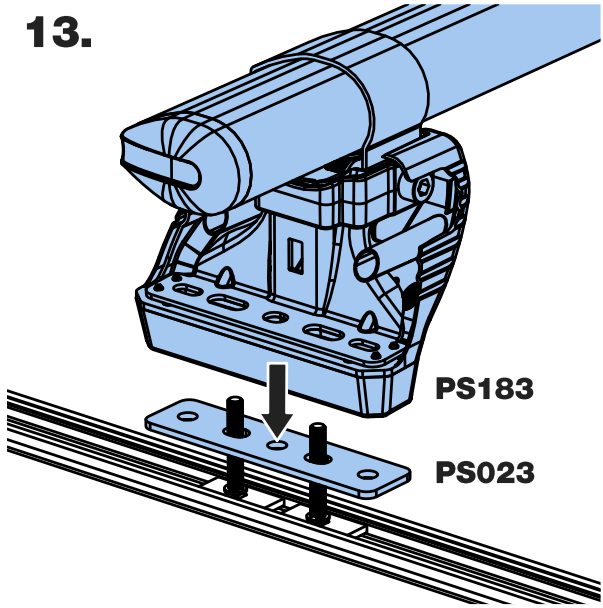


14.

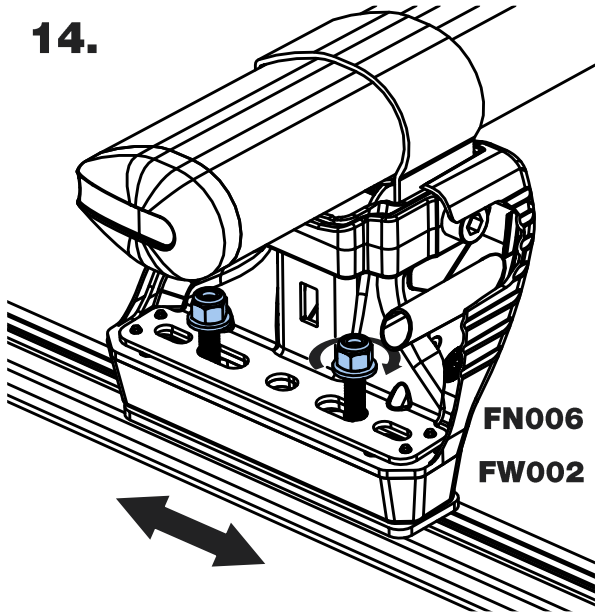


15.

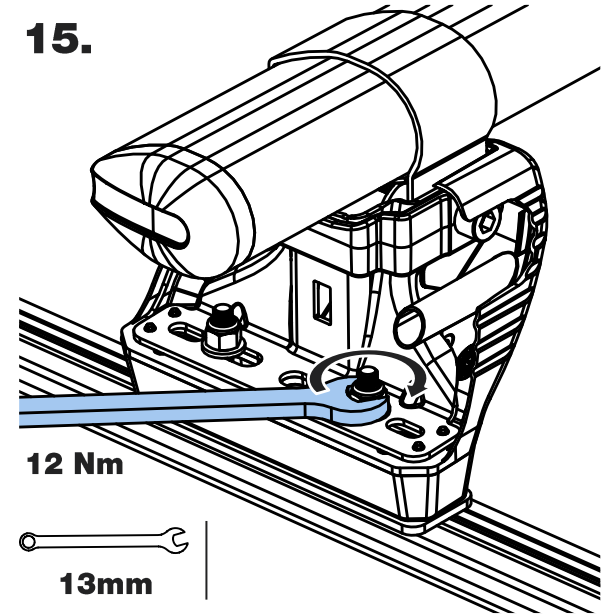


16.

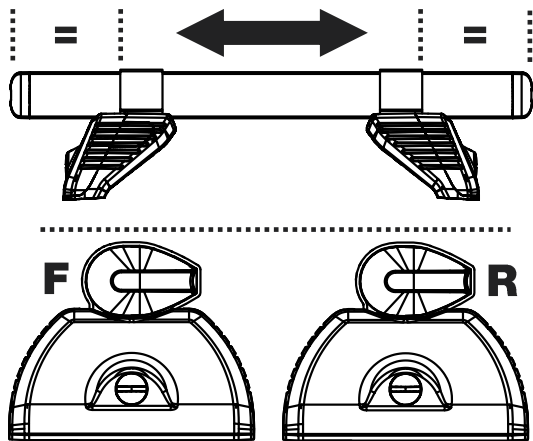

17.

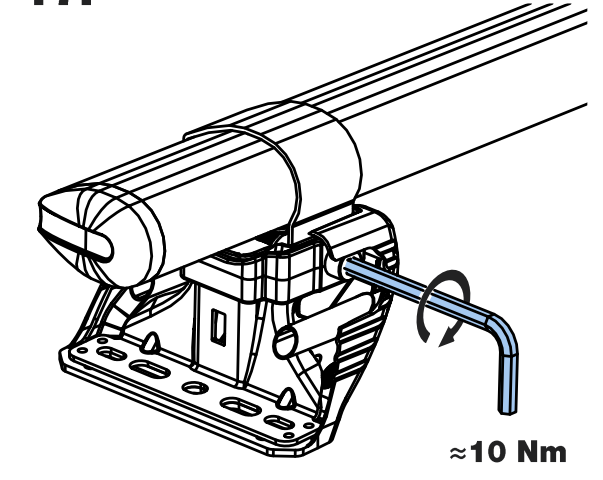

18.

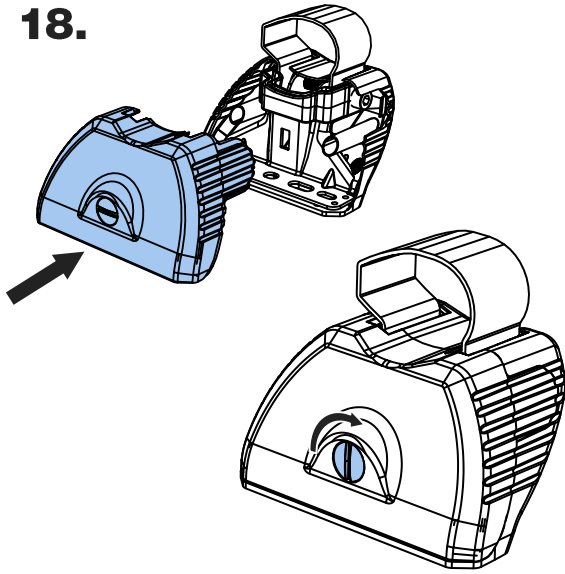

19.

