







# MV3PR/FL KammBar

## Instructions


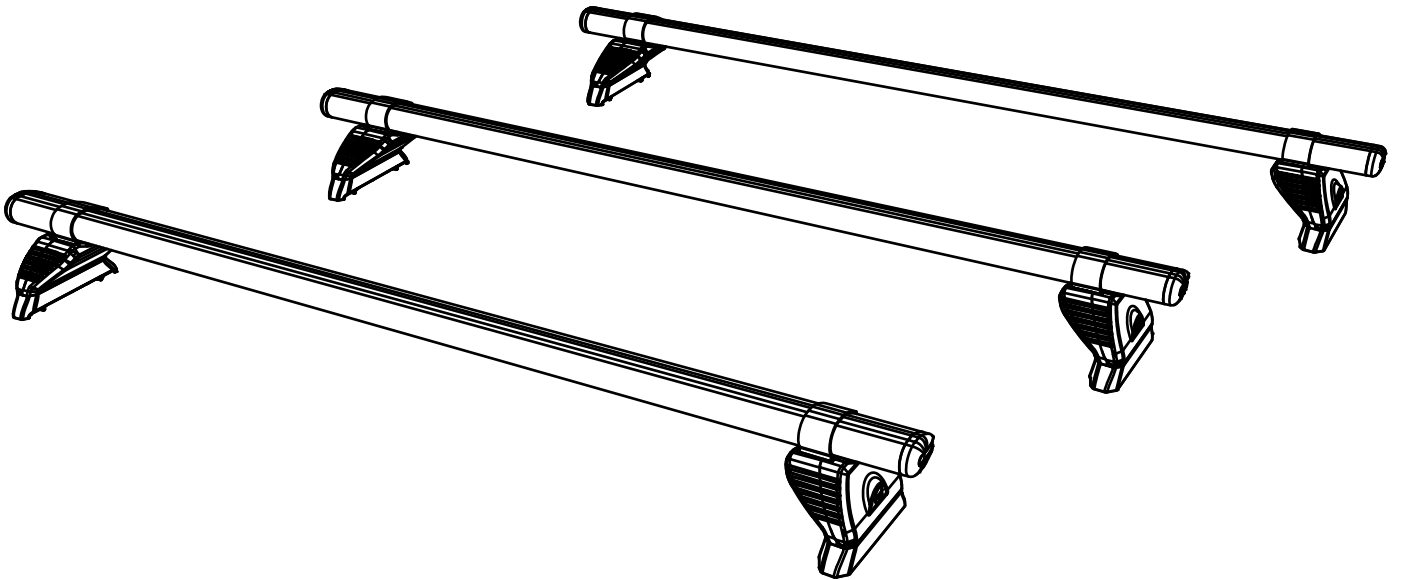


**CITY CRASH** (✓)



According to ISO/ PAS 11154:2006

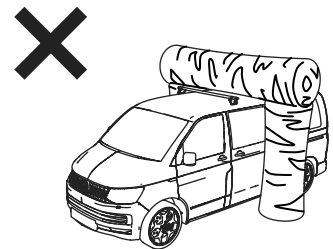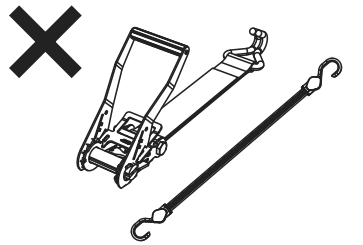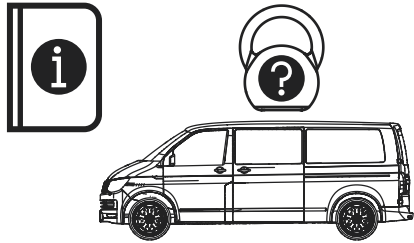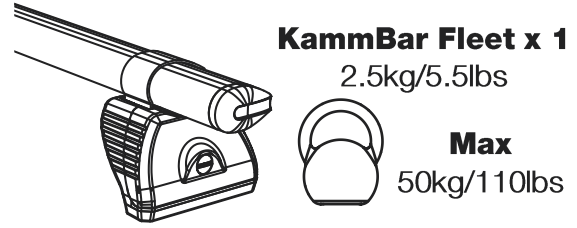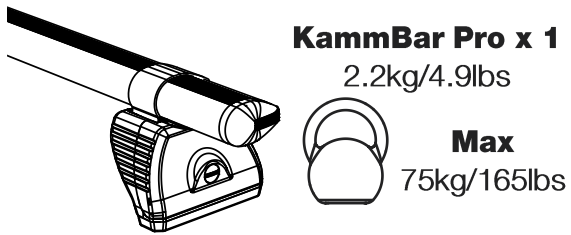




### KammBar Pro

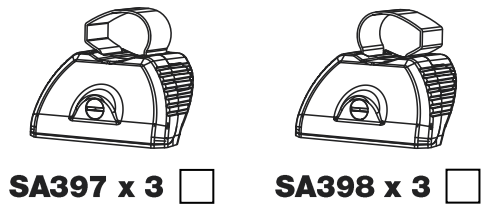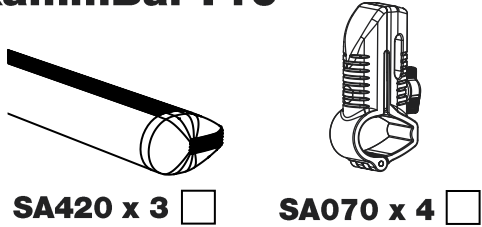


### KammBar Fleet

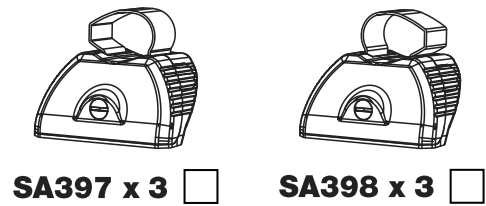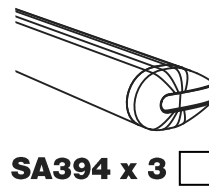


### Fitting Kit

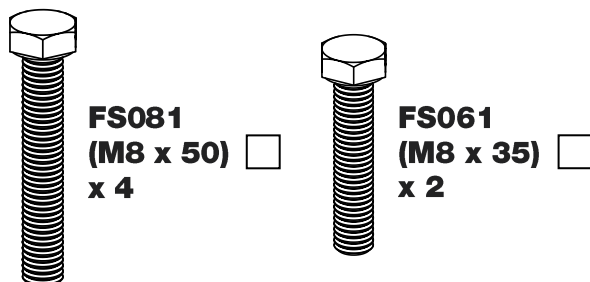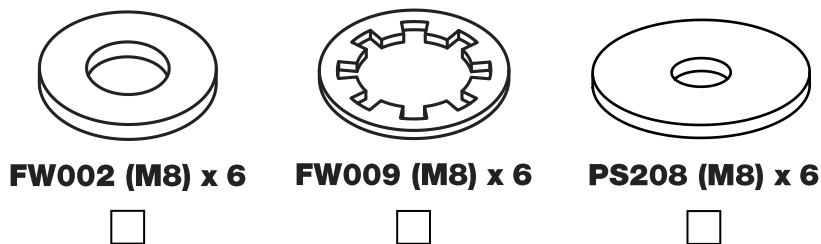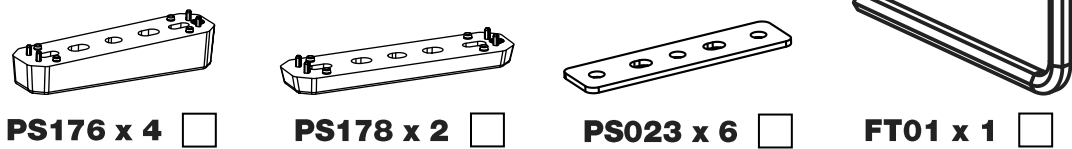


1.

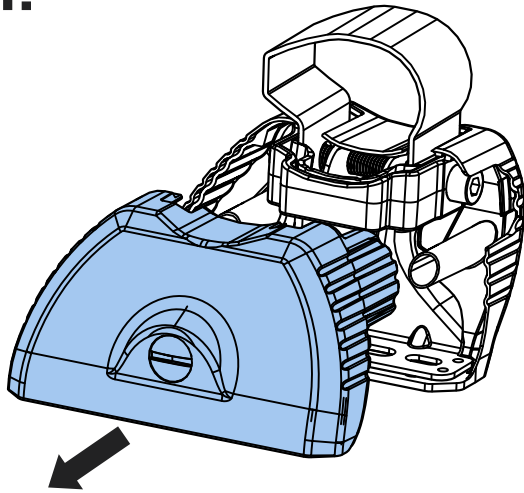


2.

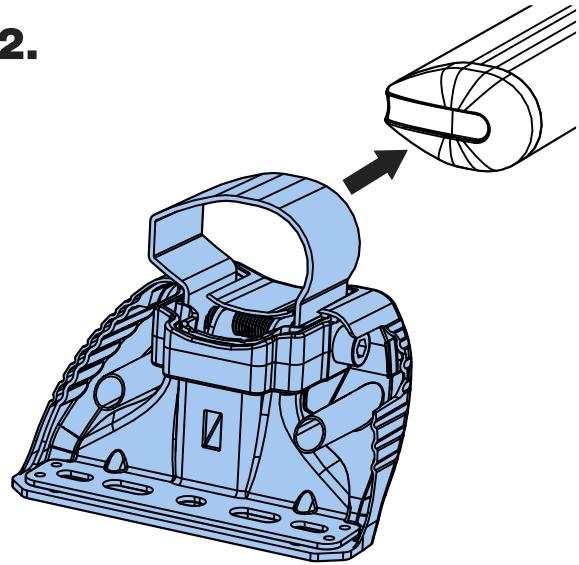


3.




SA397  
PS176




SA397  
PS178




SA397  
PS176

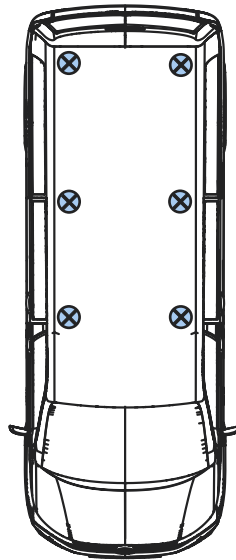


SA398  
PS176




SA398  
PS178




SA398  
PS176




4.

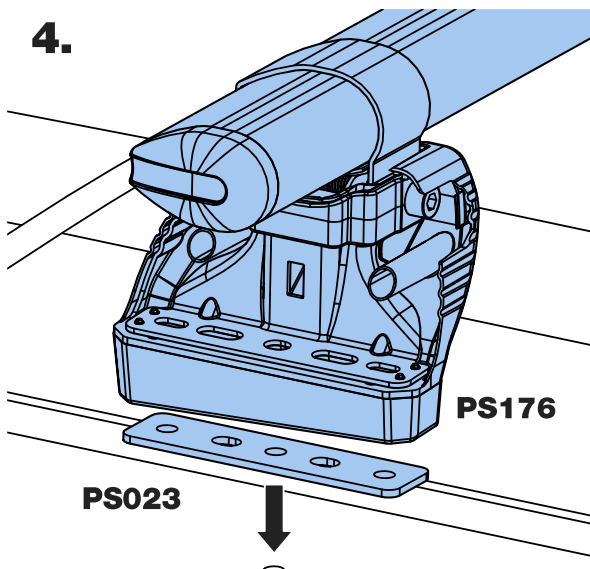


5.

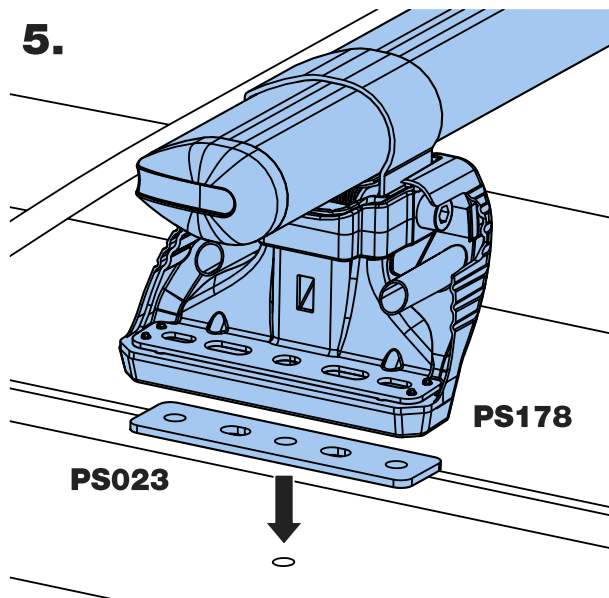


6.

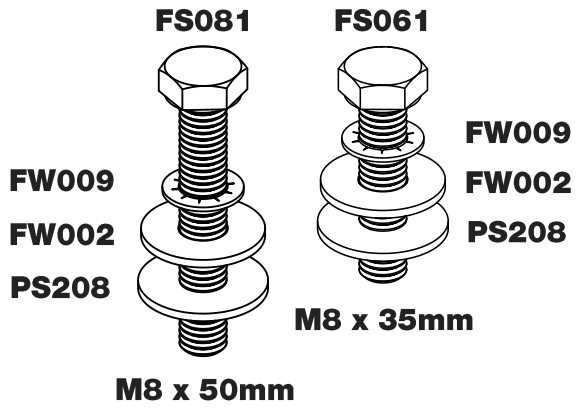


7.

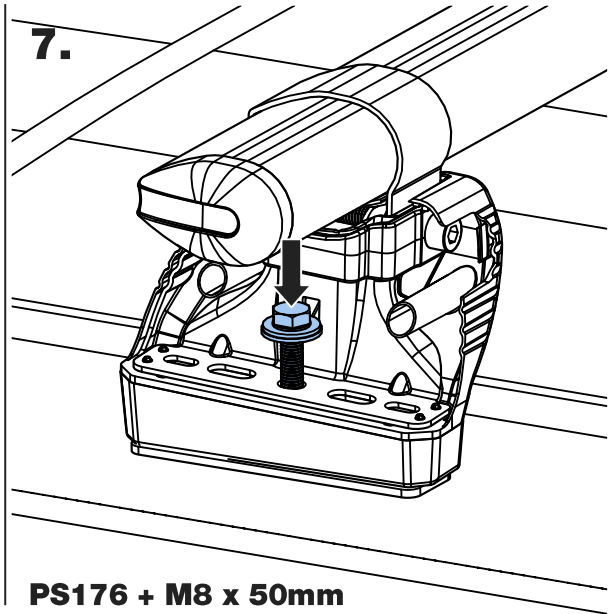


8.

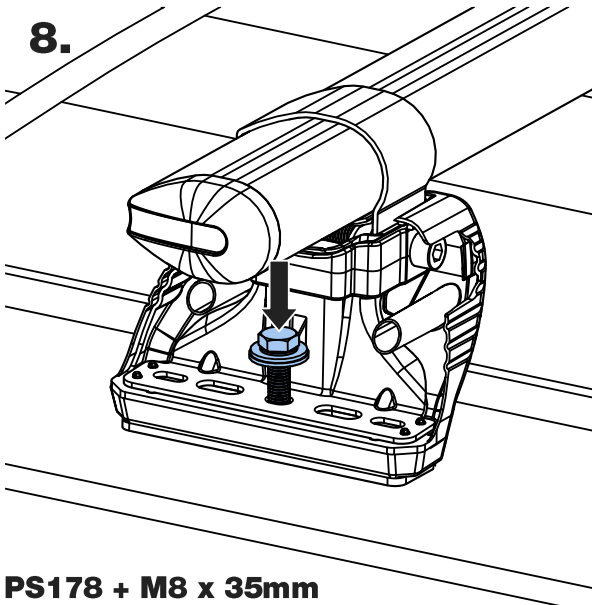


9.

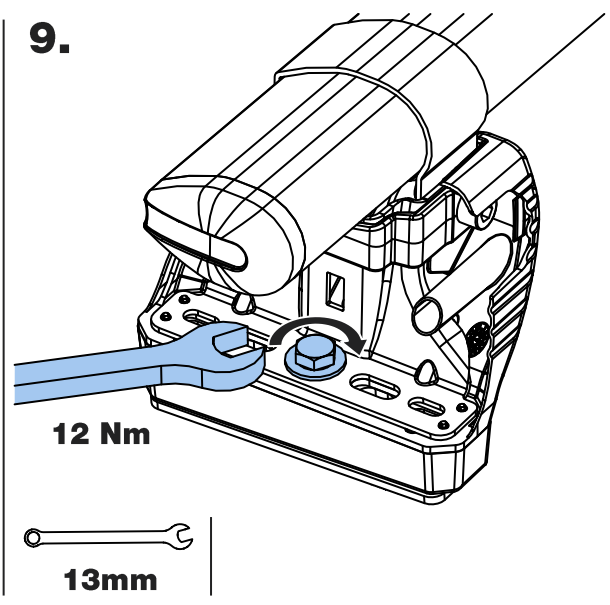


10.

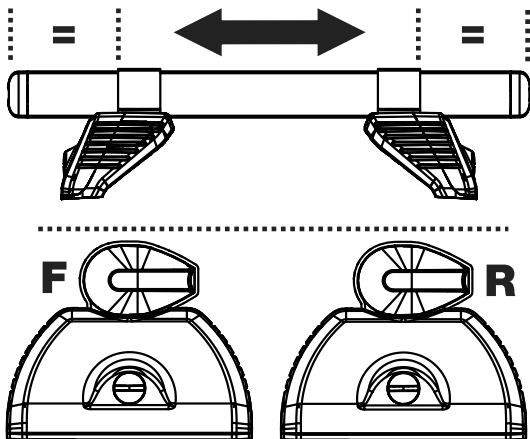

11.

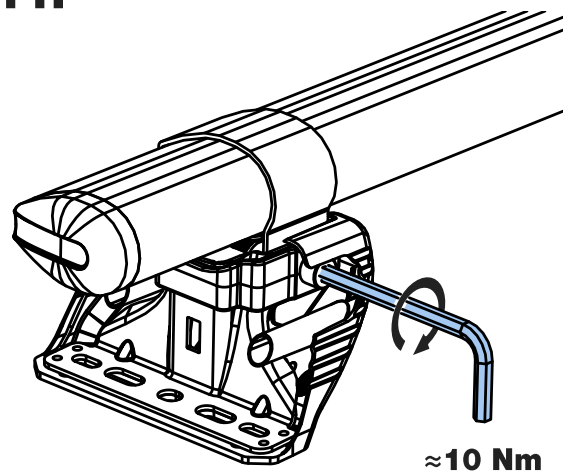

**12.**

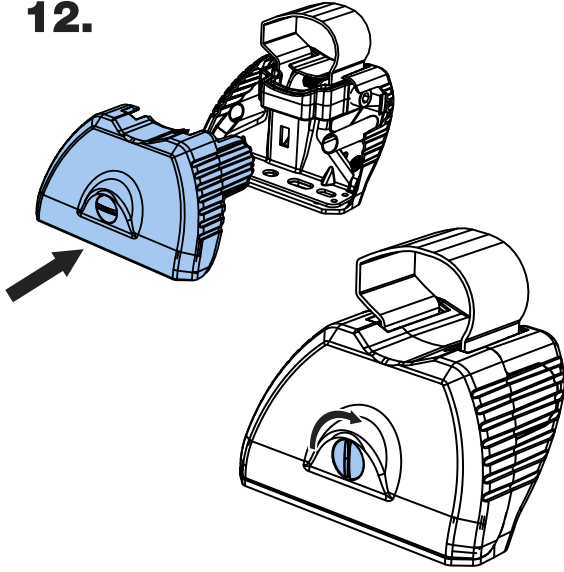

**13.**

