

Art. **N30413**

VOLKSWAGEN CADDY

2000
01/21 →

VOLKSWAGEN CADDY LIFE

2000
01/21 →



**VOLKSWAGEN CADDY
MAXI**

2000
01/21 →

**VOLKSWAGEN CADDY
MAXI LIFE**

2000
01/21 →


KIT x6

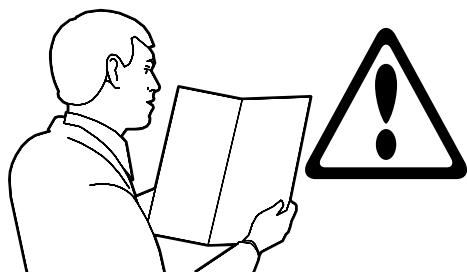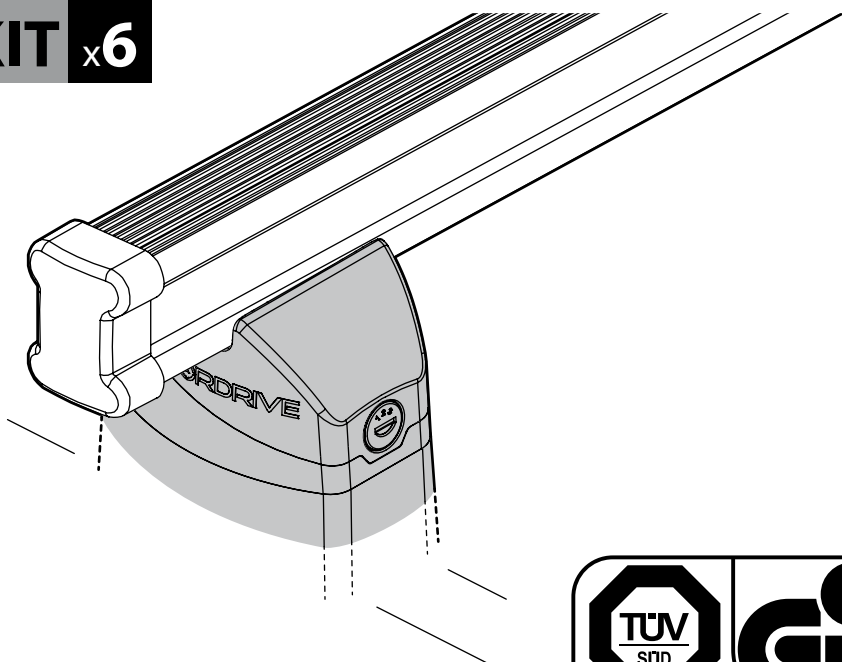

- ① ADATTO PER
- Ⓒ SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA

**NORDRIVE
KARGO SERIES**

- ① ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓗ MONTAGE-INSTRUCTIES
- Ⓒ MONTERINGSANVISNING
- Ⓕ ASENNUSOHJE
- Ⓔ PAIGALDUSJUHEND
- Ⓗ STIPRINĀŠANAS INSTRUKCIJA
- Ⓕ PRITVIRTINIMO INSTRUKCIJOS
- Ⓖ INSTRUKCJA MONTAŻU
- Ⓒ Инструкции по установке
- Ⓕ NÁVOD NA MONTÁŽ
- Ⓒ NÁVOD NA MONTÁŽ
- Ⓕ NAVODILA ZA PRITRJEVANJE
- Ⓖ UPUTA ZA SASTAVLJANJE
- Ⓗ A FELSZERELÉS MÓDJA
- Ⓖ Οδηγίες συναρμολόγησης
- Ⓕ MONTAJ TALIMATLARL
- Ⓖ ИHCTPYKЦИИ 3A MOHTAЖ
- Ⓒ UPUTSTVA ZA MONTAŽU

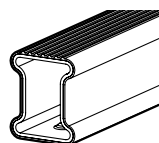


Kargo
ACCIAIO
Steel

- ① BARRE KARGO
- Ⓒ KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO

150cm

Art. **N10010** x3

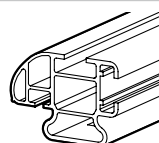


Kargo-Plus
ALLUMINIO
Aluminium

- ① BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS


150cm

Art. **N10040** x3

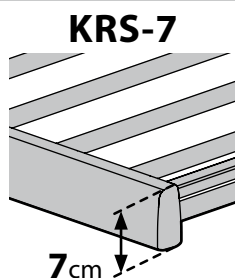

KRS-7

7cm

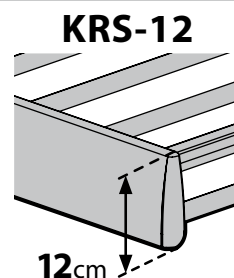


KRS-12

12cm

- ① CESTE PORTATUTTO KRS-7 / KRS-12
- Ⓒ KRS-7 / KRS-12 VAN ROOF RACKS
- Ⓕ GALERIE KRS-7 / KRS-12
- Ⓓ DACHKÖRBEIN KRS-7 / KRS-12
- Ⓔ BACAS KRS-7 / KRS-12

NORDRIVE®





TRANSPORT SOLUTIONS

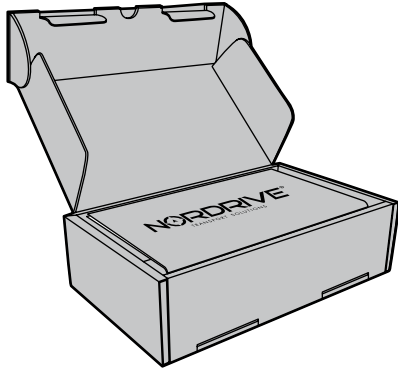










NORDDRIVE®












TRANSPORT SOLUTIONS



Art. **N30413**

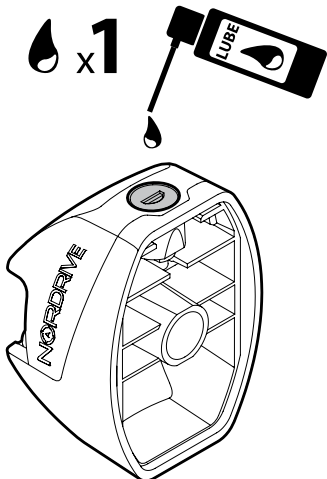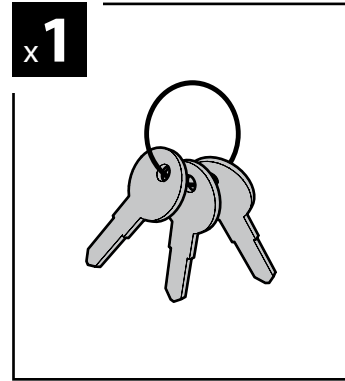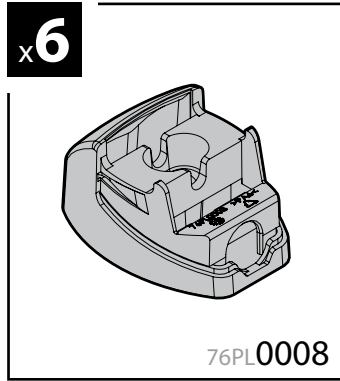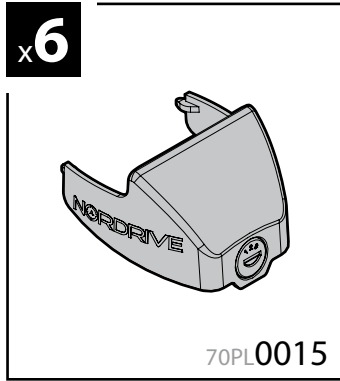

1 x Year

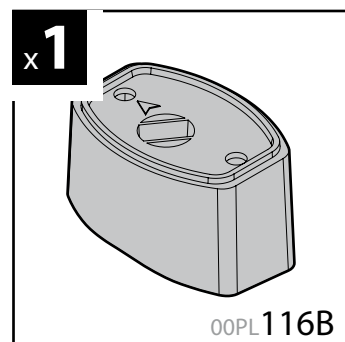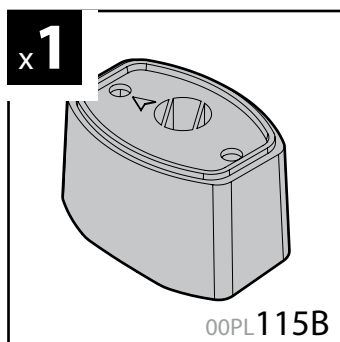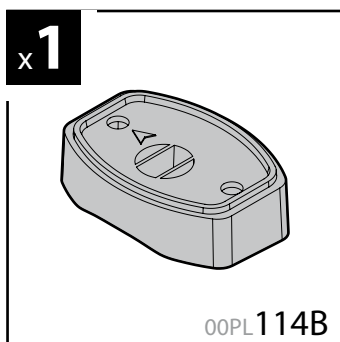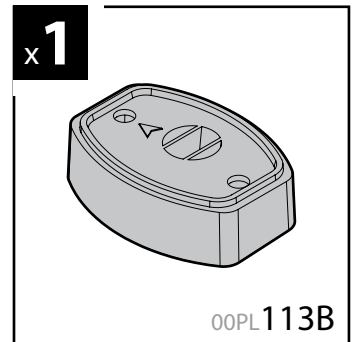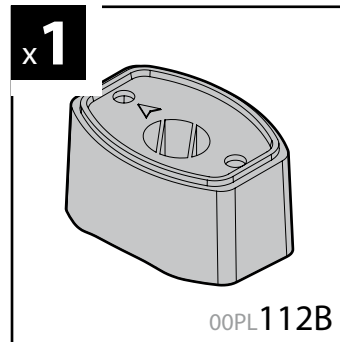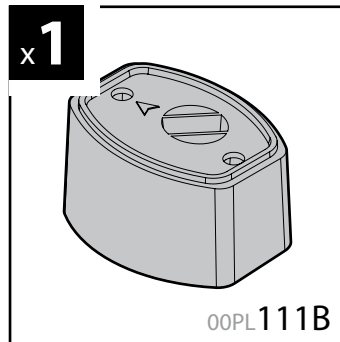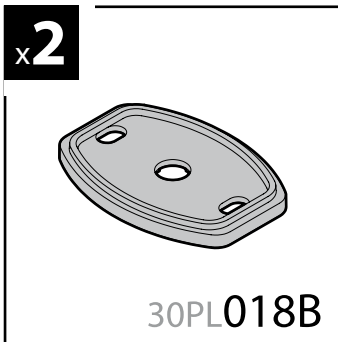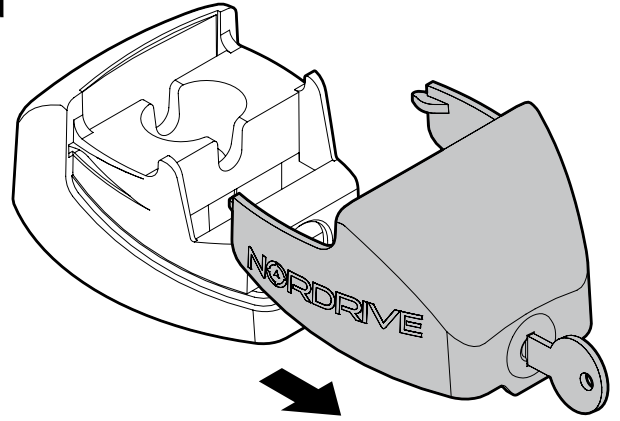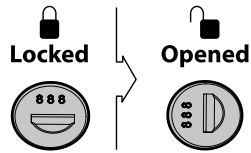

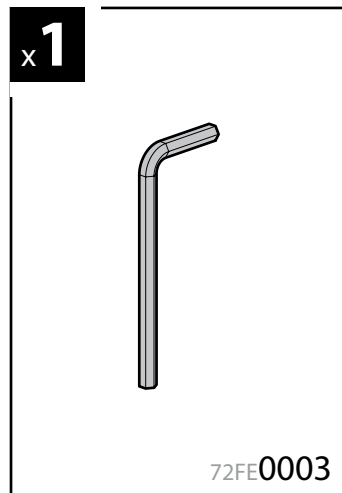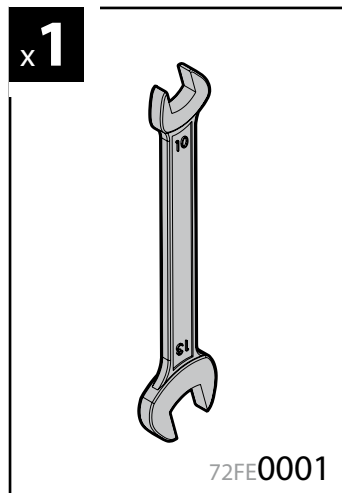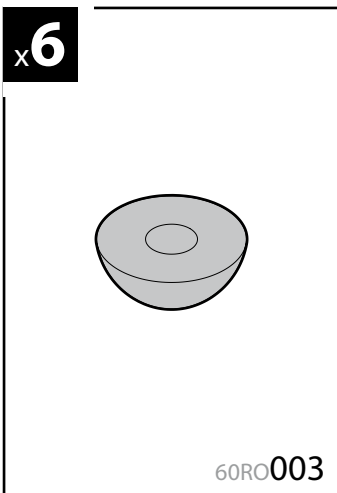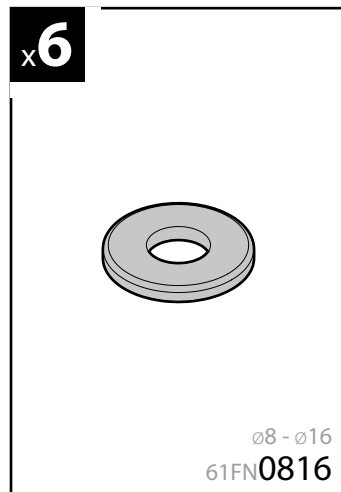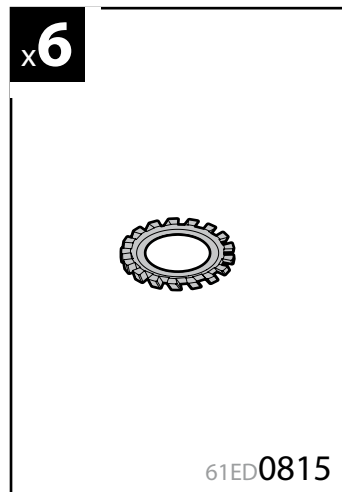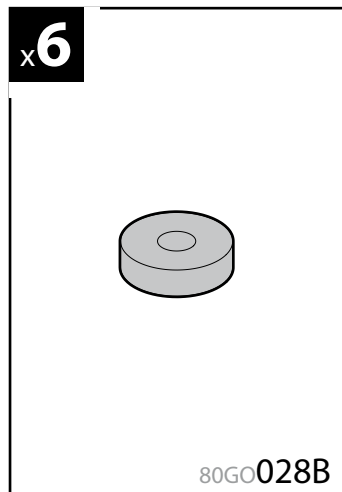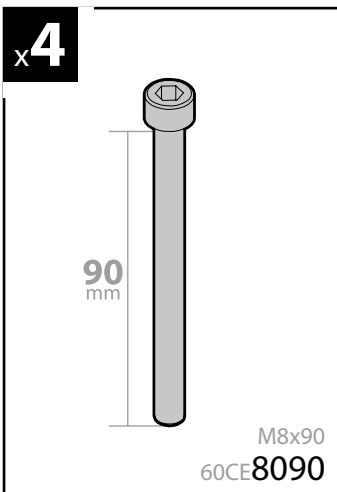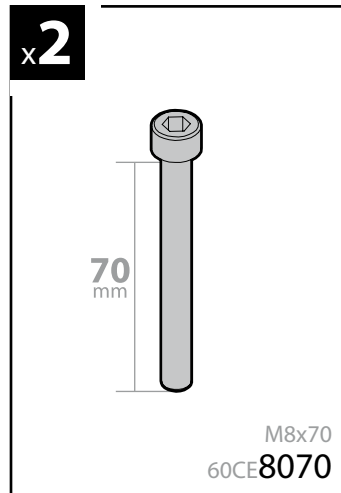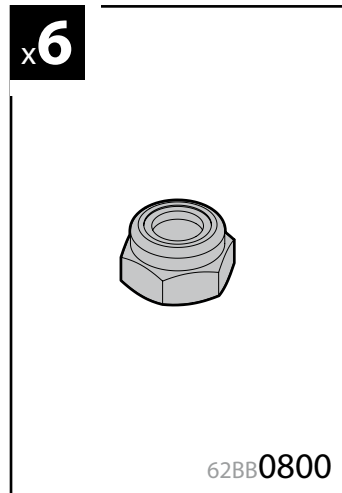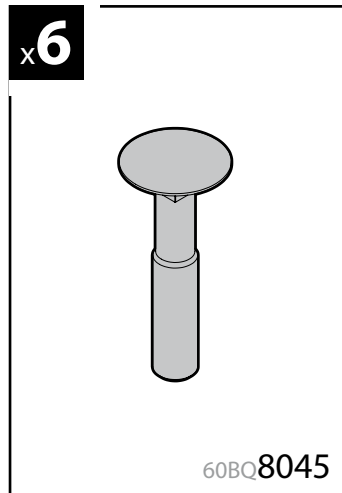
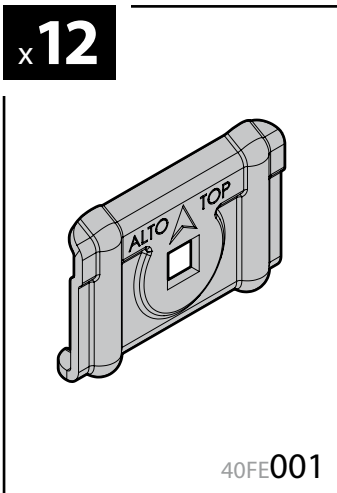


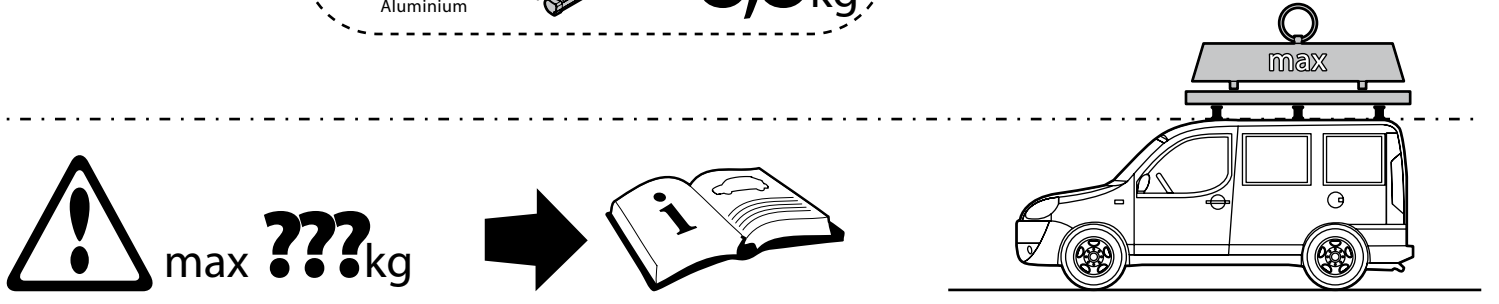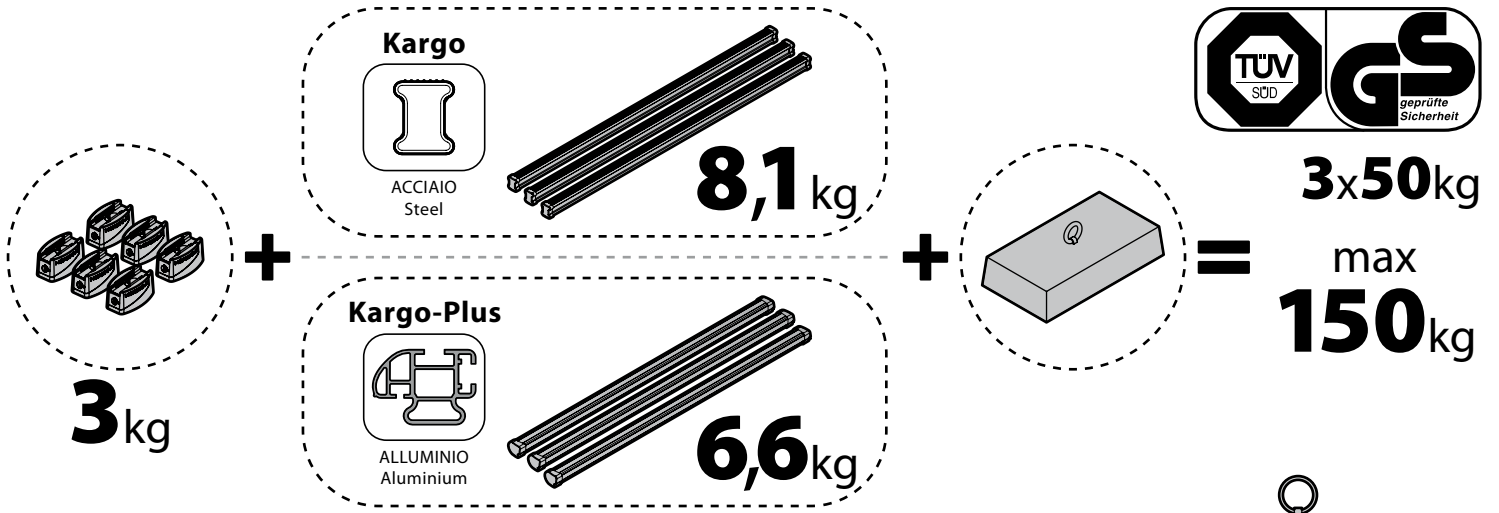

SAFETY REGULATIONS

Safety regulations

NORME DI SICUREZZA

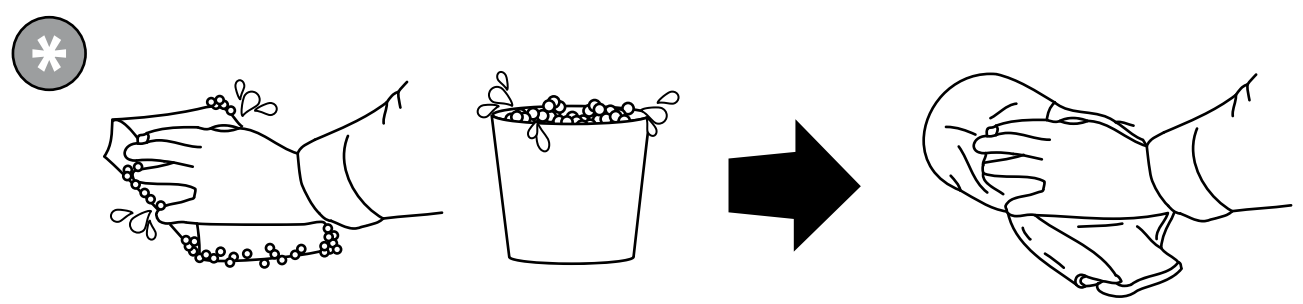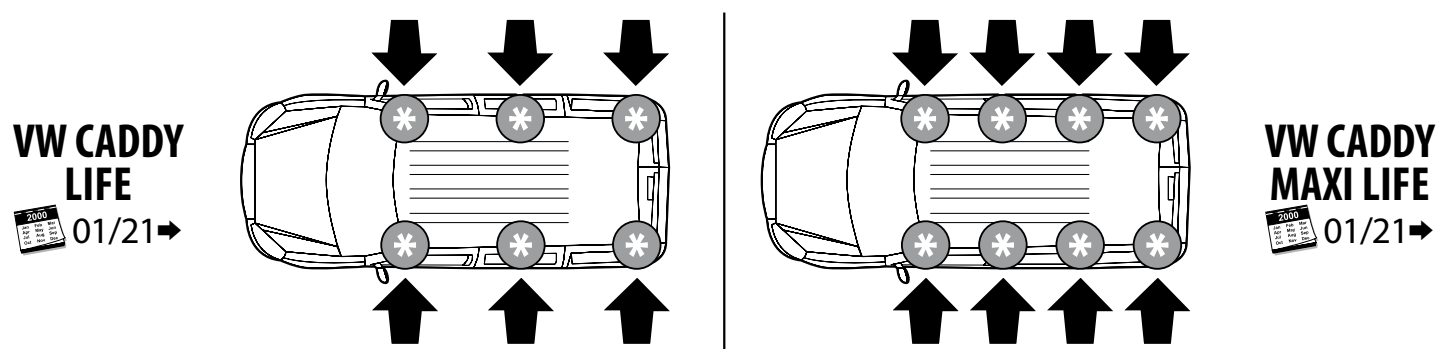

(I) ISTRUZIONI DI MONTAGGIO
 (GB) FITTING INSTRUCTIONS
 (D) MONTAGEANLEITUNG
 (F) INSTRUCTIONS DE MONTAGE
 (E) INSTRUCCIONES DE MONTAJE
 (P) INSTRUÇÕES DE MONTAGEM
 (NL) MONTAGE-INSTRUCTIES
 (S) MONTERINGSANVISNING


(FIN) ASENNUSOHJE
 (EST) PAIGALDUSJUHEND
 (LAT) STIPRINĀŠANAS INSTRUKCIJA
 (LT) PRITVIRTINIMO INSTRUKCIJOS
 (PL) INSTRUKCJA MONTAŻU
 (RUS) Инструкции по установке
 (CZ) NÁVOD NA MONTÁŽ
 (SK) NÁVOD NA MONTÁŽ

(SLO) NAVODILA ZA PRITRJEVANJE
 (HR) UPUTA ZA SASTAVLJANJE
 (H) A FELSZERELÉS MÓDJA
 (GR) Οδηγία συναρμολόγησης
 (TR) MONTAJ TALIMATLARI
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
 (SRB) UPUTSTVA ZA MONTAŽU

1


VOLKSWAGEN CADDY / CADDY LIFE

2000 01/21 →

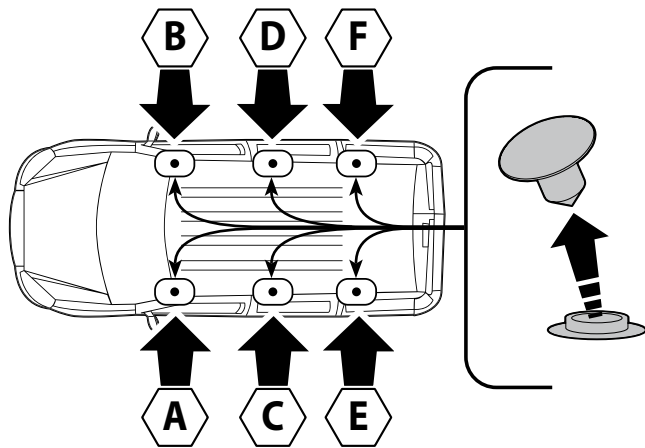


VOLKSWAGEN CADDY MAXI / MAXI LIFE

2000 01/21 →

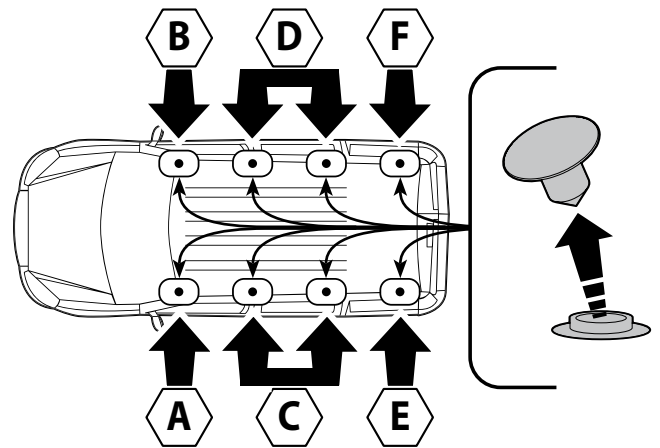


2

A

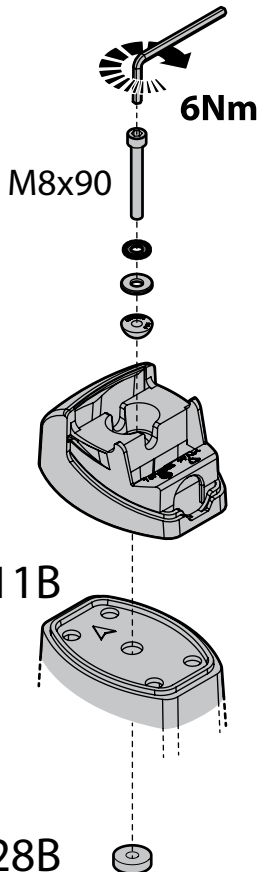


2

B

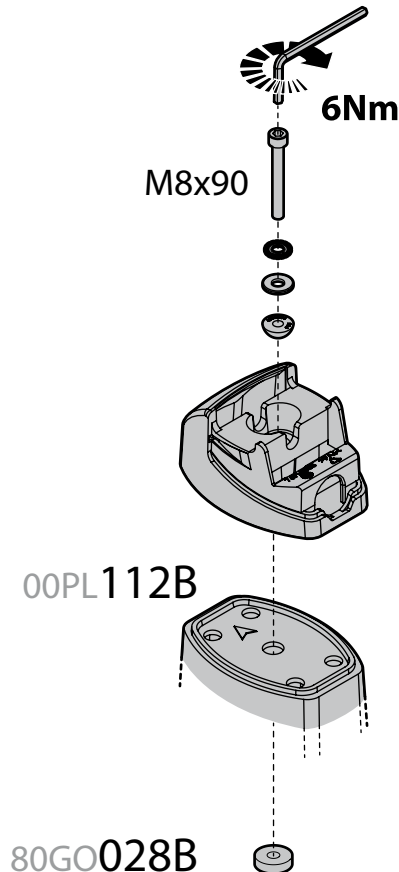


2

C

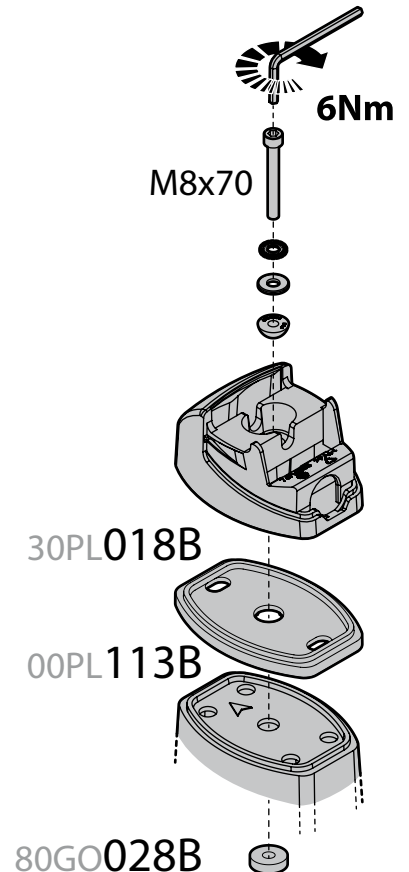


2

D

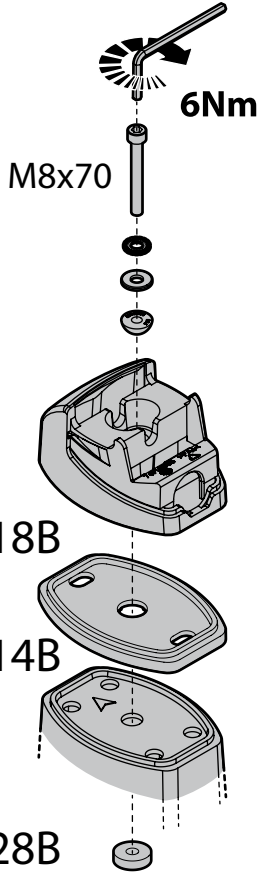


2

E

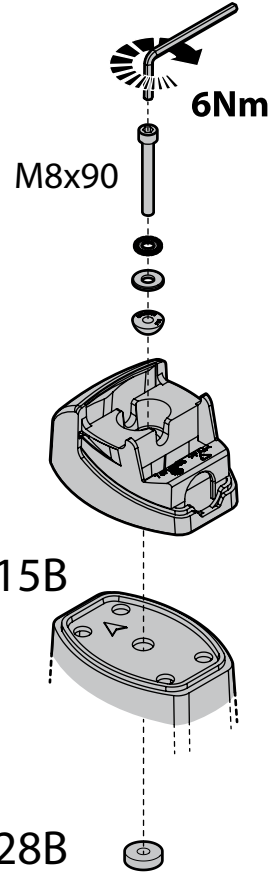

2

F

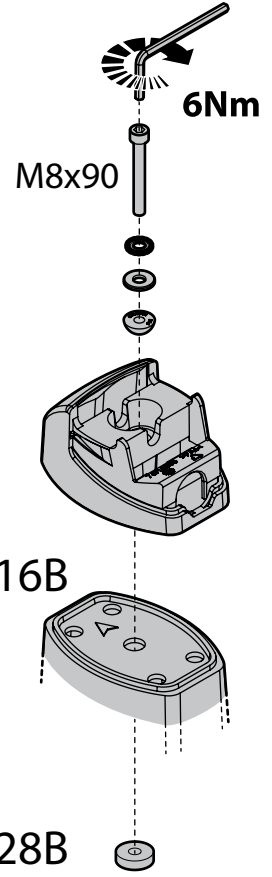



ATTENZIONE WARNING



Kargo

A




ACCIAIO
Steel

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE












Kargo-Plus

B




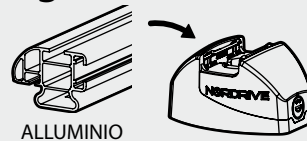


ALLUMINIO
Aluminium





MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

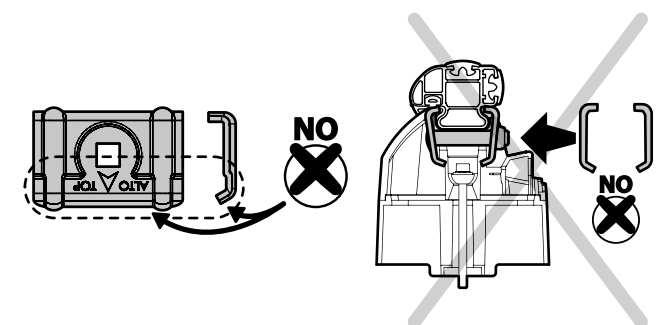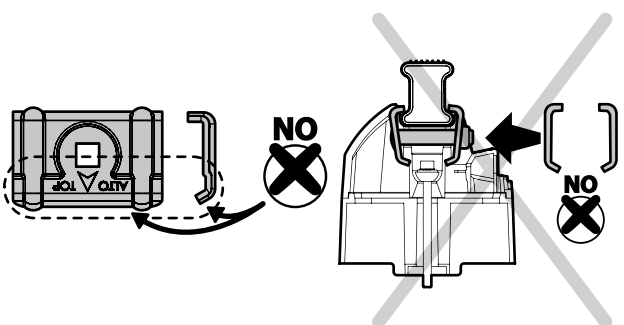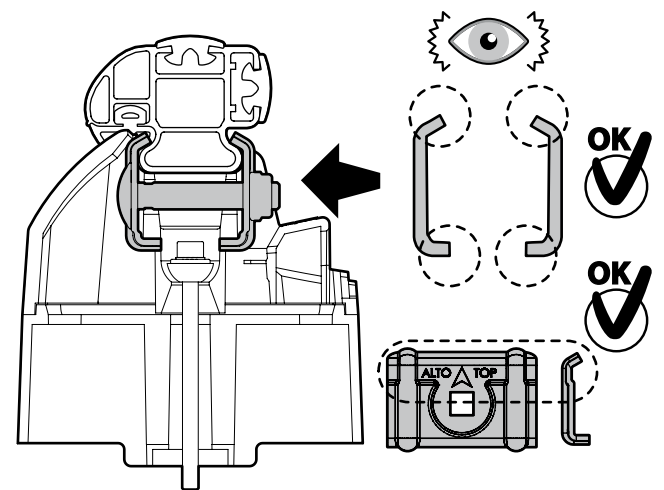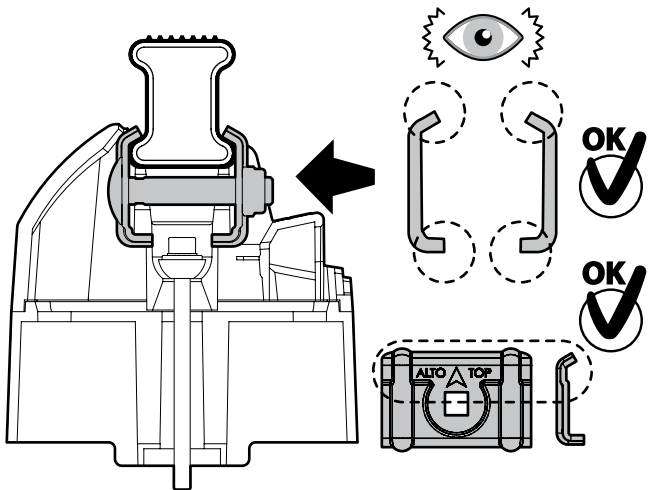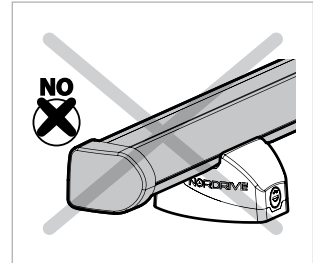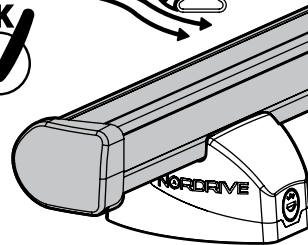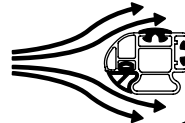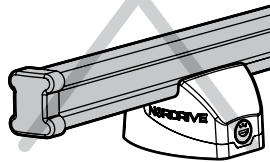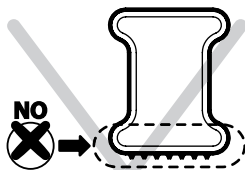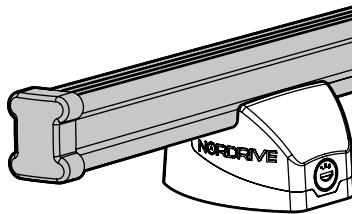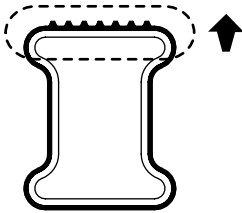

3

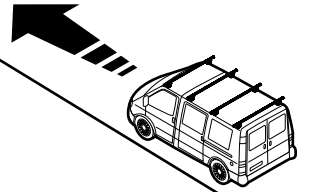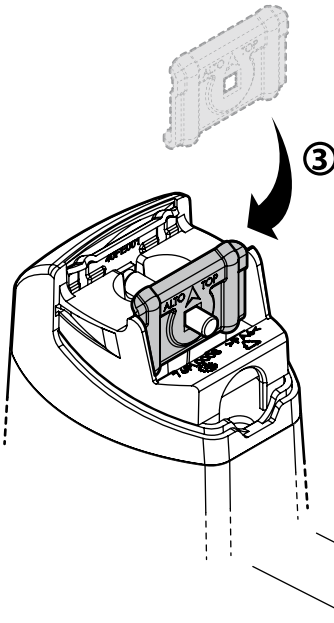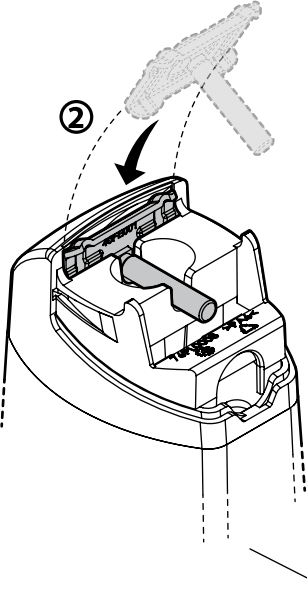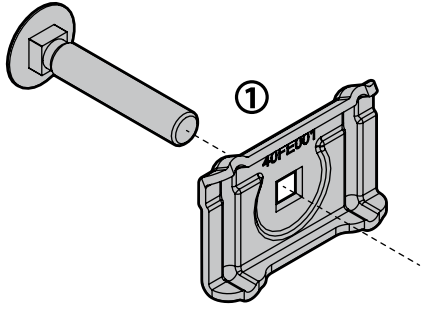


4

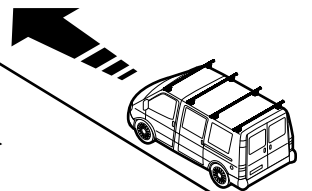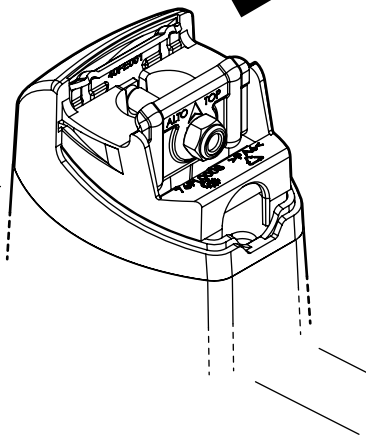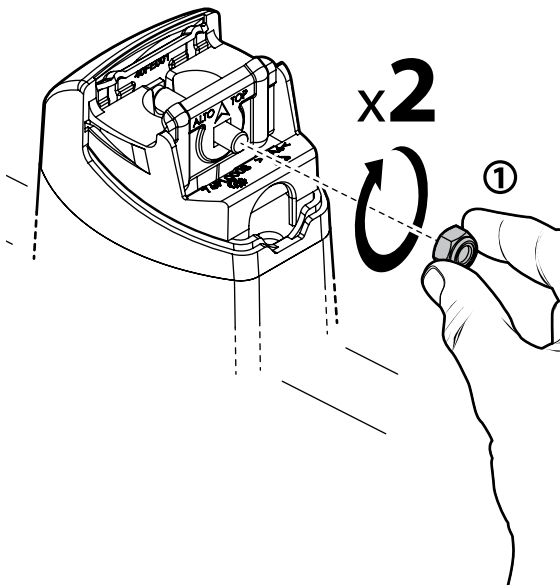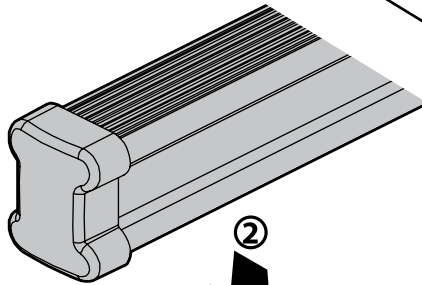


5

A

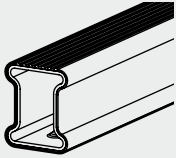

Kargo



ACCIAIO
Steel


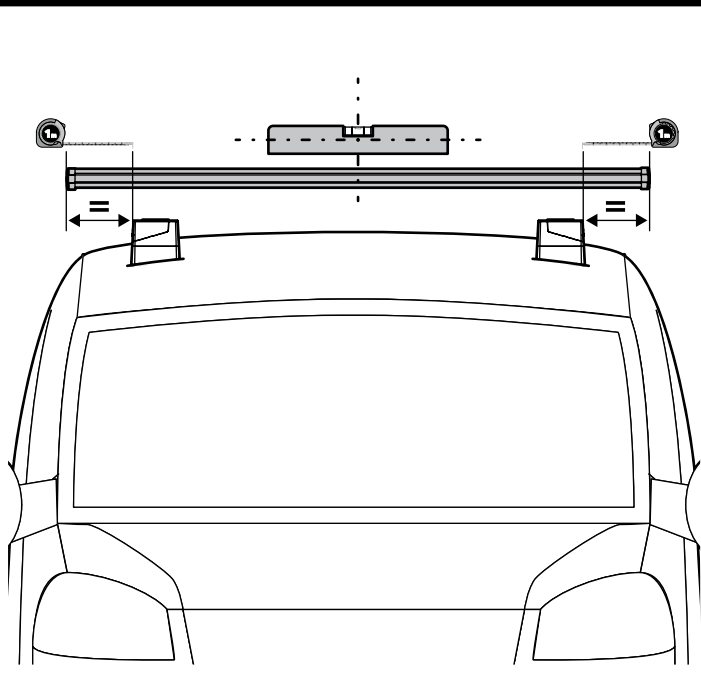



Diagram showing the Kargo steel bar being installed on a car roof. The bar is positioned between two roof rails, and the distance from the bar to the rails is marked with double-headed arrows and equals signs (=).

B



Kargo-Plus

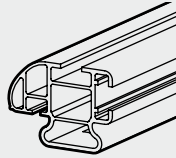

ALLUMINIO
Aluminium

1

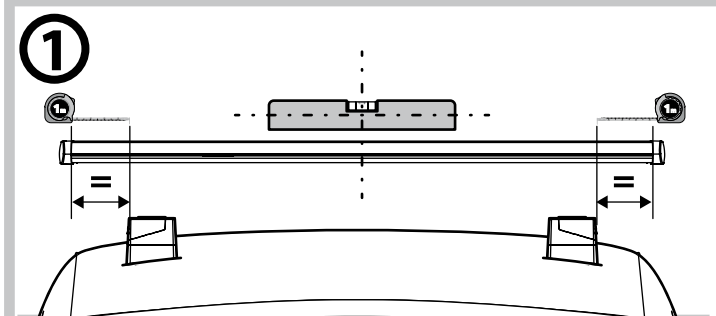


Diagram showing the Kargo-Plus aluminium bar being installed on a car roof. The bar is positioned between two roof rails, and the distance from the bar to the rails is marked with double-headed arrows and equals signs (=).

2

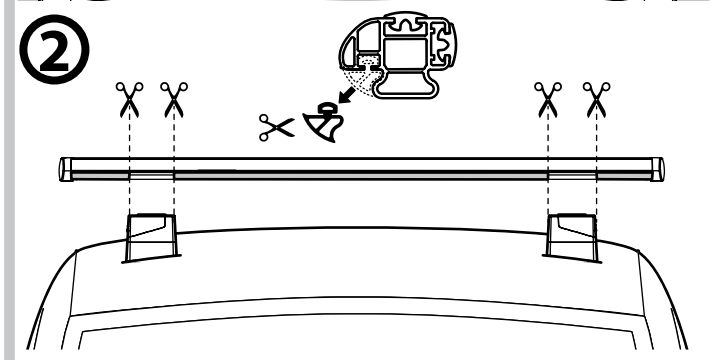


Diagram showing the Kargo-Plus aluminium bar being installed on a car roof. The bar is positioned between two roof rails, and the distance from the bar to the rails is marked with double-headed arrows and equals signs (=). A callout shows a bracket being attached to the bar with scissors.

6

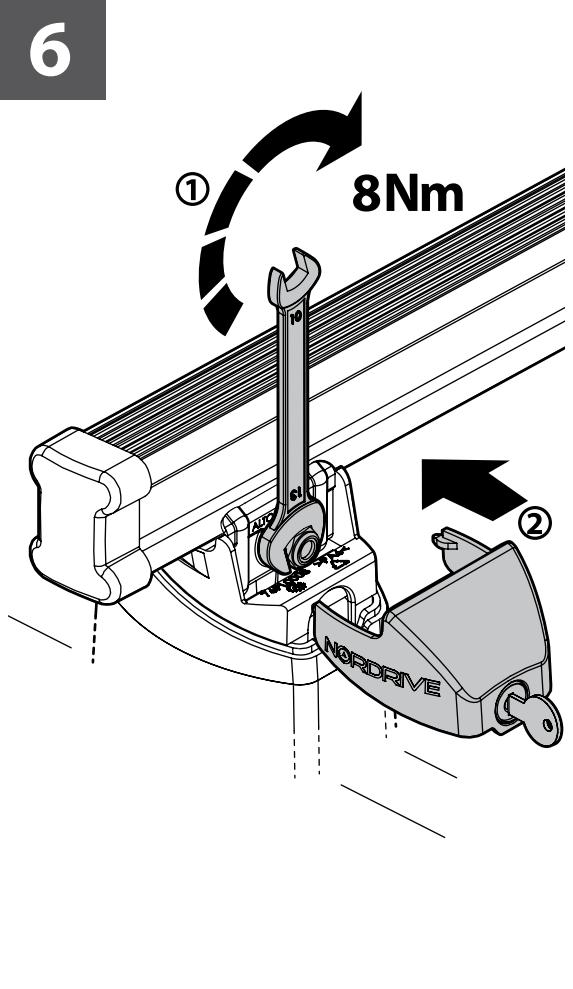


Diagram showing the Kargo-Plus bar locking mechanism. A wrench is used to turn the bar clockwise, indicated by a curved arrow labeled **1** and **8Nm**. A second arrow labeled **2** points to the locking mechanism, which is a Nordrive lock. The lock is shown in the "Opened" position, and the bar is shown in the "Locked" position.

Opened **Lock** **Locked**


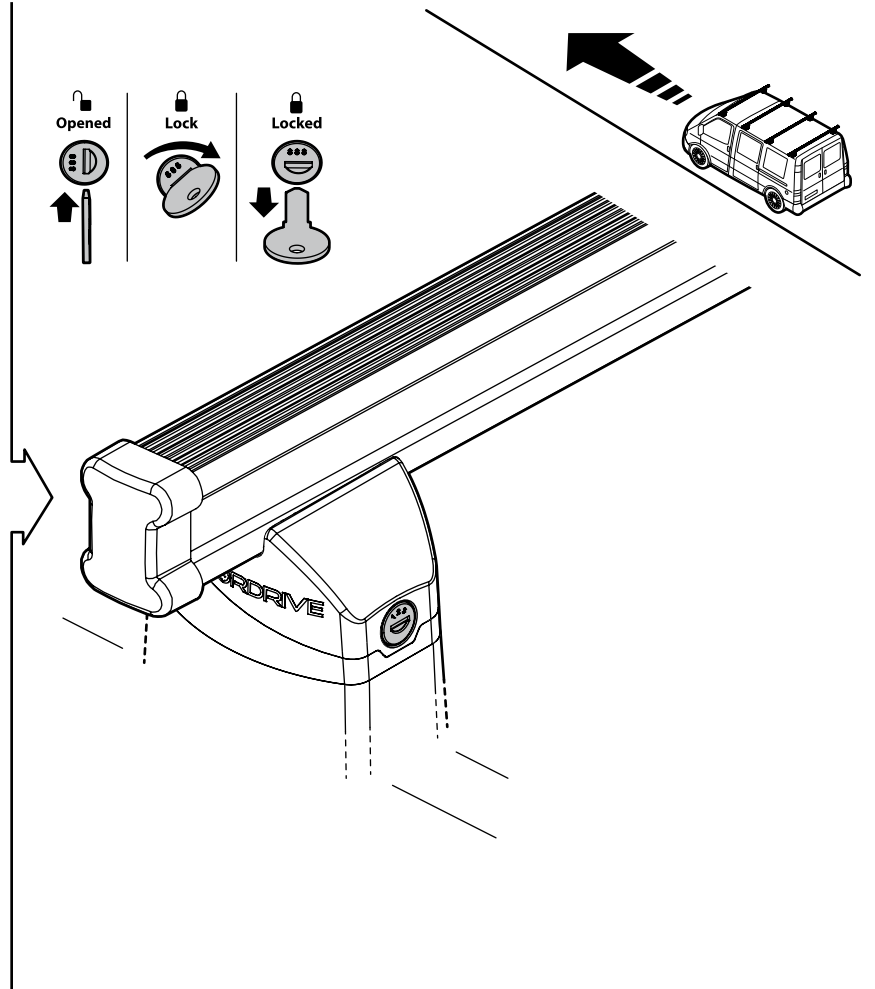


Diagram showing the Kargo-Plus bar locking mechanism. The bar is shown in the "Locked" position. A key is used to unlock the bar, and the bar is shown in the "Opened" position. An inset diagram shows a van with the bar installed on its roof.

Kargo series




Acciaio / Steel

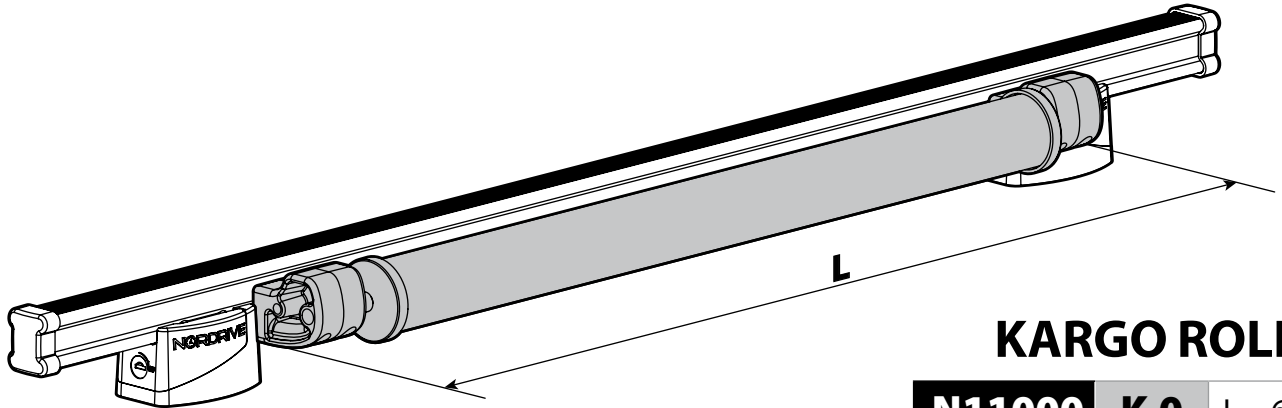


KARGO ROLLER

N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm

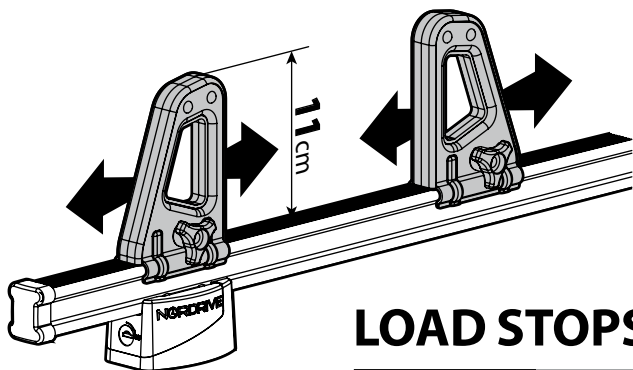


LOAD STOPS

N11001 K-1

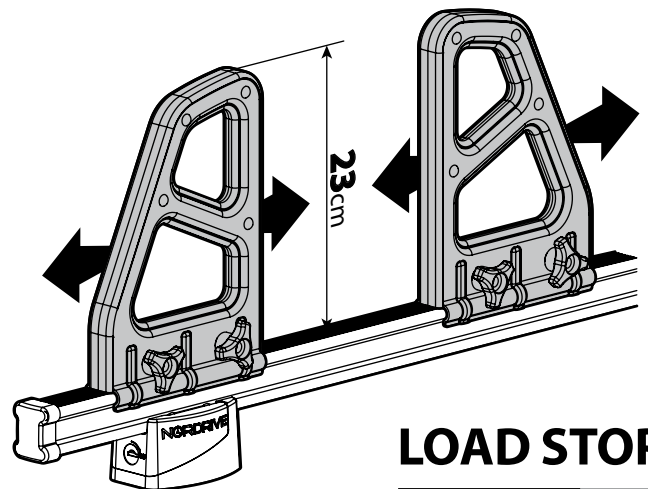

LOAD STOPS

N11002 K-2

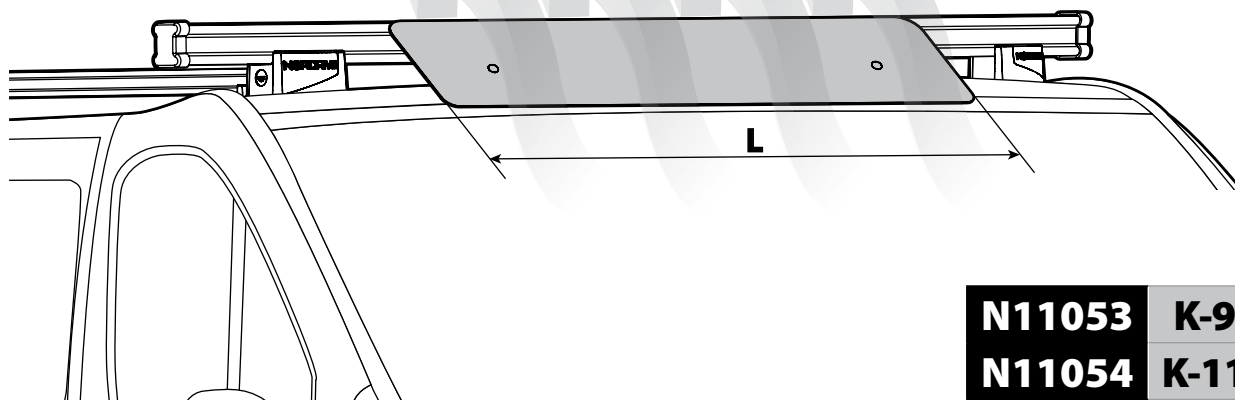


SPOILER


N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo-Plus series

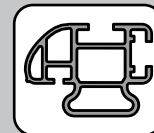



Alluminio / Aluminium

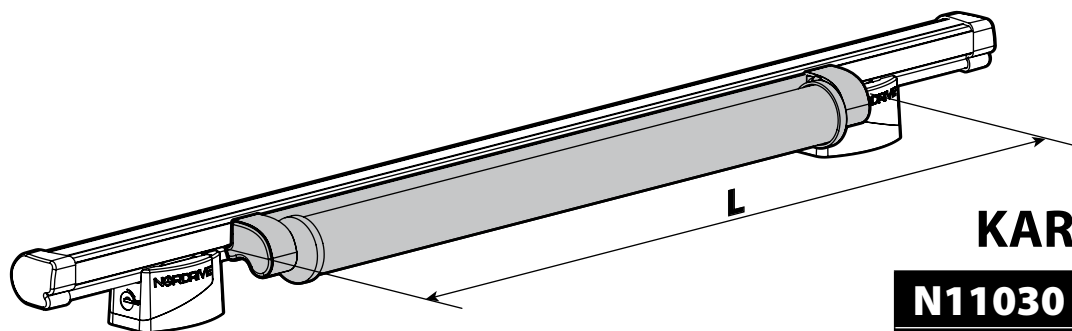

KARGO ROLLER


N11030 KP-0 L = 64 cm

N11034 KP-7 L = 96 cm

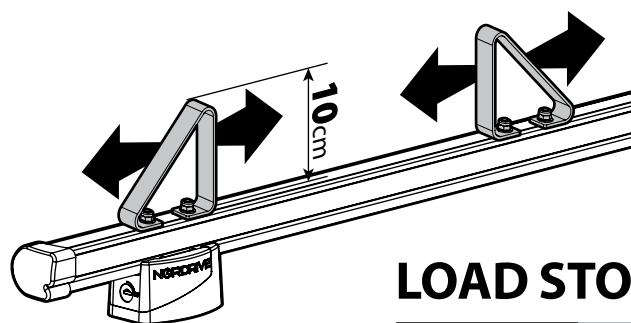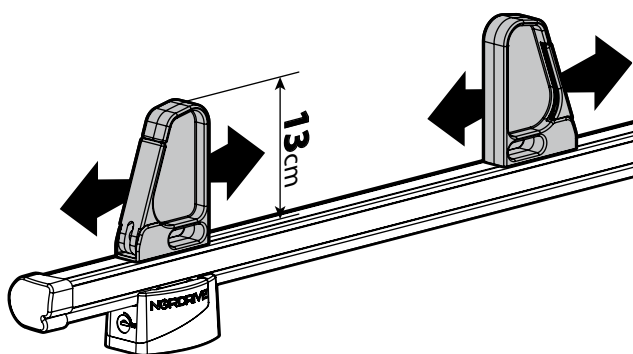


LOAD STOPS

N11031 KP-1

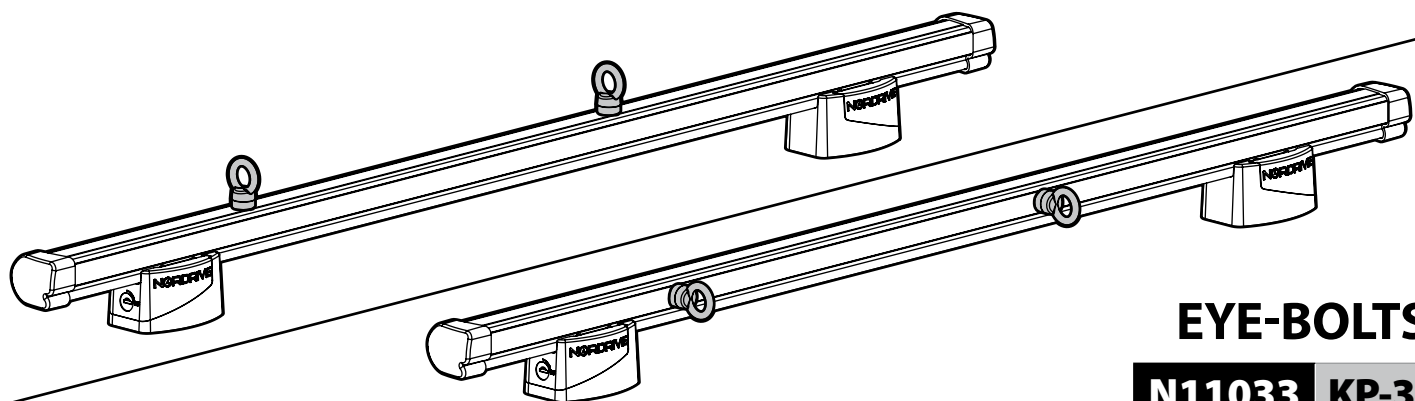

EYE-BOLTS

N11033 KP-3

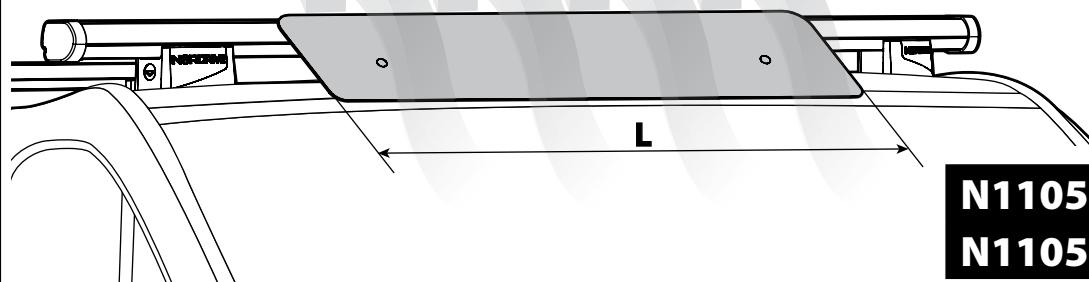

SPOILER

N11057 KP-9 L = 95 cm

N11058 KP-11 L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo series



Acciaio / Steel


Kargo-Plus
series



Alluminio / Aluminium



KARGO-TUBE

N11050	T200	L = 205 cm
N11051	T300	L = 305 cm
N11052	T400	L = 405 cm

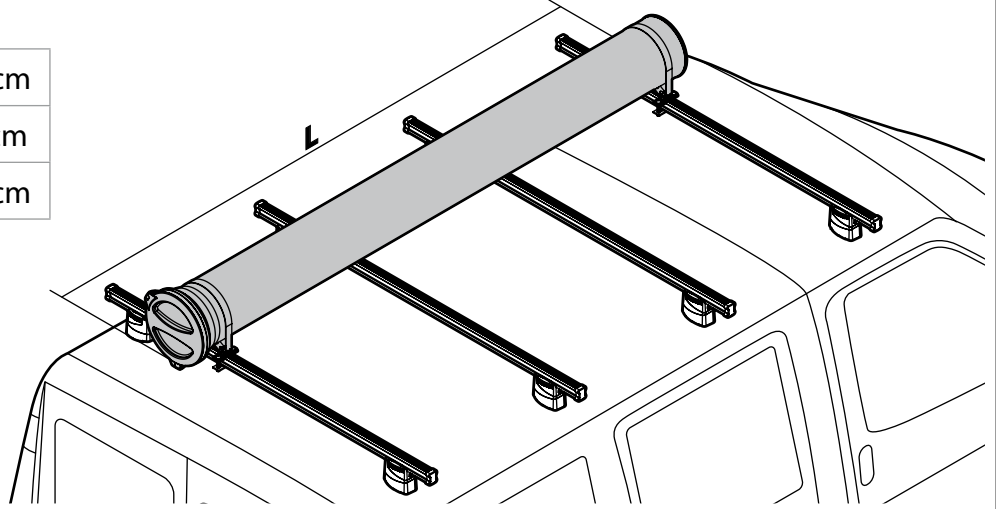


LADDER HOLDER STRAPS

N11065 U-5

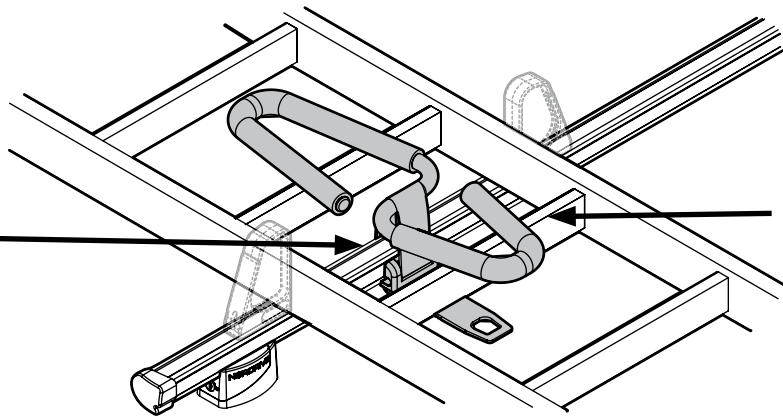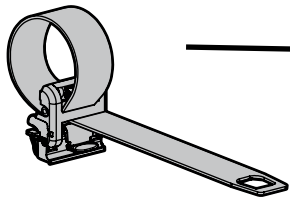


LADDER STEP ADAPTER

N11067 U-6

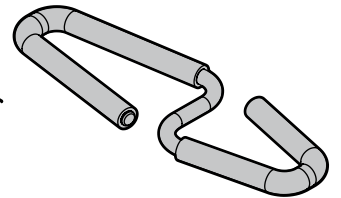

EXTENSION ROLLER

N11020	U-0	L = 64 cm
N11021	U-7	L = 96 cm

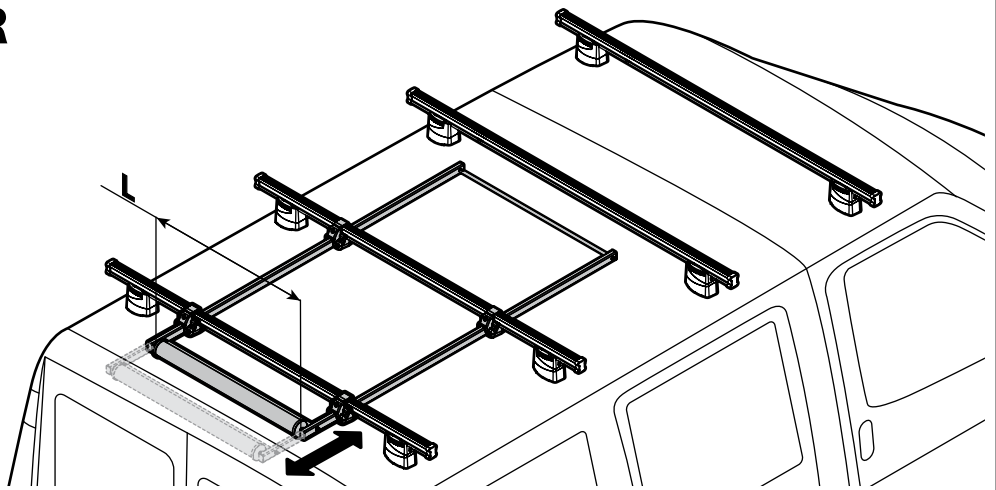

- (I) Lotto di produzione da comunicare per eventuali ricambi
- (GB) Production lot number to be communicated for any spare parts
- (F) Lot de production à communiquer pour toute pièce de rechange
- (D) Produktionscharge für eventuelle Ersatzteile
- (E) Lote de producción a comunicar por cualquier repuesto

Lot.

NORDRIVE®
TRANSPORT SOLUTIONS

NORDRIVE® is a registered trademark of
LAMPA S.p.A.
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY
Tel. +39 0375 820700
UNI EN ISO 9001:2008 Certified Company
www.nordrive.it
www.lampa.it