



Art. **N30414**



**VOLKSWAGEN CADDY
MAXI**



**VOLKSWAGEN CADDY
MAXI LIFE**




KIT x8

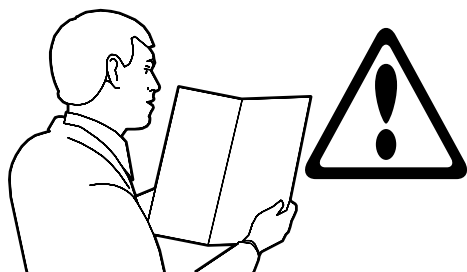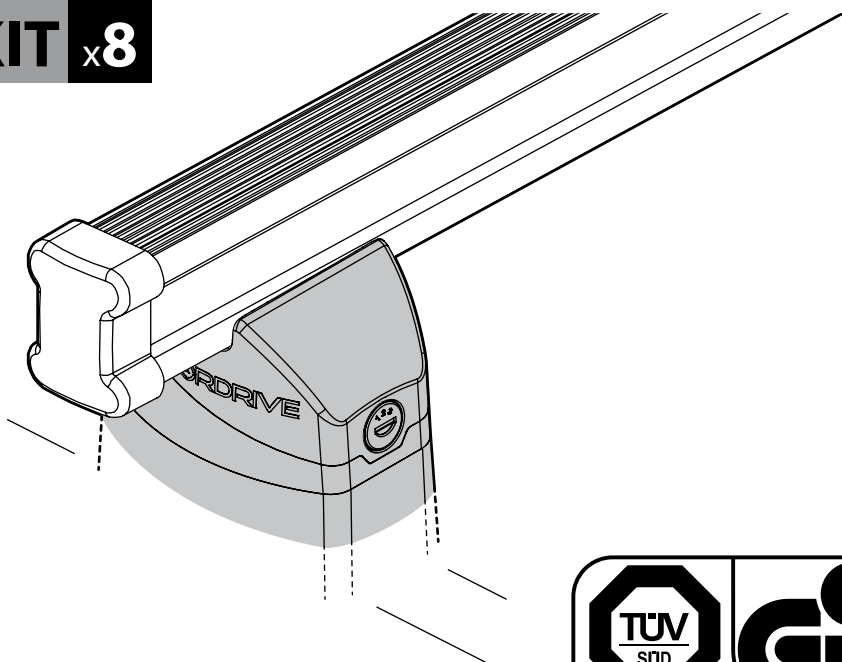

- ① ADATTO PER
- Ⓒ SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA

**NORDRIVE
KARGO SERIES**


- ① ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓗ MONTAGE-INSTRUCTIES
- Ⓒ MONTERINGSANVISNING
- Ⓕ ASENNUSOHJE
- Ⓔ PAIGALDUSJUHEND
- Ⓗ STIPRINĀŠANAS INSTRUKCIJA
- Ⓕ PRITVIRTINIMO INSTRUKCIJOS
- Ⓖ INSTRUKCJA MONTAŻU
- Ⓕ Инструкции по установке
- Ⓕ NÁVOD NA MONTÁŽ
- Ⓕ NÁVOD NA MONTÁŽ
- Ⓕ NAVODILA ZA PRITRJEVANJE
- Ⓕ UPUTA ZA SASTAVLJANJE
- Ⓕ A FELSZERELÉS MÓDJA
- Ⓕ Οδηγίες συναρμολόγησης
- Ⓕ MONTAJ TALIMATLARL
- Ⓕ ИНСТРУКЦИИ ЗА МОНТАЖ
- Ⓕ UPUTSTVA ZA MONTAŽU

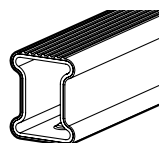


Kargo
ACCIAIO
Steel

- ① BARRE KARGO
- Ⓒ KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO

150cm

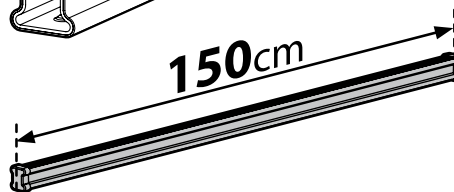


Art. **N10010** x4

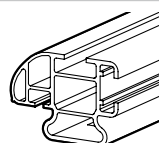


Kargo-Plus
ALLUMINIO
Aluminium

- ① BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS

150cm

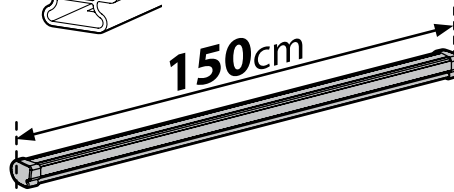


Art. **N10040** x4

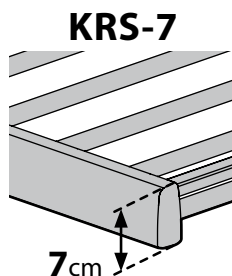

KRS-7

7cm

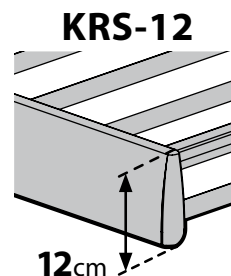


KRS-12

12cm

- ① CESTE PORTATUTTO KRS-7 / KRS-12
- Ⓒ KRS-7 / KRS-12 VAN ROOF RACKS
- Ⓕ GALERIE KRS-7 / KRS-12
- Ⓓ DACHKÖRBEIN KRS-7 / KRS-12
- Ⓔ BACAS KRS-7 / KRS-12

NORDRIVE[®]





TRANSPORT SOLUTIONS

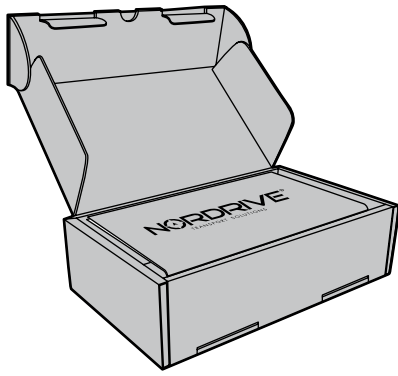










NORDRIVE[®]












TRANSPORT SOLUTIONS



Art. **N30414**

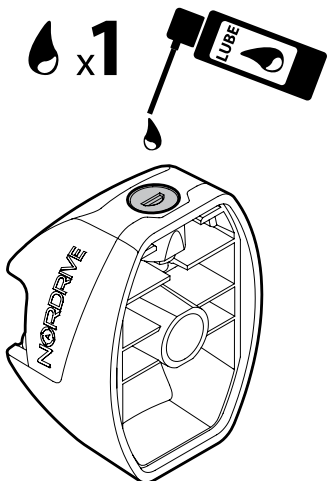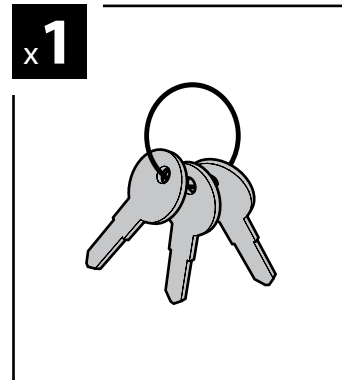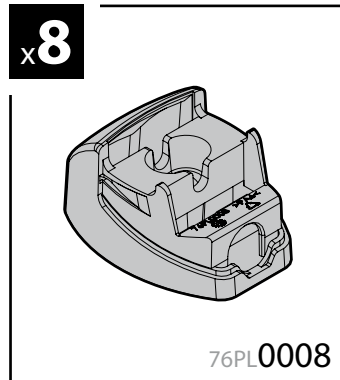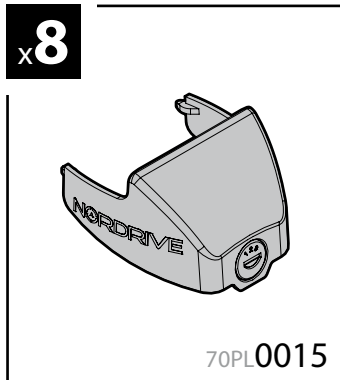

1 x Year

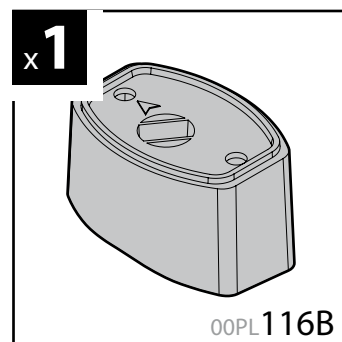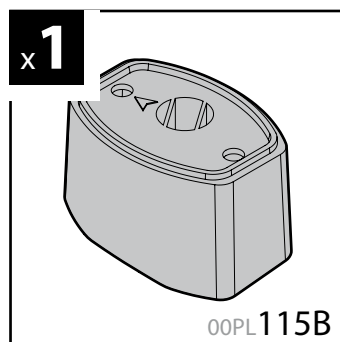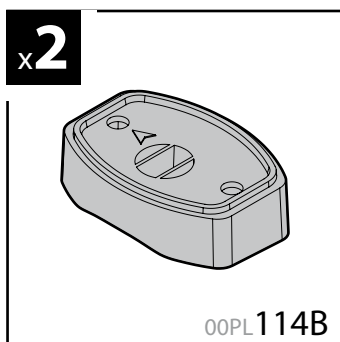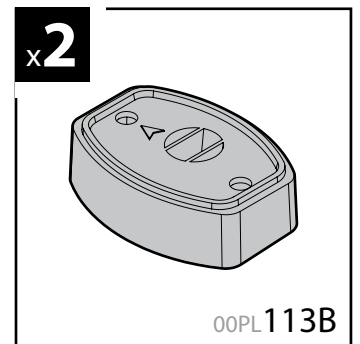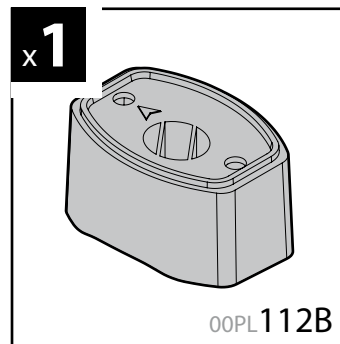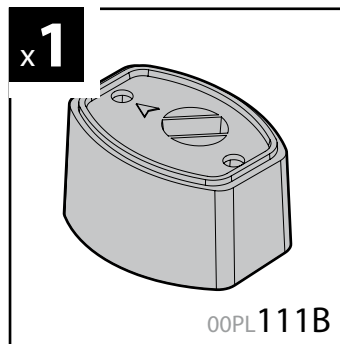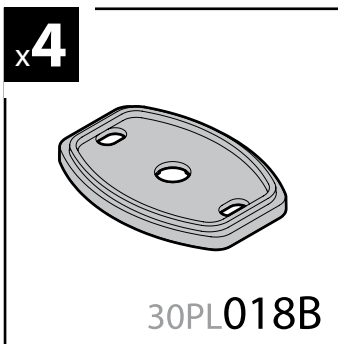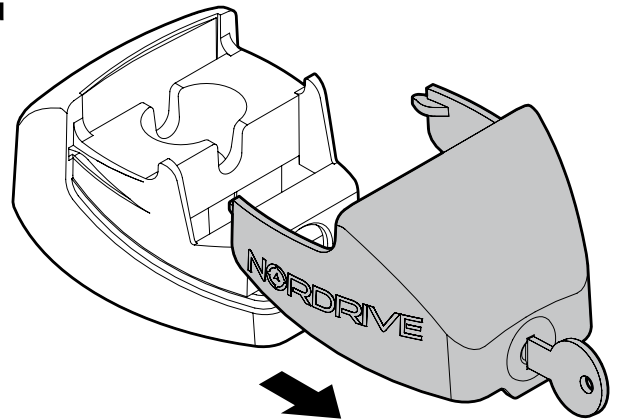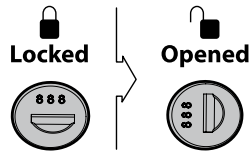

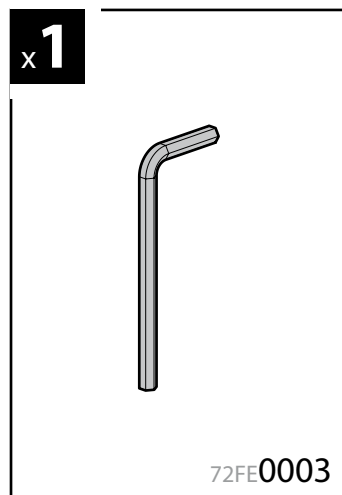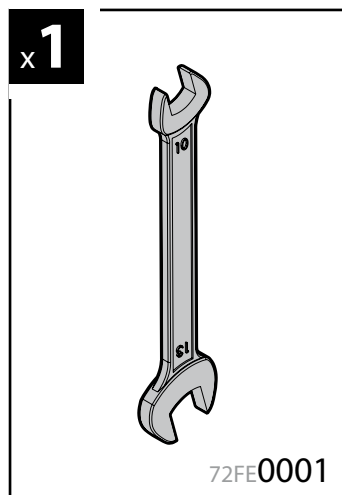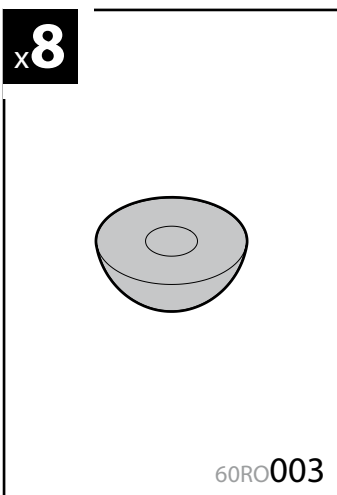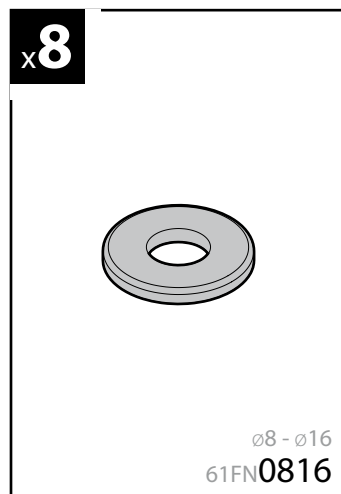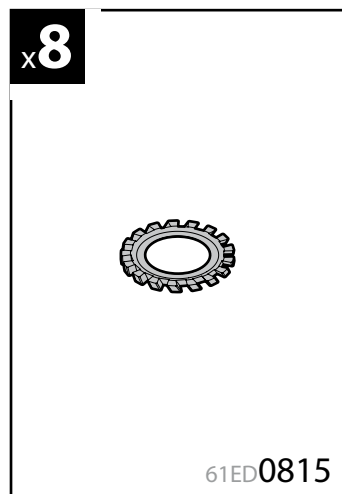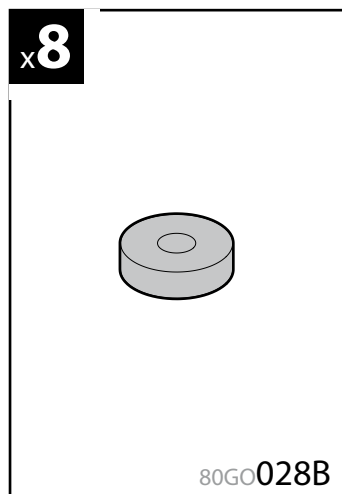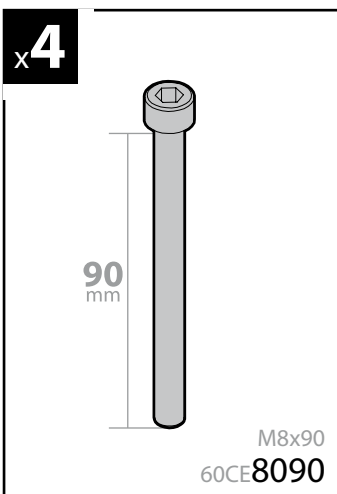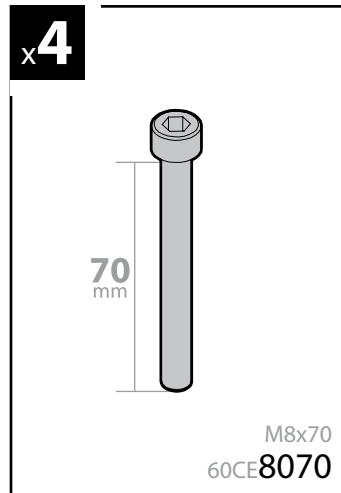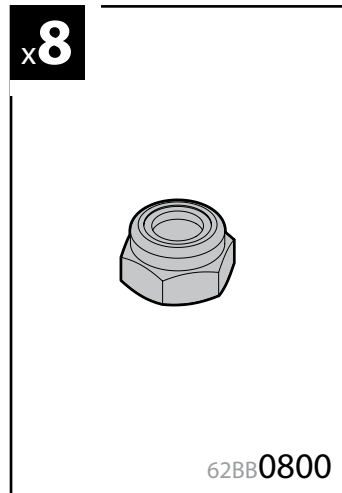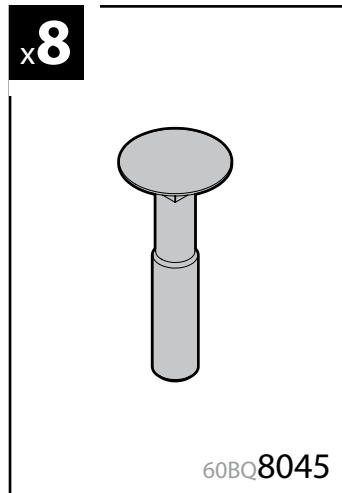
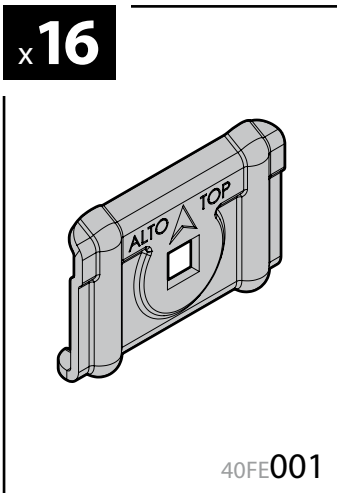


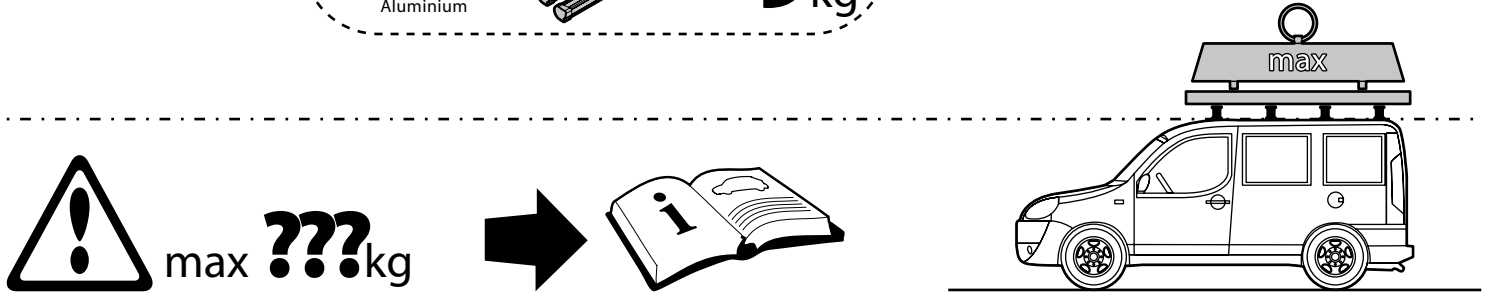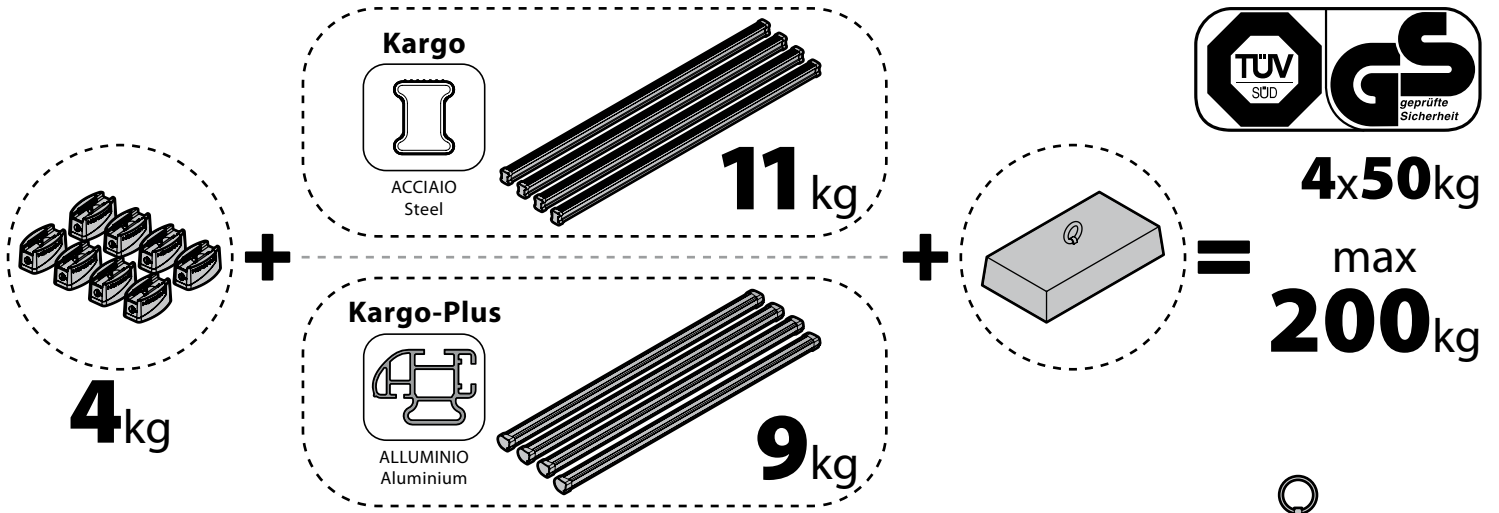

SAFETY REGULATIONS

Safety regulations

NORME DI SICUREZZA

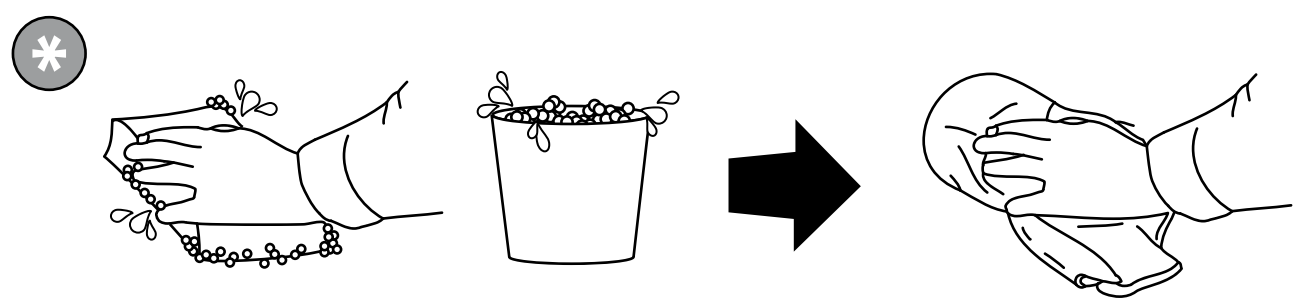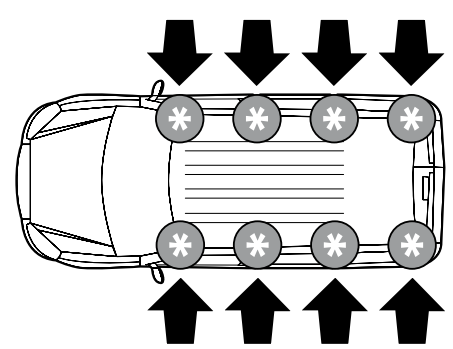


(I) ISTRUZIONI DI MONTAGGIO
 (GB) FITTING INSTRUCTIONS
 (D) MONTAGEANLEITUNG
 (F) INSTRUCTIONS DE MONTAGE
 (E) INSTRUCCIONES DE MONTAJE
 (P) INSTRUÇÕES DE MONTAGEM
 (NL) MONTAGE-INSTRUCTIES
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE
 (EST) PAIGALDUSJUHEND
 (LAT) STIPRINĀŠANAS INSTRUKCIJA
 (LT) PRITVIRTINIMO INSTRUKCIJOS
 (PL) INSTRUKCJA MONTAŻU
 (RUS) Инструкции по установке
 (CZ) NÁVOD NA MONTÁŽ
 (SK) NÁVOD NA MONTÁŽ


(SLO) NAVODILA ZA PRITRJEVANJE
 (HR) UPUTA ZA SASTAVLJANJE
 (H) A FELSZERELÉS MÓDJA
 (GR) Οδηγίες συναρμολόγησης
 (TR) MONTAJ TALIMATLARI
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
 (SRB) UPUTSTVA ZA MONTAŽU

1

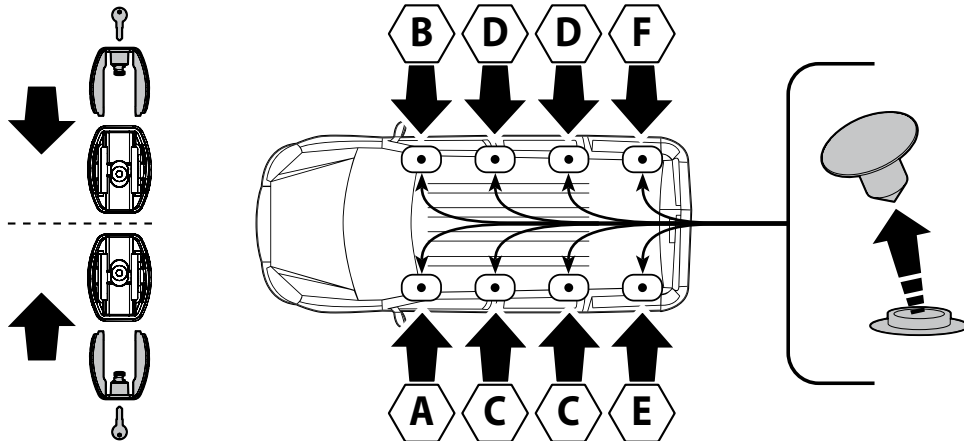


2

A

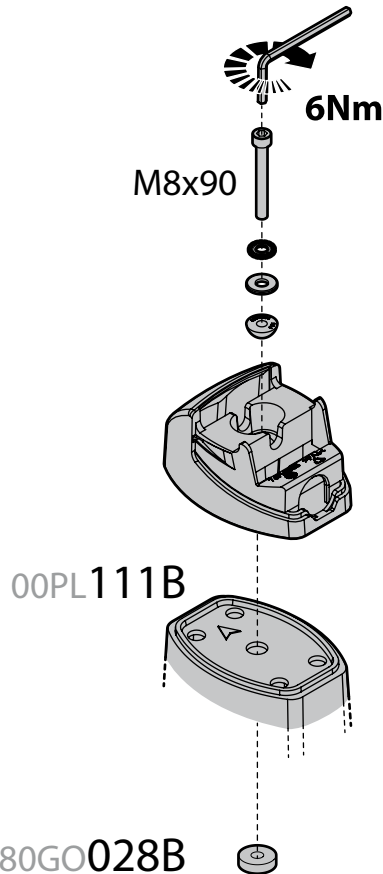


2

B

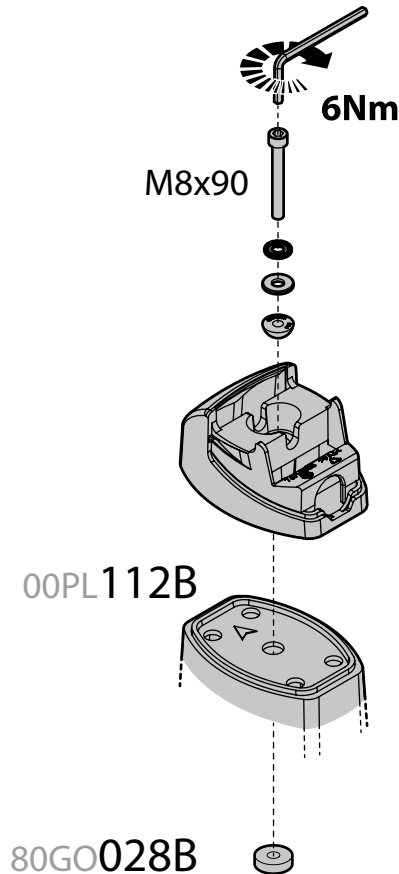


2

C

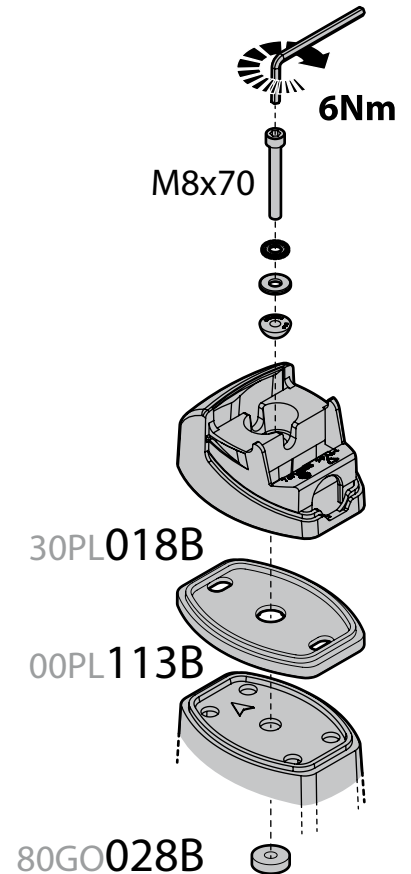


2

D

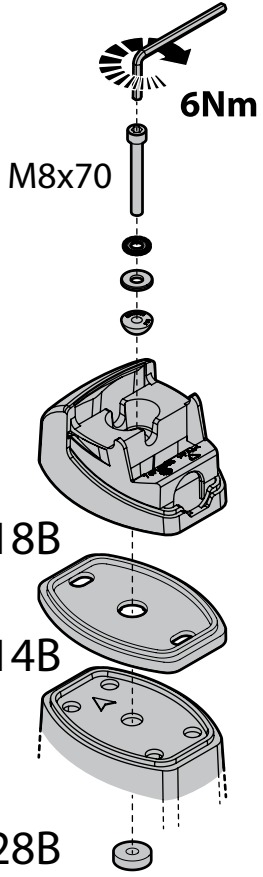


2

E

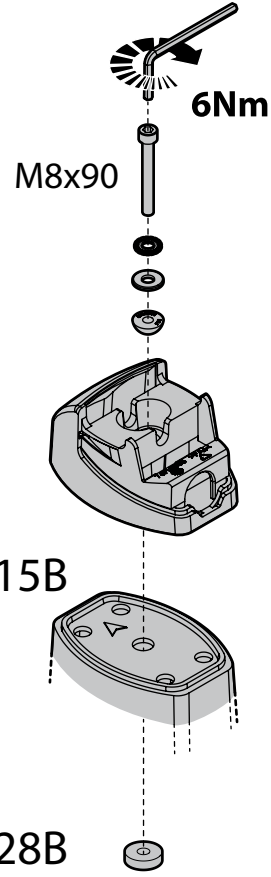

2

F

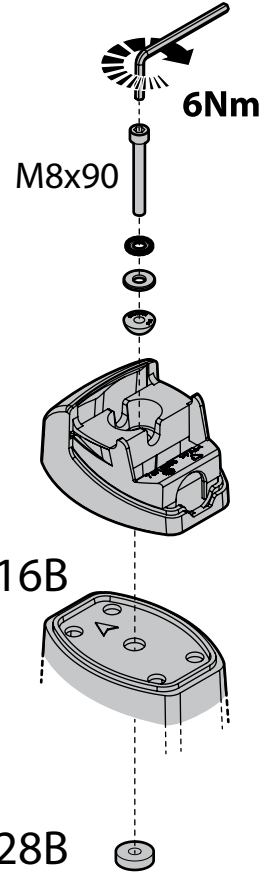




ATTENZIONE WARNING



Kargo

A

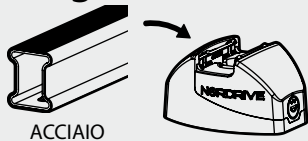


ACCIAIO
Steel

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE













Kargo-Plus

B




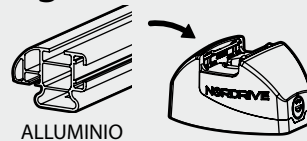


ALLUMINIO
Aluminium





MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

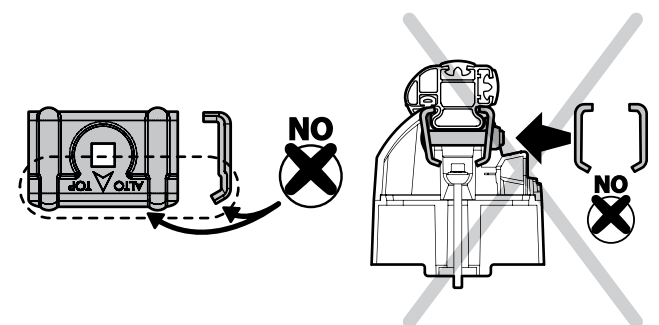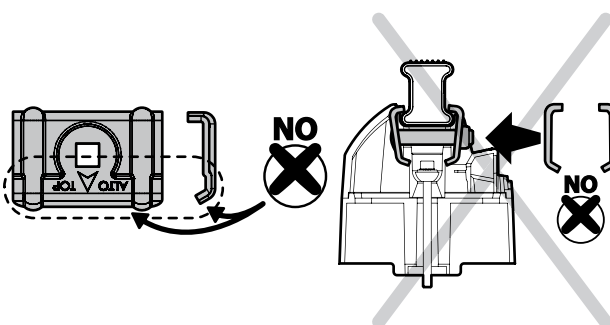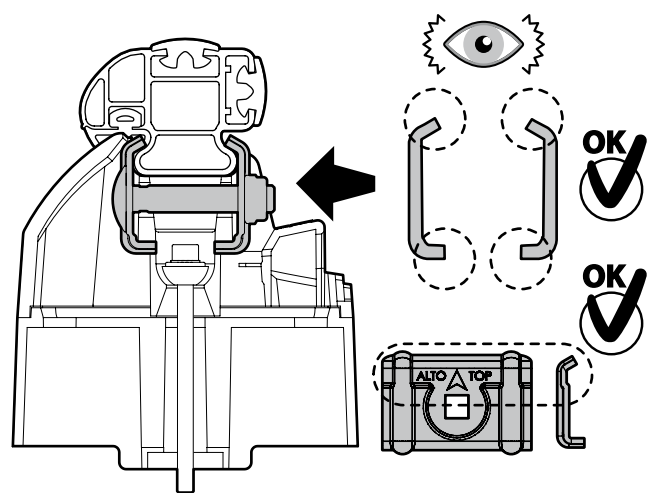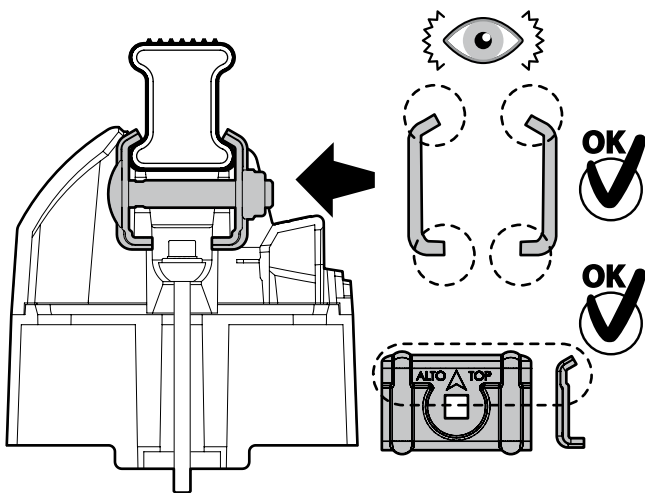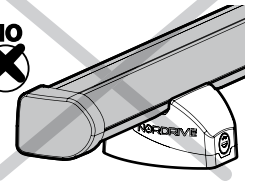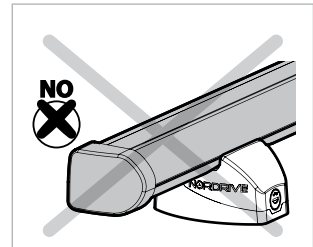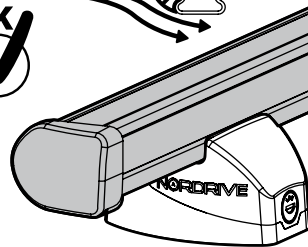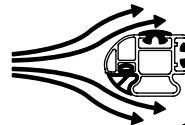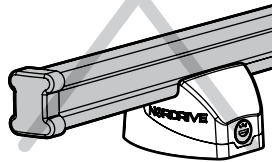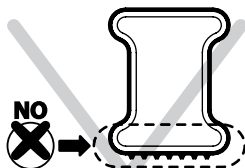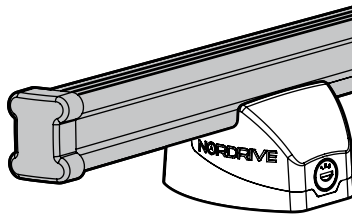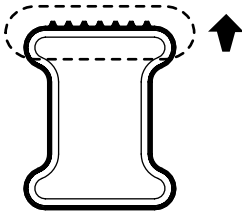

3

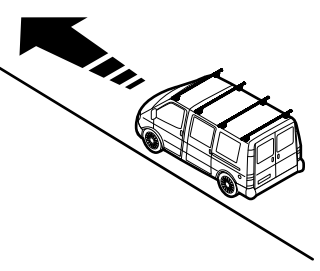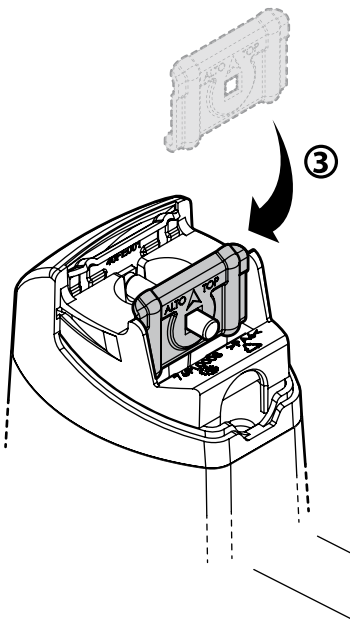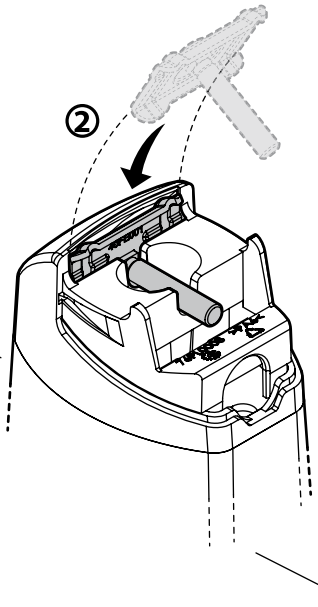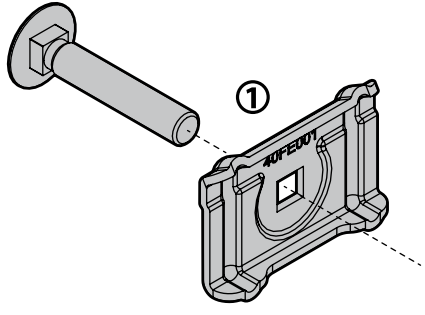


4

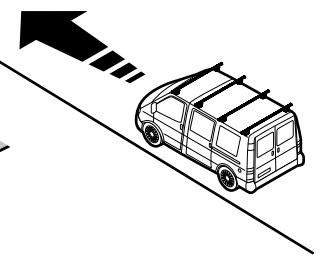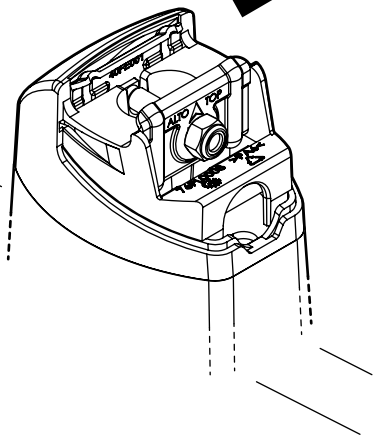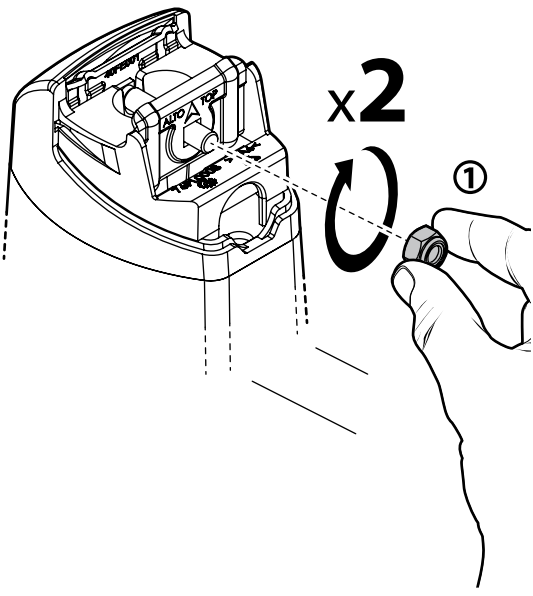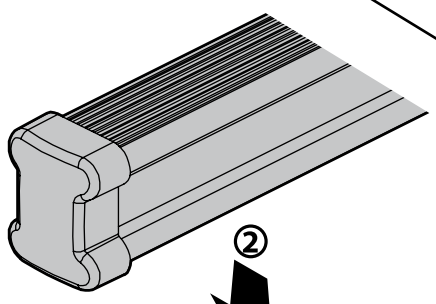


5

A

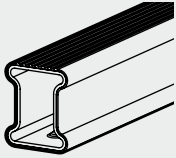

Kargo



ACCIAIO
Steel


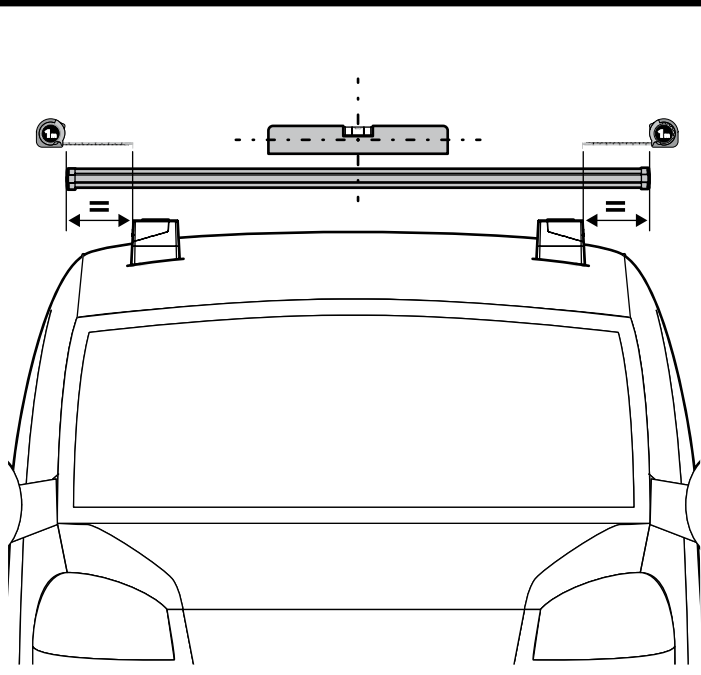



Diagram showing the Kargo steel bar being installed on a car roof. The bar is shown being slid into the roof rails. The diagram includes dashed lines and arrows indicating the correct placement and alignment of the bar.

B



Kargo-Plus

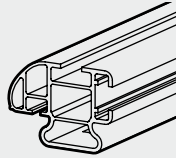

ALLUMINIO
Aluminium

①

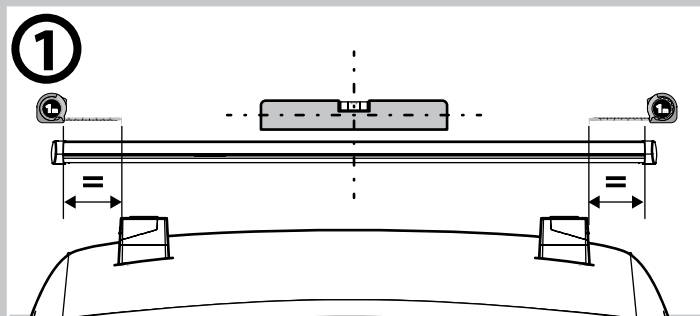


Diagram 1 shows the Kargo-Plus aluminium bar being inserted into the roof rails. The bar has a specific cross-section designed for a secure fit. Dashed lines and arrows indicate the correct alignment.

②

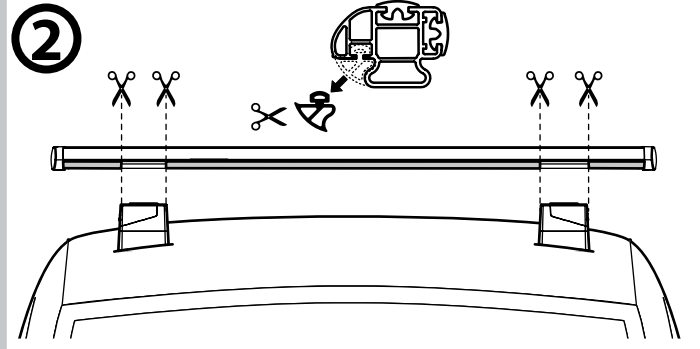


Diagram 2 shows the locking mechanism of the Kargo-Plus bar. A key is used to lock the bar into the roof rails. The diagram includes scissors and arrows indicating the correct way to use the key to engage the locking mechanism.

6

① **8Nm**

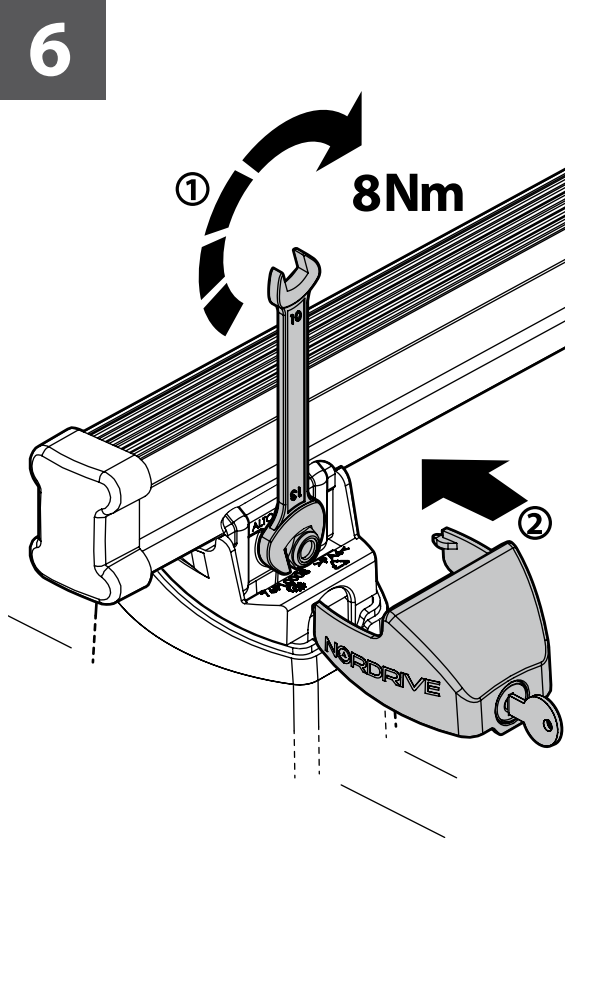


Diagram 1 shows a wrench being used to tighten the bar. A curved arrow indicates the direction of rotation. The text "8Nm" specifies the required torque. A second arrow labeled "2" points to the next step.

②

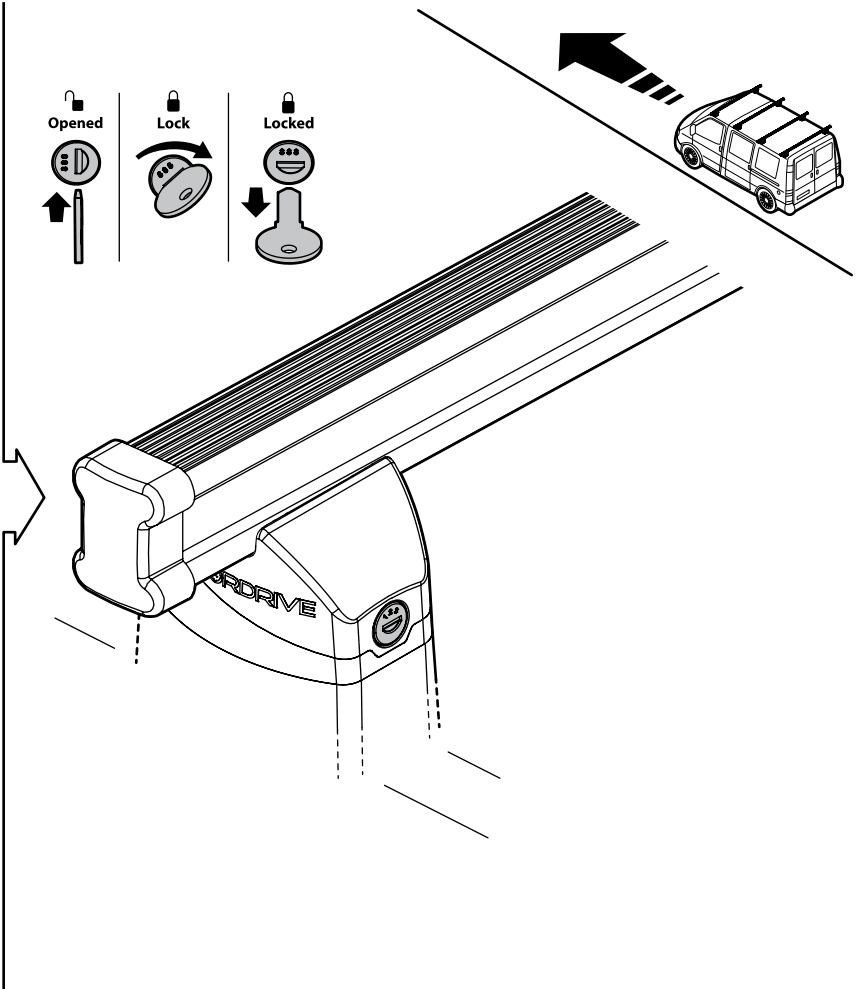


Diagram 2 shows the bar being locked. A key is inserted into the lock mechanism. The diagram includes a legend for the lock status:

- Opened: Key is inserted, lock is open.
- Lock: Key is inserted, lock is engaged.
- Locked: Key is removed, lock is engaged.


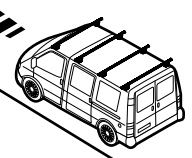


Diagram showing a car with the Kargo-Plus bar installed on the roof. An arrow points to the right, indicating the direction of travel.

Kargo series




Acciaio / Steel

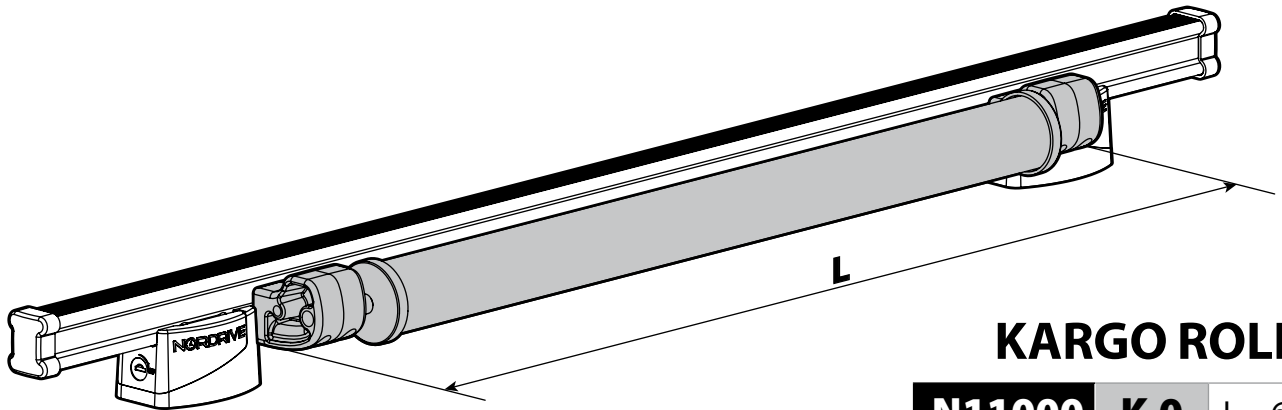


KARGO ROLLER

N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm

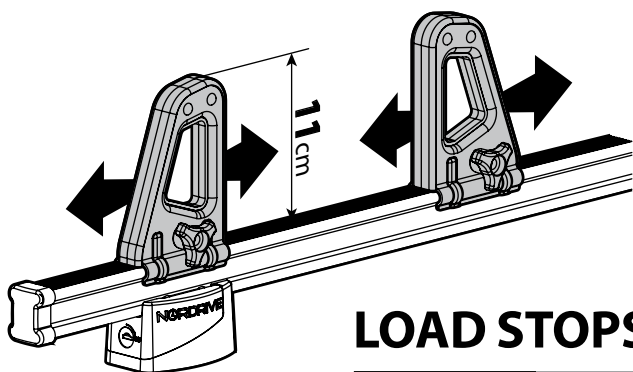


LOAD STOPS

N11001 K-1

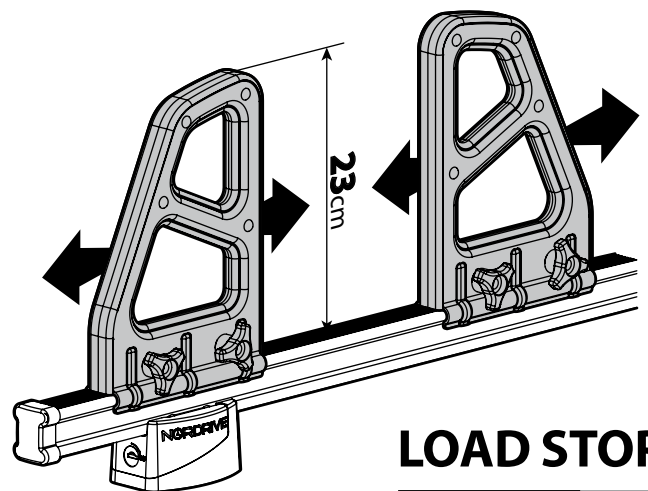

LOAD STOPS

N11002 K-2

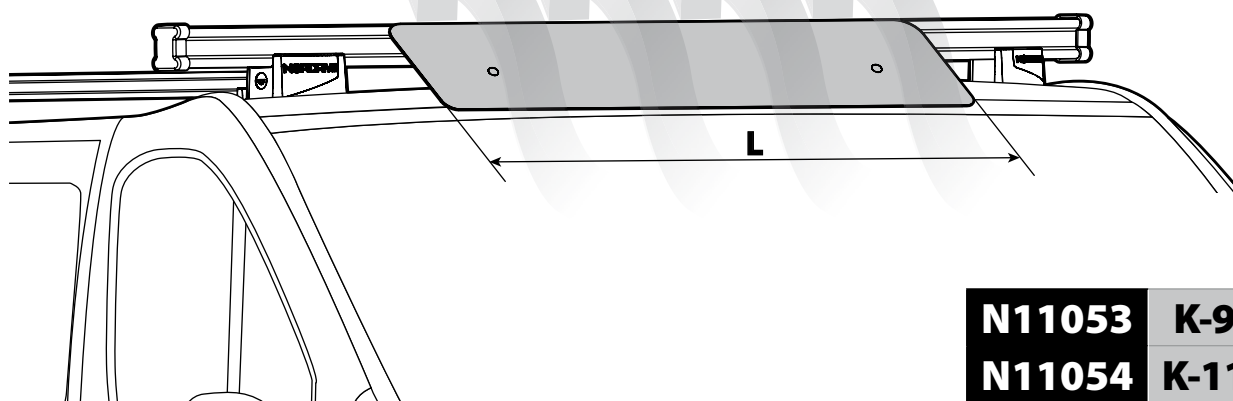


SPOILER


N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo-Plus series


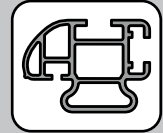


Alluminio / Aluminium

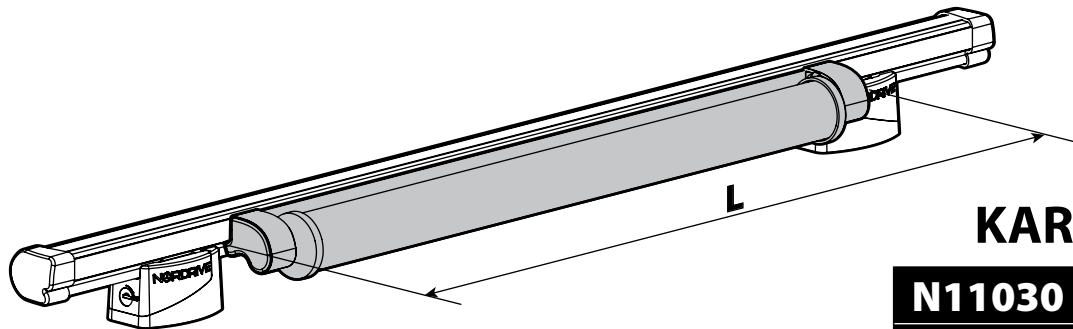


KARGO ROLLER

N11030	KP-0	L = 64 cm
N11034	KP-7	L = 96 cm

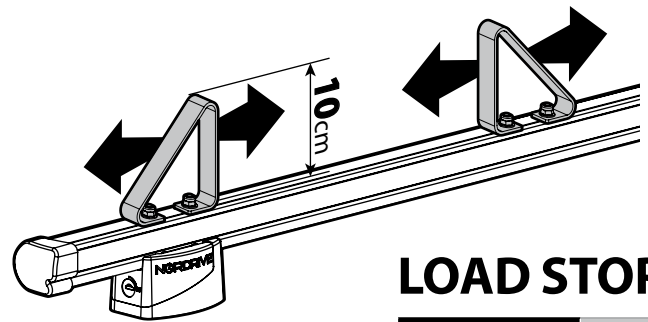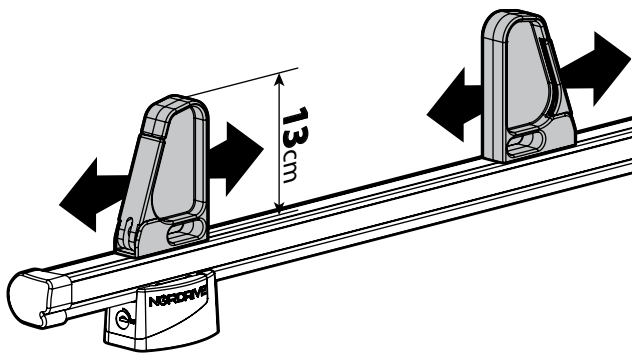


LOAD STOPS

N11031 KP-1

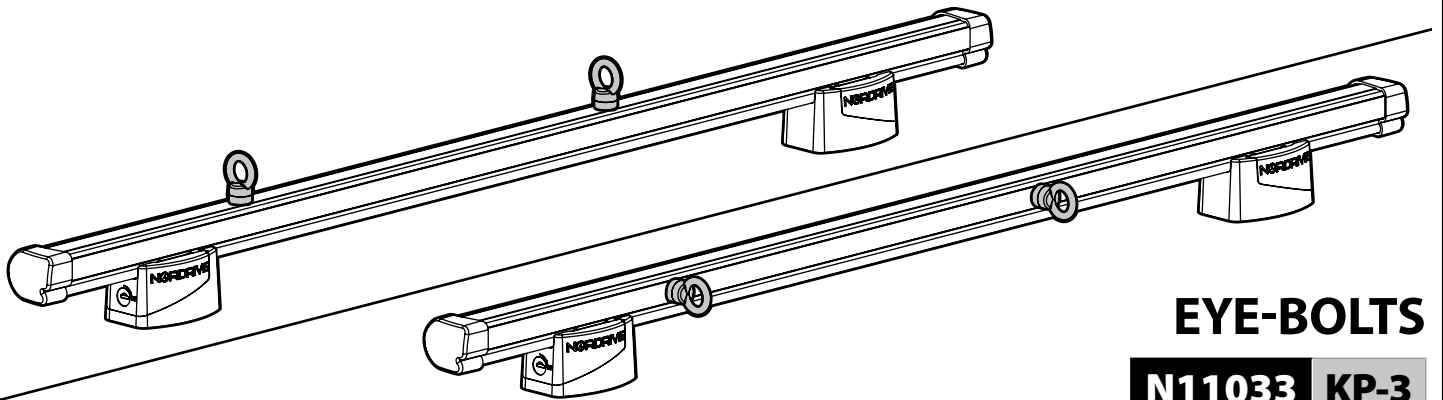

EYE-BOLTS

N11033 KP-3

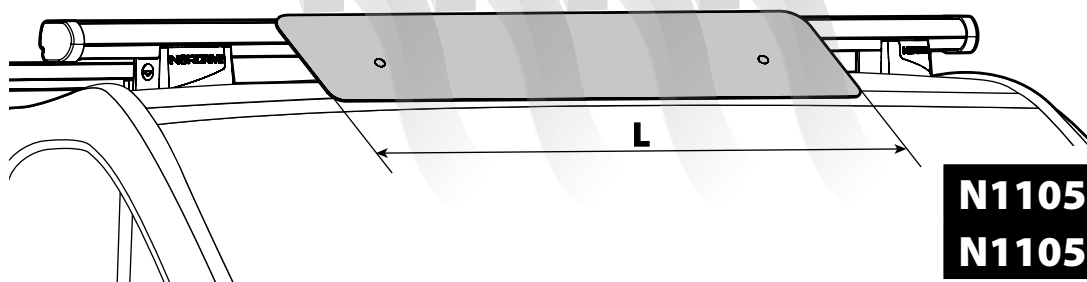

SPOILER

N11057	KP-9	L = 95 cm
N11058	KP-11	L = 110 cm


OPTIONALS PER / FOR / FÜR:

Kargo series



Acciaio / Steel


Kargo-Plus
series

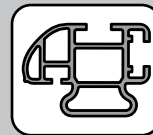

Alluminio / Aluminium



KARGO-TUBE

N11050	T200	L = 205 cm
N11051	T300	L = 305 cm
N11052	T400	L = 405 cm

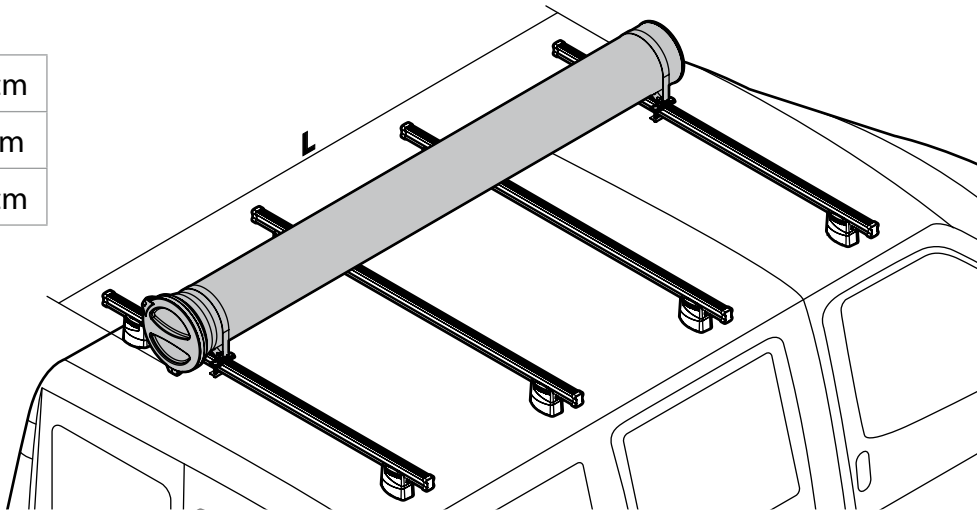


LADDER HOLDER STRAPS

N11065 U-5

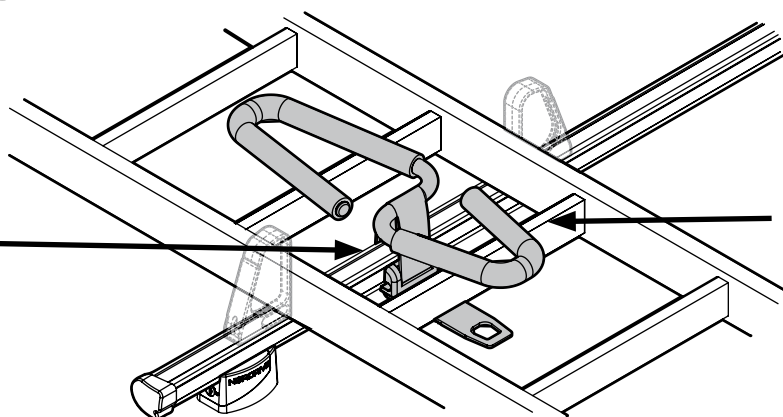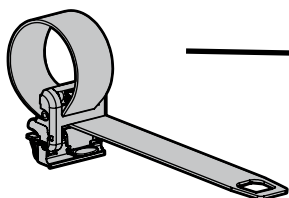


LADDER STEP ADAPTER

N11067 U-6

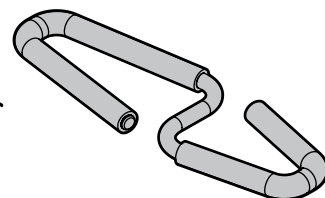

EXTENSION ROLLER

N11020	U-0	L = 64 cm
N11021	U-7	L = 96 cm

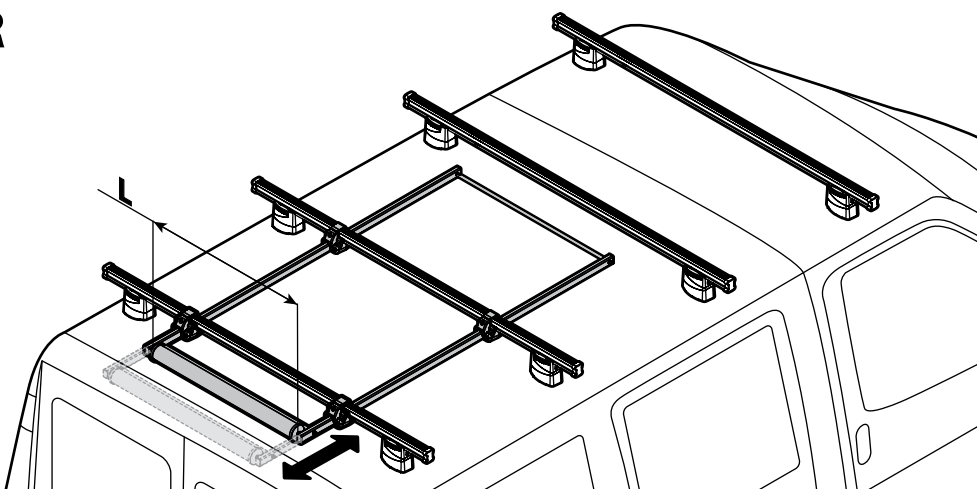

- (I) Lotto di produzione da comunicare per eventuali ricambi
- (GB) Production lot number to be communicated for any spare parts
- (F) Lot de production à communiquer pour toute pièce de rechange
- (D) Produktionscharge für eventuelle Ersatzteile
- (E) Lote de producción a comunicar por cualquier repuesto

Lot.

NORDRIVE®
TRANSPORT SOLUTIONS

NORDRIVE® is a registered trademark of
LAMPA S.p.A.
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY
Tel. +39 0375 820700
UNI EN ISO 9001:2008 Certified Company
www.nordrive.it
www.lampa.it