






# TC3PR/FL KammBar

## Instructions

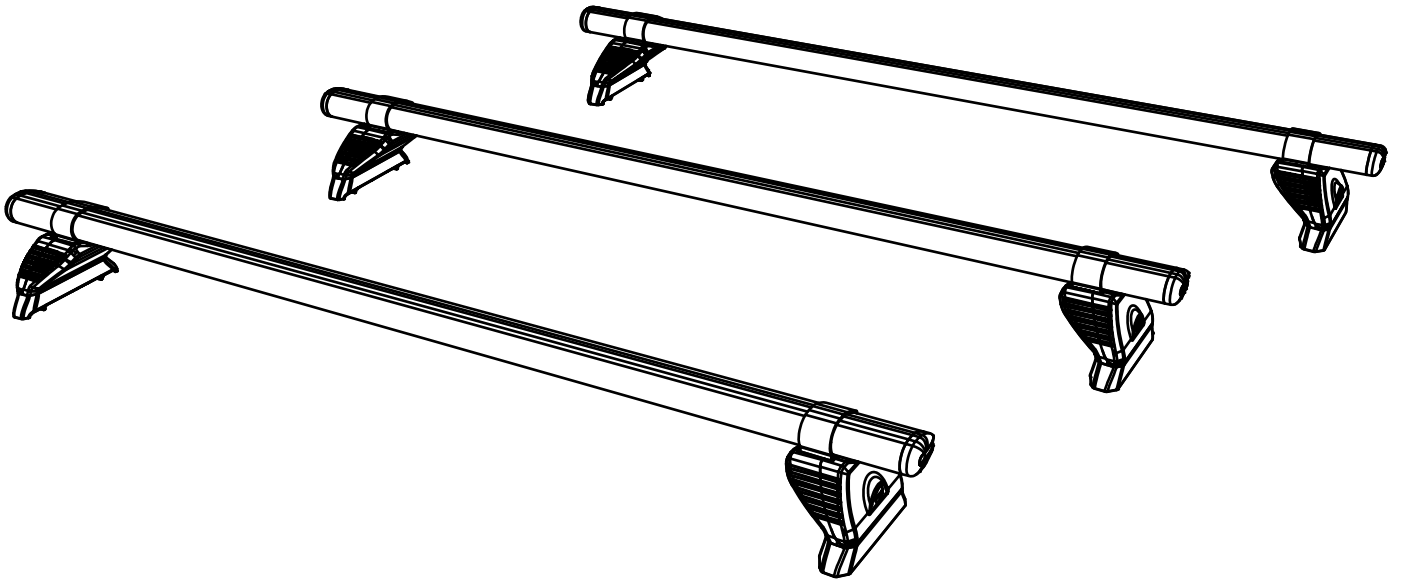


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

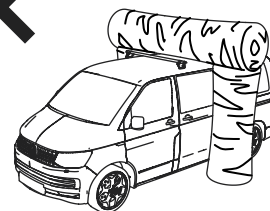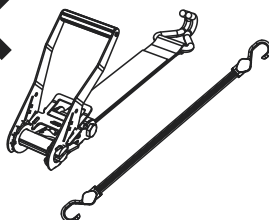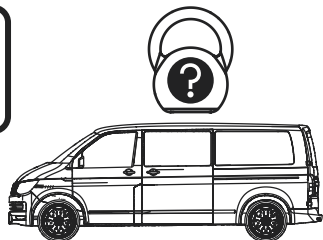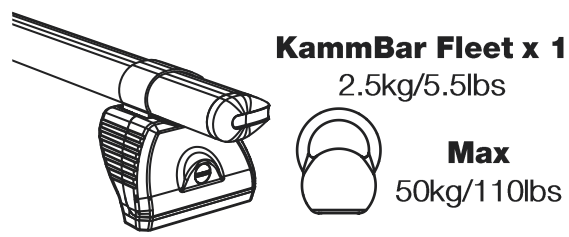


## KammBar Pro

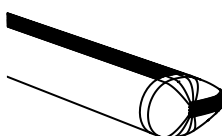


SA421 x 3 ☐



SA070 x 4 ☐

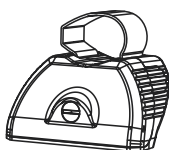


SA397 x 3 ☐

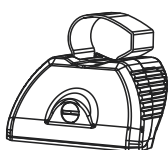


SA398 x 3 ☐


## KammBar Fleet

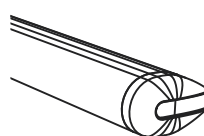


SA395 x 3 ☐



**C04 x 3**  
\*optional upgrade\*

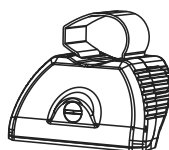


SA397 x 3 ☐

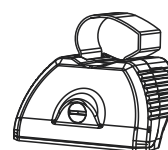


SA398 x 3 ☐


## Fitting Kit



PS183 x 6 ☐




PS023 x 6 ☐

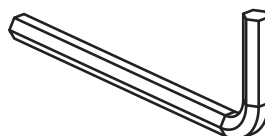


FT01 x 1 ☐



**FS081**  
**(M8 x 50)**  
x 6 ☐

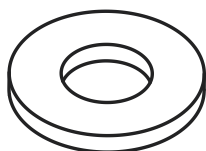


FW002 (M8) x 6 ☐

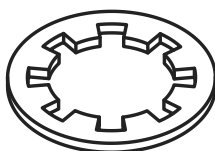


FW009 (M8) x 6 ☐


1.

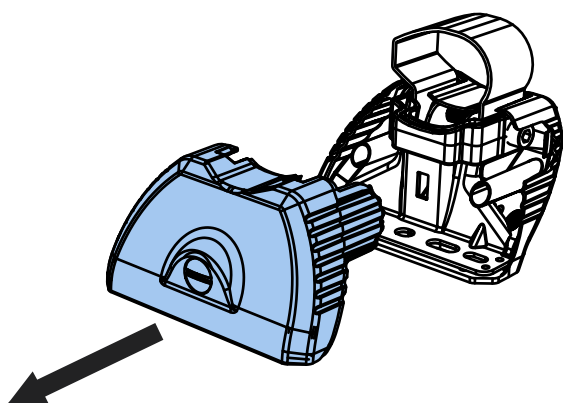


2.

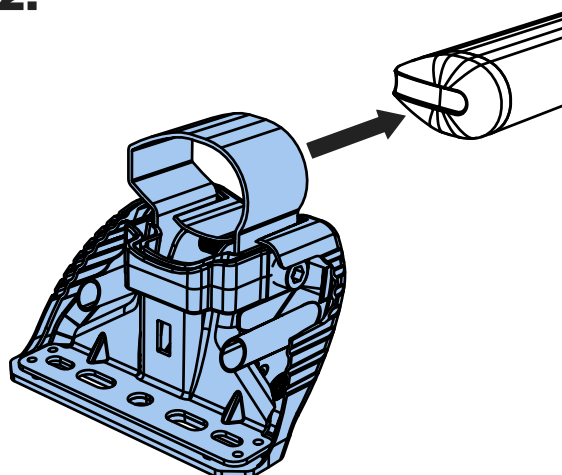


3.




**SA397**  
**PS183**




**SA397**  
**PS183**




**SA397**  
**PS183**

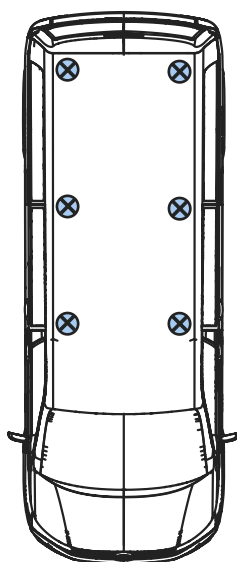


**SA398**  
**PS183**




**SA398**  
**PS183**




**SA398**  
**PS183**




4.

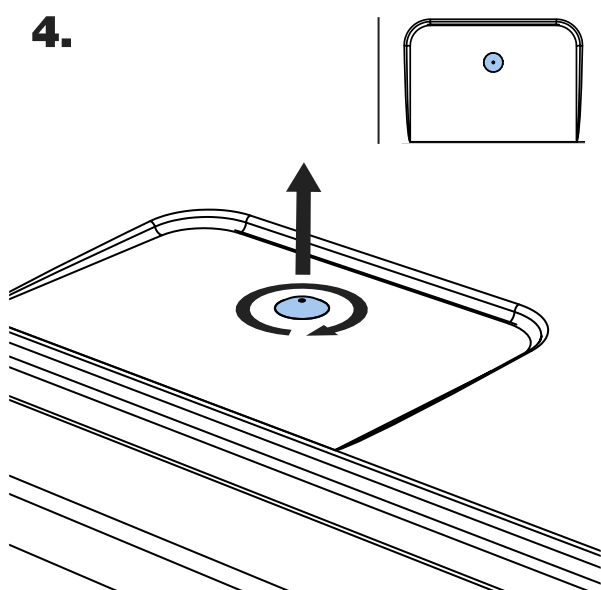


5.

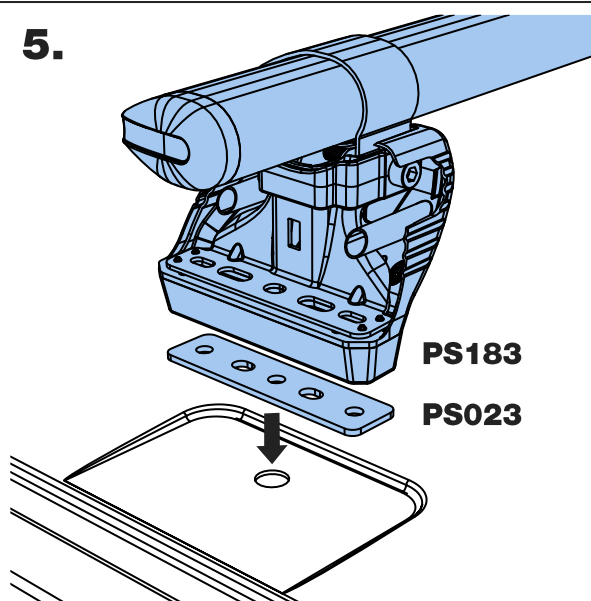


6.

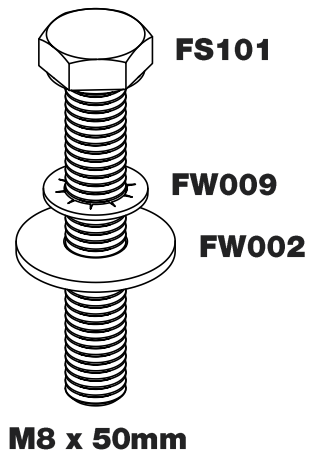


7.

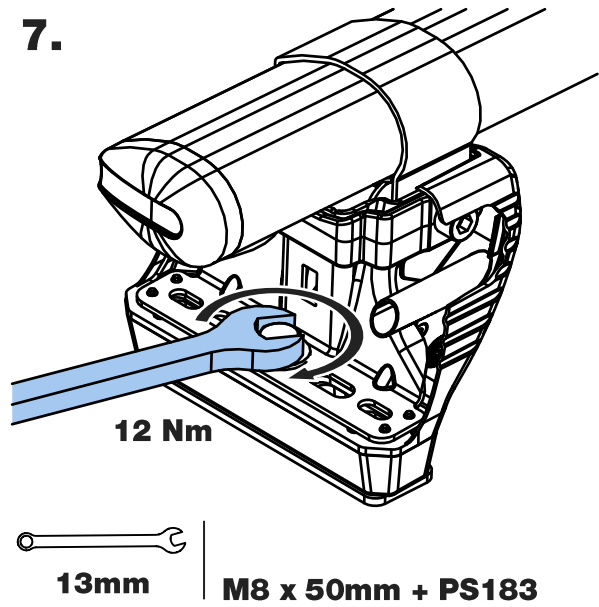


8.

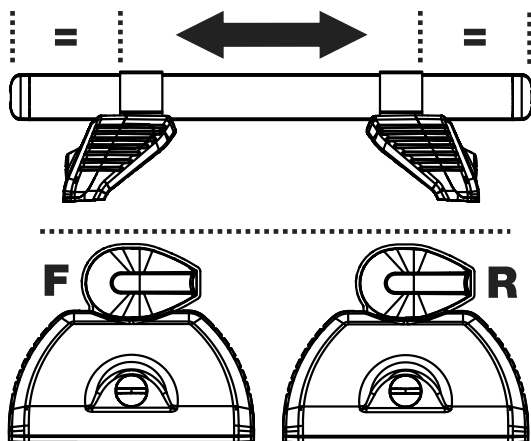

9.

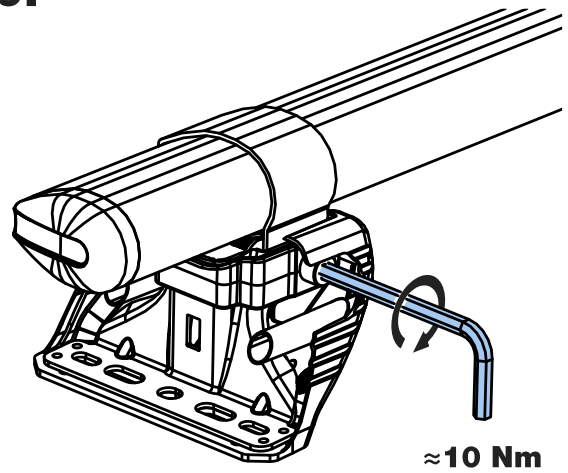

10.

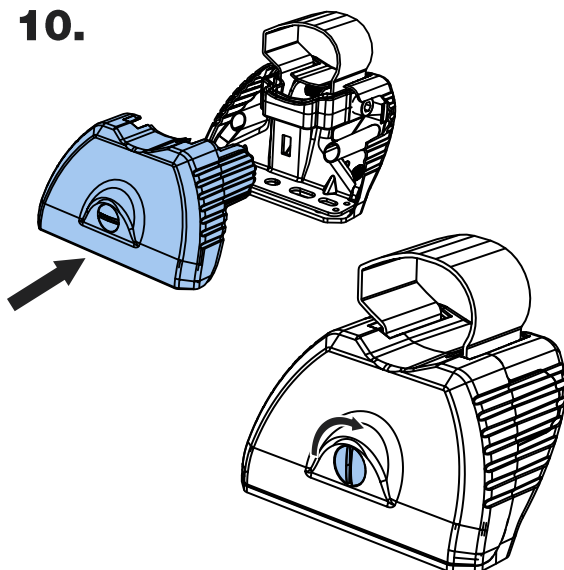

11.

